



# ELITE 4-BURNER PROPANE BARBECUE WITH A CONVERTIBLE VALVE SYSTEM

**Assembly Manual** 

085-3138-4 / G45325 1 YEAR LIMITED WARRANTY

#### READ AND SAVE MANUAL FOR FUTURE REFERENCE.

Assemble your grill immediately.

Missing or damaged parts claims must be submitted within 30 days of purchase date.

For product inquiries, parts, warranty and troubleshooting support, please call 1-855-453-2150.





#### **HEAVY ARTICLE: NEEDS 2 TO LIFT**

#### THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To order non-warranty replacement parts or accessories, or to register your warranty, please visit us remove at

#### www.masterchefbbgs.com

#### **A** CAUTION

Sharp edges. Wear gloves when assembling your grill.

#### **A** CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.



#### **INSTALLER OR ASSEMBLER/CONSUMER**

This manual should be kept with the barbecue at all times.



#### **WARNING**

Failure to follow all of the Manufacturer's instructions could result in hazardous fires. explosions, property damage, serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light A WARNING this barbecue without reading the Lighting Instructions section of this manual.



#### **A** DANGER

- 1. If you smell gas:
  - a. Shut off gas to the appliance.
  - b. Extinguish any open flame.
  - c. Open lid.
  - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.
- 2. Requires two people to complete the assembly process.
- 3. Beware of sharp edges.



#### **▲** WARNING

- 1. Do not store or use gasoline or other flammable liquids or vapours in the vicinity of this or any other appliance.
- 2. An LP cylinder not connected for use must not be stored in the vicinity of this or any other appliance.



IN DIRECT SUNLIGHT, AND IN OPERATION, YOUR BARBECUE'S STAINLESS STEEL AND PAINTED STEEL PARTS CAN BECOME VERY HOT.

THIS BARBECUE IS FOR OUTDOOR USE ONLY.

CONTACT CALL CENTER IF ANY PARTS ARE MISSING.

#### HARDWARE PACK

#### **TOOLS NEEDED FOR ASSEMBLY**

- #2 Star-head screwdriver (long and short)
- ¼" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

For correct hardware assembly, always position the lock washer between the screw and the flat



KEY#	DESCRIPTION	PART NUMBER	QUANTITY
1	1/4" - 20 UNC x 38 Screw	20120-13038-250	8
2	1/4" - 20 UNC x 18 Screw	20120-13018-250	8
3	1/4" - 20 UNC x 13 Screw	20120-13013-250	6
4	1/4" - 20 UNC Nut	30220-13000-250	4
5	φ7 Lock Washer	41400-07000-250	18
6	φ7 Washer	40300-07000-250	22
7	NO.10 - 24 UNC x 10 Screw	20124-10010-250	4
8	φ5 Lock Washer	41400-05000-250	4
9	φ5 Washer	40300-05000-250	6
10	M4 Wing Nut	33301-04000-032	1
11	ST4.2 x 10 Tapping Screw	22500-42010-137	6
12	Rubberized Washer	G501-0054-9100	4
13	Control Knob	G453-00A8-9000	1
14	Castor Pin	G350-0026-9000	1
15	Venturi Clip, Side Burner	G405-0019-9200	1



Sheet metal can cause injury. Wear gloves when installing the grill.



1/4" - 20 UNC x 38 Screw **X 8** 





1/4" - 20 UNC x 18 Screw **X 8** 





1/4" - 20 UNC x 13 Screw **X 6** 





1/4" - 20 UNC Nut





φ7 Lock Washer **X 18** 





φ7 Washer **X 22** 





NO.10 - 24 UNC x10 Screw **X 4** 





φ5 Lock Washer





φ5 Washer X 6





M4 Wing Nut X 1





ST4.2 x 10 Tapping Screw X 6

12



Rubberized Washer X 4





Control Knob X 1 14



Castor Pin X 1

15

8

Venturi Clip, Side Burner X 1


BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.


Assemble the barbecue on a flat, clean surface. The grill is heavy; two people are recommended to complete assembly.

# PARTS LIST FOR 085-3138-4 / G45325

KEY#	QUANTITY	DESCRIPTION	PART NO.
AA	1	Top Lid Assembly	G453-K700-01
AB	1	Lid Handle with Grip	G453-00B1-01
AC	2	Lid Handle Bezel-Black Chrome	G453-00A7-01D
AD	1	Thermometer	G364-0004-02
AE	1	Thermometer Bezel-Black Chrome	G453-00A6-01D
AF	2	Screw for Top Lid	G466-0007-01
AG	2	Lid Bumper, Front	G508-0063-01
AH	2	Lid Bumper, Rear	G303-0038-01
ВА	1	Burner Box Assembly	G453-A300-01
BB	4	Main Burner	G517-7300-01
BC	3	Carryover Assembly, Main Burner	G614-0095-01
BD	4	Flame Tamer, Main Burner	G453-0072-01
BE	2	Cooking Grate	G453-0019-01
BF	1	Warming Rack	G453-0018-01
BG	1	Upper Back Panel	G453-0010-01
ВН	1	Match Holder	G501-0068-01
CA	1	Manifold Assembly	G453-K600-01
СВ	1	Regulator	G453-00B2-01
CC	5	Chrome Control Knob, Main Burner	G453-00A8-01
CD	5	Control Knob Bezel-Black Chrome	G453-0092-01D
CF1	1	Electronic Ignition Assembly	G453-0098-01
CF2	1	Ignition Button	G453-0098-02
CG	1	Electrode Set, Main Burner	G515-0067-01
CH	1	Control Panel	G453-00A3-01
CI	1	Heat Shield	G453-0011-01
CJ	1	Grease Tray	G350-4400-01
CK	1	Left Track, Grease Tray	G453-0012-01
CL	1	Right Track, Grease Tray	G453-0013-01
DA	1	Side Burner Shelf Table, Left	G453-0600-01
DB	1	Side Burner Shelf Fascia, Left	G453-00A4-01
DC	1	Side Burner Lid	G501-0070-01
DD	1	Side Burner Drip Pan	G515-0083-01
DE	1	Side Burner Valve	G453-0089-01
DF	1	Side Burner Metal Hose	G608-0039-01
DG	1	Side Burner	G453-3400-01
DH	1	Side Burner Electrode Set	G515-0039-01
DI	1	Side Burner Cooking Grate	G501-0077-01
DJ	1	Side Shelf Table, Right	G453-0700-01
DK	1	Side Shelf Fascia, Right	G453-00A5-01
EA	1	Door Support Rail	G453-5000-01
EB	1	Cart Side Panel, Left	G453-0300-01
EC	1	Cart Side Panel, Right	G453-0400-01
ED	1	Bottom Shelf	G453-0500-01
EE	2	Locking Castor	G350-0023-01
EF	2	Castor	G350-0024-01
EG	1	Left Door Assembly	G453-6900-01
EH	1	Right Door Assembly	G453-K900-01
El	2	Door Handle	G453-0053-01
EJ	2	Door Magnet Assembly	G527-0037-01
F1	1	Hardware Pack	G453-B025-01
F2	1	Assembly Instructions	G453-M025-01
F3	1	Safe Use and Care Manual	G453-M023-02
F4	1	Tank Screw	G505-0047-01
F5	1	Black Chrome Bezel Kit	G453-A025-01D
F6	1	Copper Bezel Kit	G453-A025-01C

# **EXPLODED DIAGRAM FOR 085-3138-4/G45325**

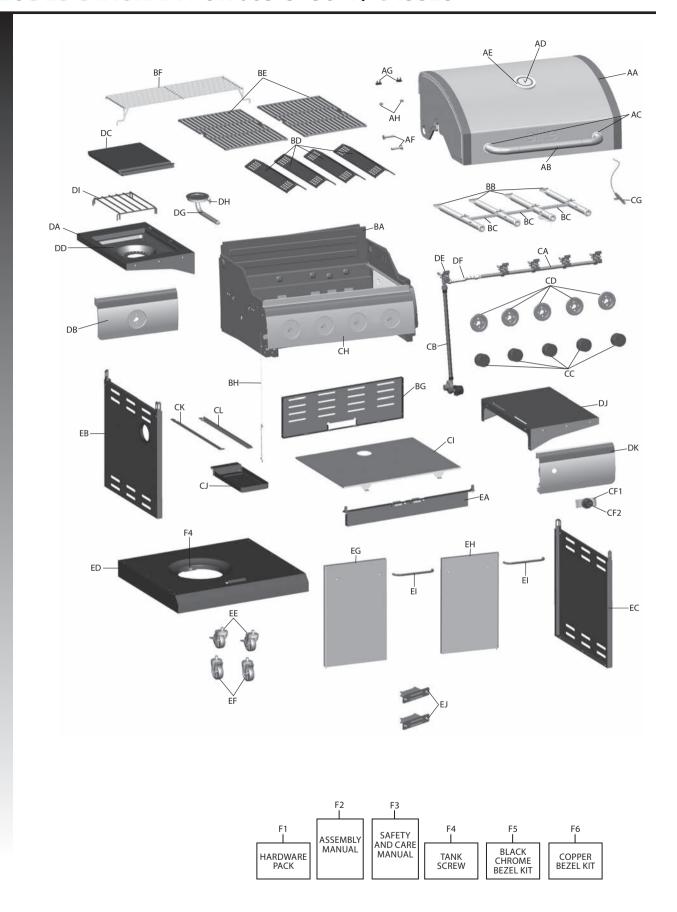

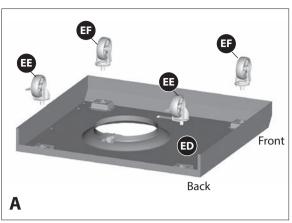

Upside down view



Close Up

Note: Two people required for all assembly steps.

Separate the 2 different types of castors: 2 Locking Castors (EE) and 2 Regular Castors (EF).

Note: Regular Castors (EF) must be assembled to the front of the Bottom Shelf (ED), and Locking Castors (EE) must be assembled to the back of the Bottom Shelf (ED), as shown in image A.

Attach the Regular Castor (EF) to the front of the Bottom Shelf (ED), and use the Castor Pin (#14) to secure and tighten.

Repeat for remaining 3 castors (EE & EF).


YOU WILL NEED:



7




Front view

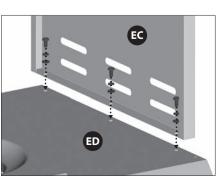


Close Up

Ensure that the Locking Castors (EE) are firmly locked in the "ON" position before continuing.

 Assemble the Left Side Panel (EB) and the Right Side Panel (EC), to the Bottom Shelf (ED).



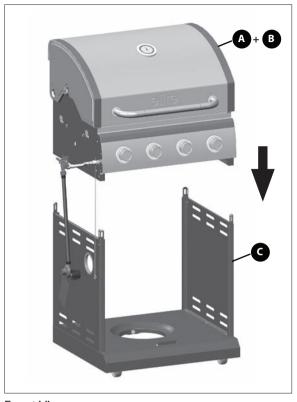


Front View


# THIS STEP REQUIRES 3 PEOPLE. DO NOT ATTEMPT ALONE AS THE DEVICE IS EXTREMELY HEAVY!

Position the Top Lid Assembly and Burner Box Assembly (A & B) onto the Cart Assembly (C), as shown.

4

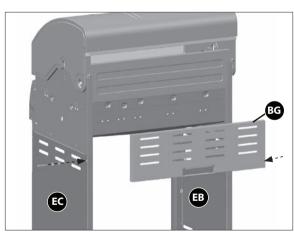


**Back View** 

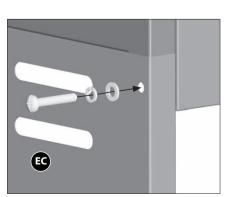


Close Up

Attach the Upper Back Panel (BG) to both the Left And Right Side Panels (EB & EC).

 Attention: Assembly of the Upper Back Panel (BK) will be completed in Steps 6 and 9.




5

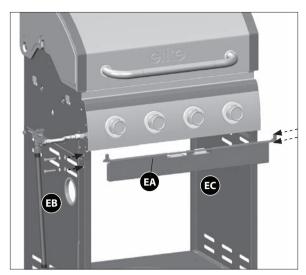


Front View


Assemble the Door Support Rail (EA) to the Left and Right Upper Side Panels (EB and EC), as shown.

WARNING: This part may have sharp edges. Wear protective gloves when assembling.

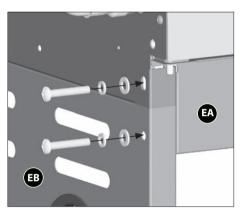


Close Up

 


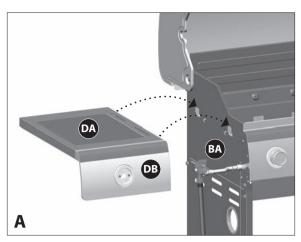


Front, left side view

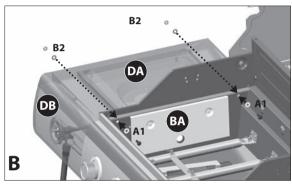

View inside burner box

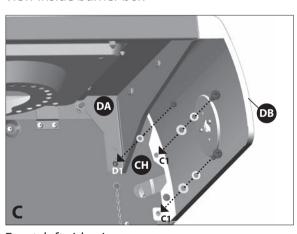

Front, left side view

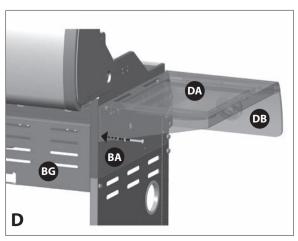


Back, left side view

#### **LEFT SIDE SHELF ASSEMBLY**

 TIP: Do not tighten until all hardware is in place.

- a. Mount the Left Side Burner Side Shelf (DA and DB) onto the two support brackets, located on the left, upper side panel of the Burner Box (BA).
- b. Assemble the Left Side Burner Side Shelf (DA and DB) to the upper side panel of the Burner Box (BA) by positioning hardware through the interior of the Burner Box (BA), as shown in figure B.


YOU WILL NEED:




**TIP:** Ensure that the rubber side of the rubberized washer makes contact with the burner box.

c. Assemble the front of the Left Side Burner Side Shelf Assembly (DA and DB) to the Control Panel (CH), as shown in figure C.

 
YOU WILL NEED:



 d. Complete the Left Side Burner Side Shelf Assembly (DA and DB) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BG), as shown in figure D.




7

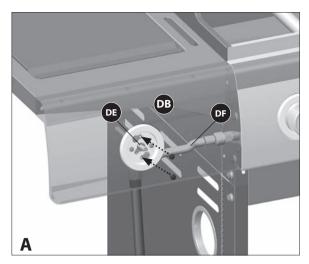

a. Remove the hardware that is pre-assembled to the Side Burner Valve (DE).

Assemble the Side Burner Valve (DE) to the Left Side Shelf Fascia (DB), using the hardware removed, as shown in figure A.

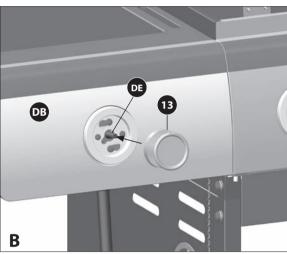


b. Assemble the Side Burner Control Knob (#13) to the Side Burner Valve (DE).


YOU WILL NEED:




Ö

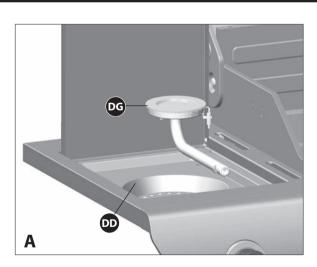


a. Position the Side Burner (DG) through the opening in the Left Side Burner Drip Pan (DD).

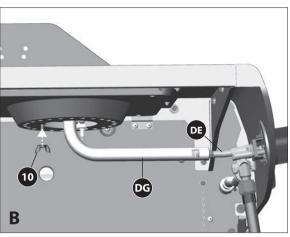

Left side view

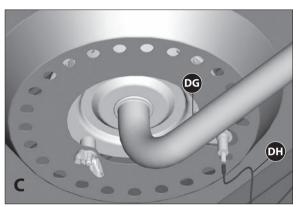

View from underneath left side shelf

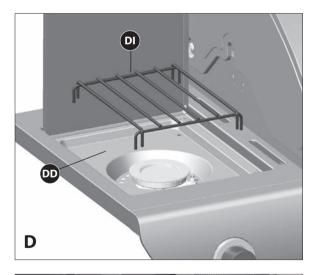

DG (15)

View from underneath left side shelf

b. Make sure that the Side Burner (DG) engages with the Side Burner Valve (DE). Attach the Wing Nut (#10) to the Side Burner (DG), as shown in figure B.

YOU WILL NEED:




c. Attach the end of the Side Burner Electrode Wire (DH) to the underside of the Side Burner Electrode (DG), as shown. Ensure that the wire is pushed in firmly.


d. Position the Side Burner Cooking Grate (DI) onto the side burner drip pan (DD).

e. Use the Side Burner Venturi Clip (#15) to connect the Side Burner (DG) to the Side Burner Valve (DE).




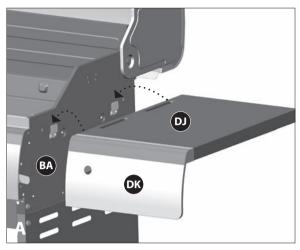


Front, right side view

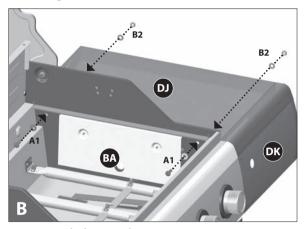

View, inside burner box

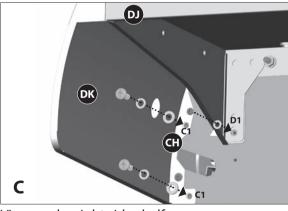

View, under right side shelf

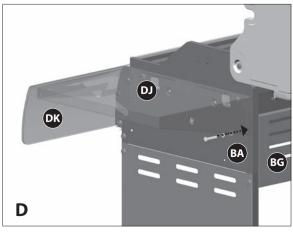

View, back right side


#### **RIGHT SIDE SHELF ASSEMBLY**

TIP: Do not tighten until all hardware is in place.

a. Mount the Right Side Shelf (DJ and DK) onto the two support brackets, located on the right upper side panel of the Burner Box (BA).

b. Assemble the Right Side Shelf (DJ and DK) to the upper side panel of the Burner Box (BA), by positioning hardware through the interior of the Burner Box (BA), as shown in figure B.


YOU WILL NEED:

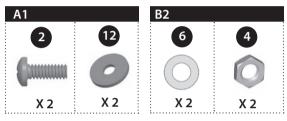


**TIP:** Ensure that the rubber side of the rubberized washer makes contact with the burner box.


c. Assemble the front of the Right Side Shelf (DJ and DK) to the Control Panel (CH), as shown in figure C.

#### YOU WILL NEED:

 


 d. Complete the Right Side Shelf Assembly (DJ and DK) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BG), as shown in figure D.




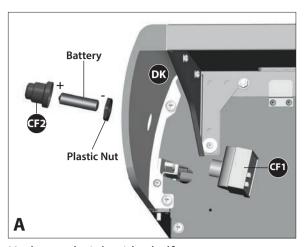

Underneath right side shelf

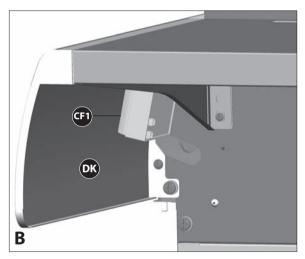

Underneath right side shelf

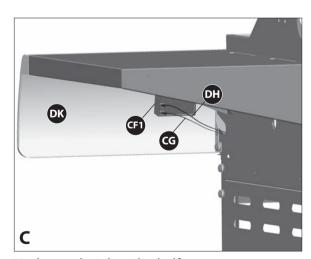

Underneath right side shelf


#### **ELECTRONIC IGNITION ASSEMBLY**

- a. Remove the Ignition Battery Cover (CF2) and the plastic nut from the Electronic Ignition Assembly (CF1).
- b. Place the Electronic Ignition Assembly (CF1) through the opening in the Right Side Shelf Fascia (DK) and secure using the plastic nut.
- c. Insert one "AA" battery into the battery compartment (CF1) with the positive end facing outward, as shown. Secure using the Ignition Button (CF2).
  - \* Battery not included.


d. Insert the Electrode Set, Main Burner Wire (CG) and the Side Burner Electronic Wire (DH) into the Electronic Ignition Assembly (CF1) as shown. Ensure that the wires are pushed in firmly.


Note: Both wire connectors are the same.


11

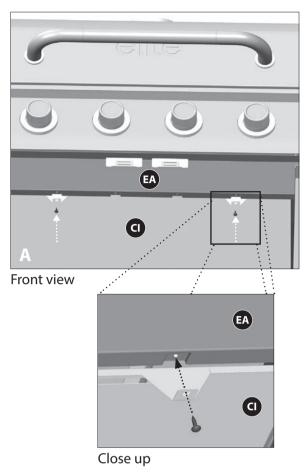

 Assemble the Heat Shield (CI) on the bottom of the Door Support Rail (EA) and the Upper back panel (BG), as shown in figure A and B.



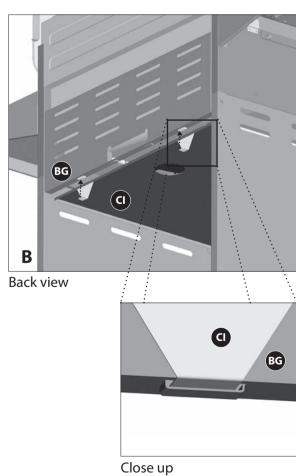

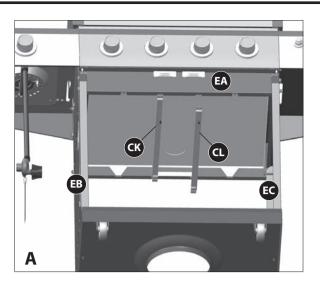


YOU WILL NEED:

11


X 2

A-C.


a. Assemble the Left and Right Tracks (CK and CL) for the Grease Tray (CJ), as shown in figures

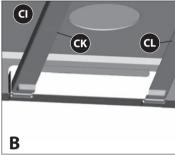

Close up, back

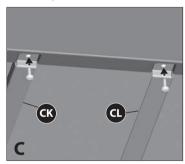


Close up, front

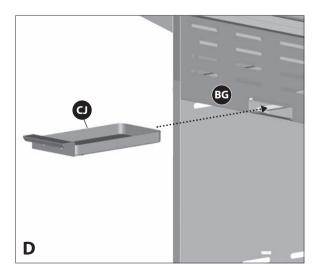

Back view

b. Insert the Grease Tray (CJ) into the opening of the Upper Back Panel (BG).


13

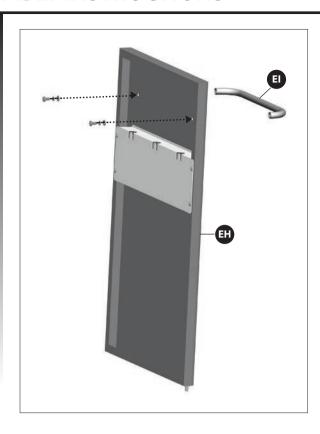


Assemble the Door Handle (EI) to the Left and Right Door Assembly (EG and EH).

#### **Left Door Handle**

 
YOU WILL NEED:




#### **Right Door Handle**

 


14

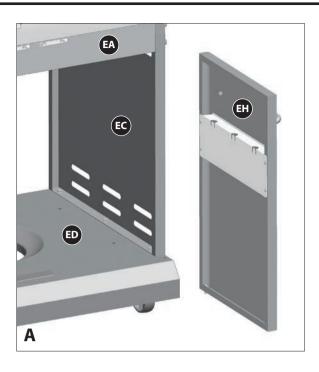

a. Assemble the Right Door Assembly (EH), to the Bottom Shelf (ED) by inserting the fixed pin (bottom of door) into the hole provided (figure B).

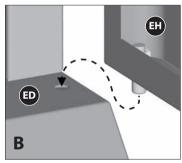

Close up, bottom of door

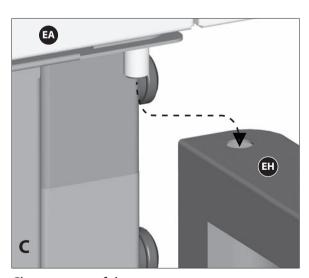

Close up, top of door

b. Assemble the top of the Door Assembly (EH) to the Door Support Rail (EA), by pressing in the door support pin and aligning with the hole located on the top right corner of the door (figure C).

TIP: Use a paint scraper to insert the support pin while the second person aligns the door. The support pin will lock into position when the door is assembled correctly.

c. Repeat steps A and B for the Left Door Assembly (EG).




ATTENTION: YOUR MODEL includes the CONVERTIBLE VALVE SYSTEM™. If you would like to


convert your BBQ from PROPANE to
NATURAL GAS, the following kit is required

Convertible Valve System™ Natural Gas Conversion Kit - product number: 85-2261-4 (available at Canadian Tire) Before completing steps 15 to 17, follow the steps outlined in the CONVERTIBLE VALVE SYSTEM™ instruction manual that accompanies the kit.


15

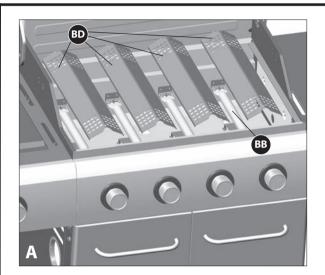

Position the Flame Tamers for Main Burner (BD) into the Burner Box (BA).

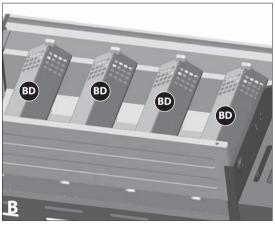


Close up, front view

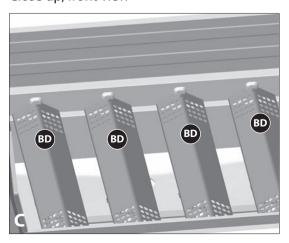


Close up, back view

16

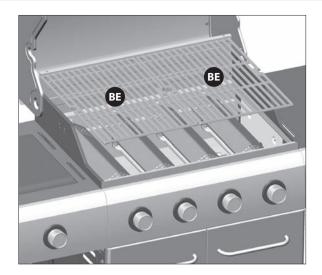


Place the Cooking Grates (BE) into the Burner Box (BA).


17

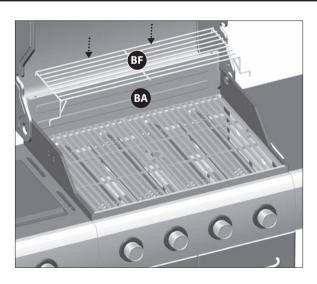

Insert the two small positioning rods of the Warming Rack (BF) into the rear panel of the Burner Box (BA).

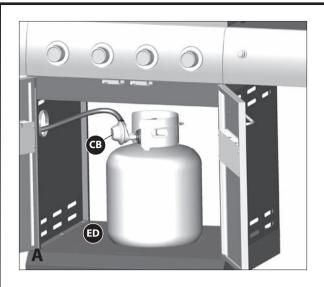

# B

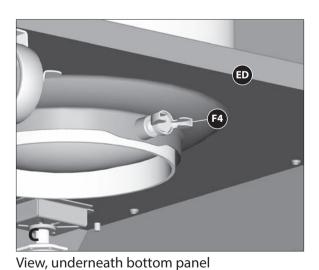

#### FOR PROPANE MODEL ONLY

- a. Attach the Regulator coupling nut (CB) to the LP cylinder valve.
- b. Position the 20 lb propane tank onto the Bottom Shelf (ED), and secure using the bolt (already attached) located on the underside of the Bottom Shelf (ED) as shown in figure C.





FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER PRIOR TO LIGHTING THIS BBQ.

ATTENTION A
DO NOT STORE EXTRA PROPANE TANKS IN THE
BARBECUE CART.

## **HOW TO CONVERT YOUR BBQ TO NATURAL GAS**

This barbecue was sold PROPANE READY; if you wish to run your barbecue on Natural Gas you must purchase the Natural Gas Conversion Kit, product number: 085-2261-4.




IMPORTANT

Make sure conversion kit packaging has the following symbol on it:



# **A** WARNING HOT SURFACES

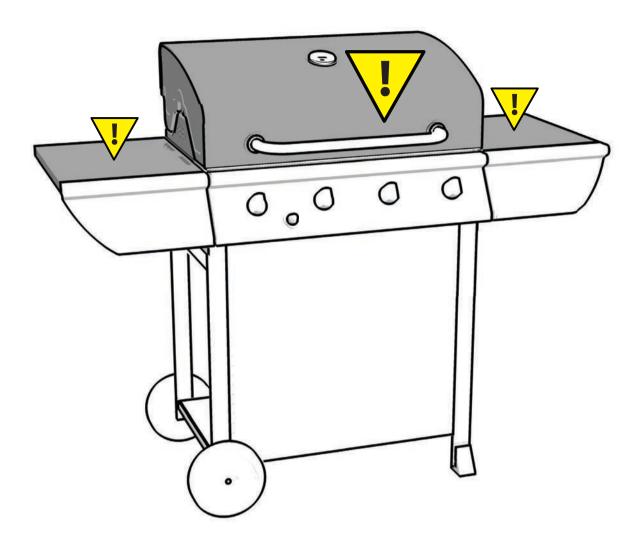


# **CAUTION!**

- AVOID BURNS!
- DO NOT TOUCH WHEN BARBECUE IS IN USE!
- EXTREMELY HOT SURFACE!
- \* SHADED AREAS BECOME EXTREMELY HOT WHEN IN USE.

Your barbecue comes with AN ADDITIONAL SET OF BEZELS! Follow these instructions if you would like to change your bezel color to copper!

01

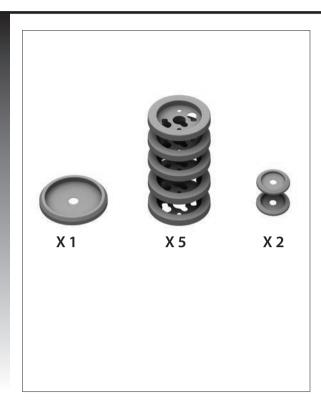


Choose your color from the Custom Bezel Kit (F5).

02



Remove Control Knobs (CC) from the Control Panel (CH) and Side Shelf Fascia (DB).

#### **SIDE BURNER CONTROL PANEL**

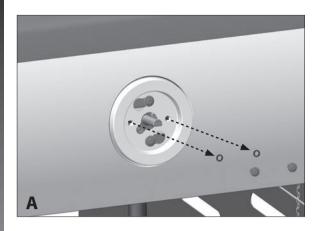

# IMPORTANT: CHANGE 1 BEZEL AT A TIME.


Remove the bezel hardware (left and right screw) as shown. Put hardware aside.




Unscrew, but DO NOT REMOVE the side burner valve hardware (top and bottom screw).



Turn bezel clockwise slightly to remove.

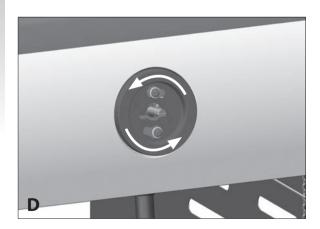

Position new bezel on side burner valve hardware, and turn counter-clockwise. Tighten hardware.

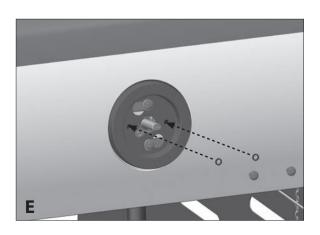

Assemble bezel hardware removed in step 3A.



#### **MAIN CONTROL PANEL**



#### Unscrew, but DO NOT REMOVE the valve hardware (top and bottom screw).

**IMPORTANT: CHANGE 1 BEZEL** 



AT A TIME.

Turn bezel clockwise slightly to remove.



Position new bezel on valve hardware.



Turn counter-clockwise. Tighten hardware.



REPEAT STEPS 4A TO 4E TO CHANGE THE REMAINING BEZELS.

05



Assemble Control Knobs (CC), removed in Step 2, back on Control Panel (CH) and Side Shelf Fascia (DB).



06



Remove Thermometer (AD), Thermometer Bezel (AE), and hardware from Top Lid Assembly (AA). Put hardware aside.

07



Assemble Thermometer (AD) and new Thermometer Bezel (AE) back on Top Lid Assembly (AA), using hardware removed in Step 6.



08



Remove Lid Handle (AB) and Lid Handle Bezels (AC) from Top Lid Assembly (AA). Put hardware aside.

ATTENTION A
BE CAREFUL NOT TO DROP HARDWARE.

09



Assemble Lid Handle (AB) and new Lid Handle Bezels (AC), back on Top Lid Assembly (AA), using hardware removed in Step 8.





Visit www.masterchefbbqs.com to complete product registration.

Master Chef® Customer Service 1-855-453-2150