



S480 BarbecueAssembly Manual

85-3064-8 (G43257) Propane 85-3065-6 (G43258) Natural Gas 1 YEAR LIMITED WARRANTY

READ AND SAVE MANUAL FOR FUTURE REFERENCE.

Assemble your grill immediately.

Missing or damaged parts claims must be submitted within 30 days of purchase date.

For product inquiries, parts, warranty and troubleshooting support, please call 1-855-453-2150.







HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories, or to register your warranty, please visit us on the web at

www.masterchefbbqs.com

A CAUTION

Sharp edges. Wear gloves when assembling your grill.

A CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.



INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the BBQ at all times.



A WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires. explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light A WARNING this barbecue without reading the Lighting Instructions section of this manual.



A DANGER

- 1. If you smell Gas:
 - a. Shut off gas to the appliance
 - b. Extinguish any open flame
 - c. Open lid
 - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
- 2. Requires two people to complete the assembly process.
- 3. Beware of sharp edges.



▲ WARNING

- 1. Do not store or use gasoline or other flammable liquids or vapours in the vicinity of this or any other appliance.
- 2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



IN DIRECT SUN, AND IN OPERATION, YOUR BBO'S STAINLESS STEEL AND PAINTED STEEL PARTS CAN BECOME VERY HOT.

THIS BARBECUE IS FOR OUTDOOR USE ONLY

CONTACT CALL CENTRE IF ANY PARTS ARE MISSING 1-855-453-2150

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- ¼" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers


For correct hardware assembly, always position the lock washer between the screw and the flat washer.



| KEY# | DESCRIPTION | PART NUMBER | QUANTITY |
|------|-----------------------|-----------------|----------|
| 1 | 1/4"-20UNC X13 Screw | 20120-13013-036 | 20 |
| 2 | NO.10-24UNC X13 Screw | 20124-10013-036 | 4 |
| 3 | ST4.2X8 Tapping Screw | 24200-42008-136 | 6 |
| 4 | Wheel Spacer | G305-0024-9088 | 2 |
| 5 | Hitch Pin | G306-0005-9088 | 1 |
| 6 | Washer (Wheel) | 40300-08000-036 | 1 |

A Caution:

Sheet metal can cause injury. Wear gloves when installing the grill.

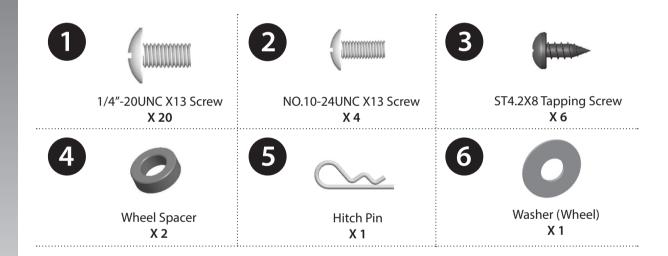


BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.

Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to complete assembly.

PARTS LIST (PROPANE) FOR 85-3064-8 (G43257)

| KEY# | QUANTITY | DESCRIPTION | PART NO. |
|------|----------|------------------------------|--------------|
| AA | 1 | Top lid assembly | G432-9D00-01 |
| AB | 1 | Thermometer and bezel | G312-B201-01 |
| AC | 2 | Lid handle brackets | G352-0015-01 |
| AD | 1 | Top lid handle | G312-B203-01 |
| AE | 2 | Lid bumpers-back | G303-0038-01 |
| 4F | 2 | Lid bumpers-front | G430-00B8-01 |
| AG | 2 | Screws for lid | G430-0024-02 |
| BA | 1 | Burner box assembly | G432-9R00-01 |
| ВВ | 4 | Burner | G432-B600-01 |
| BC | 1 | Electrode set, main burner | G439-0039-01 |
| BD | 3 | Burner brace assembly | G432-0078-01 |
| BE | 4 | Flame tamer | G430-0005-01 |
| BF | 3 | Cooking grate | G432-1800-01 |
| BG | 1 | Warming rack | G432-0001-01 |
| CA | 1 | Control panel | G432-9Q00-01 |
| СВ | 1 | Manifold assembly | G432-9E00-01 |
| CC | 1 | Regulator | G511-0031-01 |
| CD | 4 | Bezel, control knob | G430-0027-02 |
| CE | 4 | Control knob | G312-B102-01 |
| CF1 | 1 | Electronic ignition assembly | G409-0021-A2 |
| CF2 | 1 | Electronic ignition button | G409-0030-01 |
| CG | 1 | Grease cup hook | G305-0043-01 |
| CH | 1 | Grease cup | G430-0033-02 |
| CI | 1 | Heat shield | G432-Q101-01 |
| DA | 1 | Cart side panel, right | G451-0D00-01 |
| DB | 1 | Cart side panel, left | G451-0C00-01 |
| DC | 2 | Back Brace | G432-E300-01 |
| DD | 1 | Front panel | G432-0033-01 |
| DE | 2 | End caps | G430-0023-01 |
| DF | 2 | Wheel | G210-0018-02 |
| DG | 1 | Wheel axle | G430-0007-02 |
| DH | 1 | Match holder | G401-0079-01 |
| DI . | 1 | Tank exclusion | G432-5302-01 |
| DJ | 1 | Gas Tank Support | G307-0016-01 |
| EA | 1 | Side shelf table, right | G312-BL00-01 |
| EB | 1 | Side shelf fascia, right | G432-9S01-01 |
| EC | 1 | Side shelf table, left | G432-9U00-01 |
| ED | 1 | Side shelf fascia, left | G432-9C01-01 |
| F1 | 1 | Hardware pack | G432-B057-01 |
| F2 | 1 | Assembly instructions | G432-M057-01 |
| | - | Safe use and care manual | |


EXPLODED DIAGRAM (PROPANE) FOR 85-3064-8 (G43257)

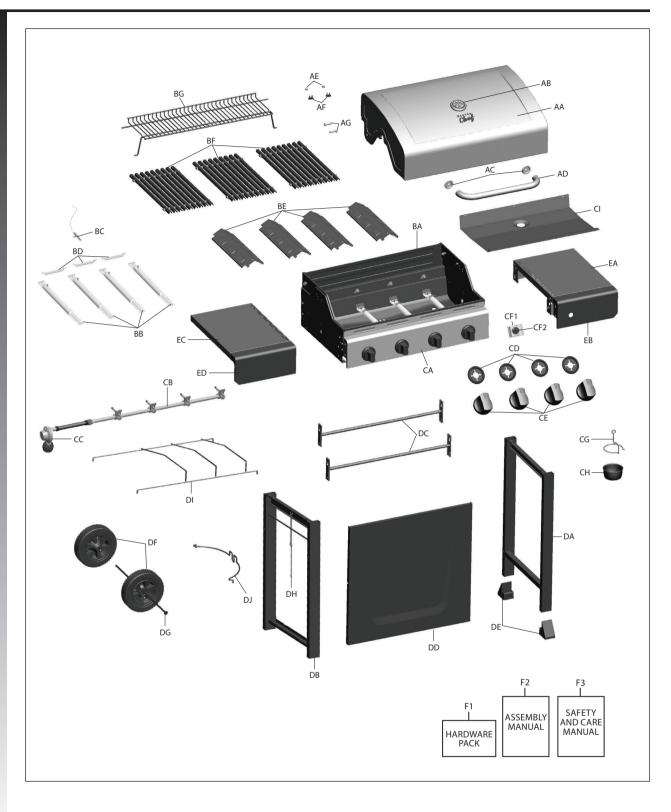


PARTS LIST (NATURAL GAS) FOR 85-3065-6 (G43258)


| KEY# | QUANTITY | DESCRIPTION | PART NO. |
|------|----------|------------------------------|--------------|
| AA | 1 | Top lid assembly | G432-9D00-01 |
| AB | 1 | Thermometer and bezel | G312-B201-01 |
| AC | 2 | Lid handle brackets | G352-0015-01 |
| AD | 1 | Top lid handle | G312-B203-01 |
| AE | 2 | Lid bumpers-back | G303-0038-01 |
| AF | 2 | Lid bumpers-front | G430-00B8-01 |
| AG | 2 | Screws for lid | G430-0024-02 |
| BA | 1 | Burner box assembly | G432-9T00-01 |
| ВВ | 4 | Burner | G432-B600-01 |
| BC | 1 | Electrode set, main burner | G439-0039-01 |
| BD | 3 | Burner brace assembly | G432-0078-01 |
| BE | 4 | Flame tamer | G430-0005-01 |
| BF | 3 | Cooking grate | G432-1800-01 |
| BG | 1 | Warming rack | G432-0001-01 |
| CA | 1 | Control Panel | G432-9Q00-01 |
| СВ | 1 | Manifold assembly | G432-9G00-01 |
| CC | 1 | Natural gas hose | G501-0099-01 |
| CD | 4 | Bezel, control knob | G430-0027-02 |
| CE | 4 | Control knob | G312-B102-01 |
| CF1 | 1 | Electronic ignition assembly | G409-0021-A2 |
| CF2 | 1 | Electronic ignition button | G409-0030-01 |
| CG | 1 | Grease cup hook | G305-0043-01 |
| CH | 1 | Grease cup | G430-0033-02 |
| Cl | 1 | Heat shield | G432-Q101-01 |
| DA | 1 | Cart side panel, right | G451-0D00-01 |
| DB | 1 | Cart side panel, left | G451-0C00-01 |
| DC | 2 | Back Brace | G432-E300-01 |
| DD | 1 | Front panel | G432-0033-01 |
| DE | 2 | End Caps | G430-0023-01 |
| DF | 2 | Wheel | G210-0018-02 |
| DG | 1 | Wheel Axle | G430-0007-02 |
| DH | 1 | Match holder | G401-0079-01 |
| EA | 1 | Side shelf table, right | G312-BL00-01 |
| EB | 1 | Side shelf fascia, right | G432-9S01-01 |
| EC | 1 | Side shelf table, left | G432-9U00-01 |
| ED | 1 | Side shelf fascia, left | G432-9C01-01 |
| F1 | 1 | Hardware pack | G432-B057-01 |
| F2 | 1 | Assembly instructions | G432-M057-01 |
| F3 | 1 | Safe use and care manual | G432-M057-02 |

EXPLODED DIAGRAM (NATURAL GAS) FOR 85-3065-6 (G43258)

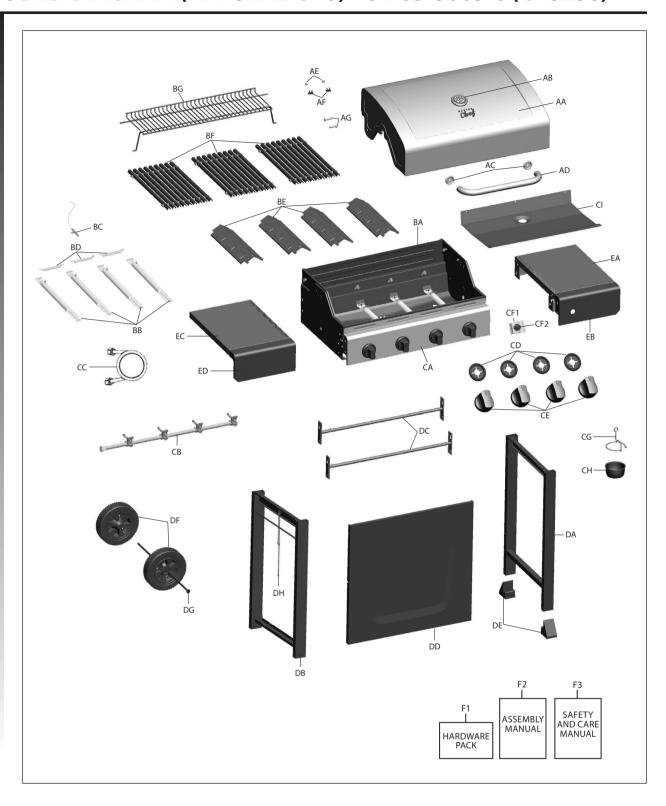

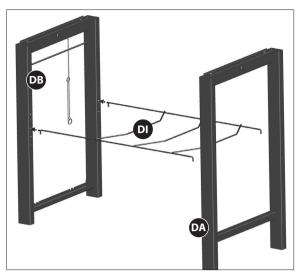

Front View

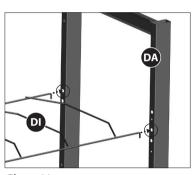

Close Up


PROPANE MODEL ONLY. **NATURAL GAS MODEL WILL NOT** HAVE TANK EXCLUSION (DI) AS SHOWN.

Note: You will need two people for this step.

Assemble the tank exclusion (DI) to the left and right cart side panels (DB, DA), as shown.

Note: The left cart side panel (DB) will have large holes on the end of the legs for assembling the wheel axle (DG).

Note: the tank exclusion should sit in the middle hole on the left and right side panel.

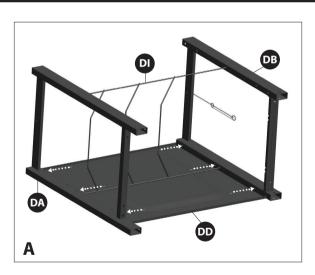

.....

Close Up


В

a. Assemble the front panel (DD) to the left and right cart side panels (DB and DA) as shown.

YOU WILL NEED:



b. Ensure that the slots on the tank exclusion (DI) align with the slots on the front panel.

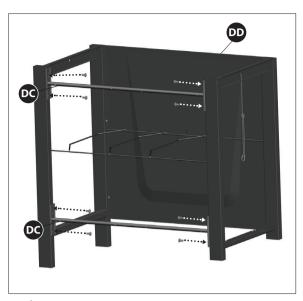

Back View

Assemble two back braces (DC) to the left and right cart side panels (DB and DA) as shown.


YOU WILL NEED:







Close Up

4

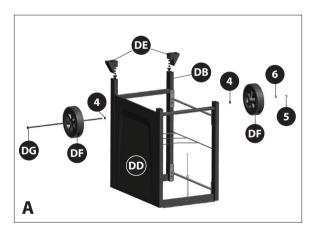

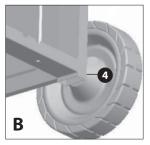


Close up

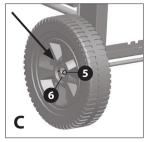


Close up


Note: Turn Cart assembly upside down.

 - a. Place wheel (DF) and wheel spacer (#4) onto the wheel axle (DG). "Cone" side of wheel should be against cart side panel, figure B.
- b. Insert wheel axle assembly (DG) through wheel axle hole in the front and rear of the left cart side panel (DB), as shown.
- c. To complete wheel assembly position the wheel spacer (#4), wheel (DF), wheel washer (#6) and hitch pin (#5), onto wheel axle (DG) as shown.
- d. Insert end caps (DE) into right cart side panel (DA).



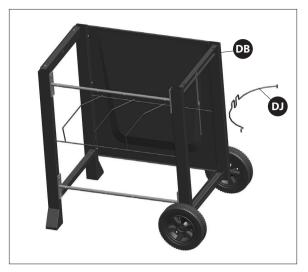

Back View

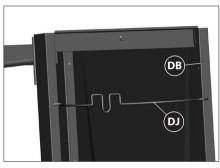

Close up

PROPANE MODEL ONLY.


Assemble the gas tank support (DJ) to left cart side panel (DB).

 
6




Note: TWO PEOPLE required for this step. Ensure that the regulator hose (CC) (Propane models only) is hanging outside of cart.

Position the lid and burner box assembly (A&B), onto the cart assembly (C), and assemble.

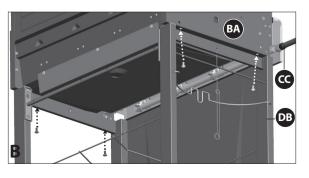




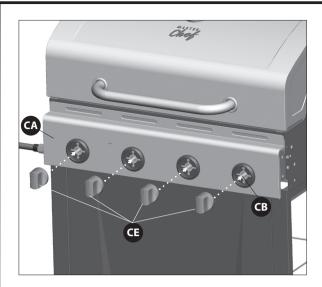


Assemble the control knobs (CE) onto the valve stems of the manifold assembly (CB) located on the control panel (CA).

8

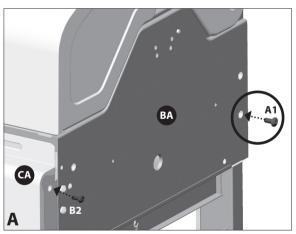

Right side view

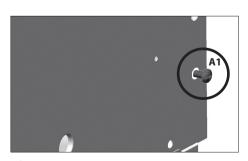


Close Up


RIGHT SIDE SHELF ASSEMBLY

a. Assemble the hardware to the burner box assembly (BA) and control panel (CA).
 
<u>Do not tighten.</u>




TIP: Only assemble to brass nut.

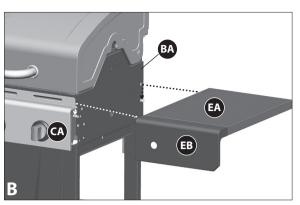


Right side view

b. Position the right side shelf assembly (EA and EB) onto the hardware half-tightened in Step 8A, as shown in figure B and C.

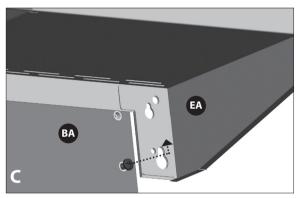


Back view, under right side shelf

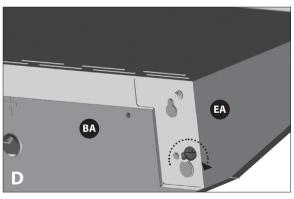


Back view, under right side shelf

c. Tighten screws.

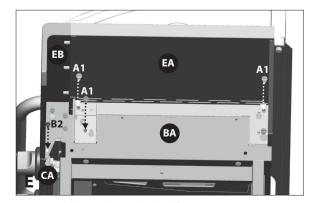


View, under right side shelf

 
d. Assemble the right side shelf assembly (EA and EB) to the control panel (CA) and the burner box assembly (BA), as shown in figure E.



TIP: Only assemble to brass nut.

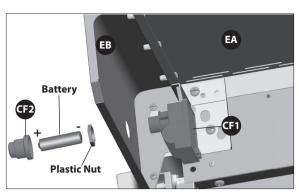

View under right side shelf

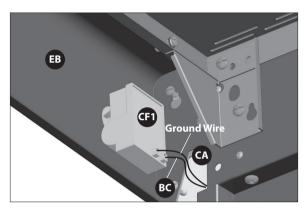

View under right side shelf

ELECTRONIC IGNITION ASSEMBLY

- a. Remove the ignition battery cover (CF2) and the plastic nut from the electronic ignition box (CF1).
- b. Position the electronic ignition box (CF1) through the opening in the right side shelf fascia (EB) and secure using the plastic nut.
- c. Insert one "AA" battery into the battery compartment (CF1) with the positive end facing outward, as shown. Securing using the ignition battery cover (CF2).


* Battery not included.


d. Insert the main burner electrode (BC) and the ground wire into the Electronic Ignition Assembly (CF1).

Note: the ground wire and main burner electrode wire connection points are the same.

Ensure that the wire is pushed in firmly.

10

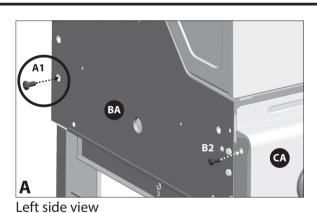


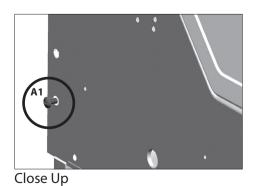


LEFT SIDE SHELF ASSEMBLY

a. Assemble the hardware to the burner box assembly (BA) and control panel (CA). Do not tighten.

YOU WILL NEED:

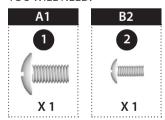


TIP: Only assemble to brass nut.

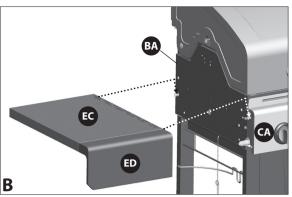

Left side view


b. Position the left side shelf (EC and ED) onto the hardware half-tightened in Step 10A, as shown in figure B and C.

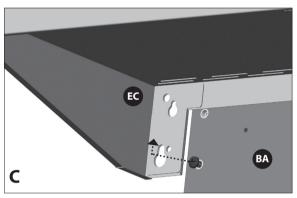

Back view, under left side shelf




Back view, under left side shelf

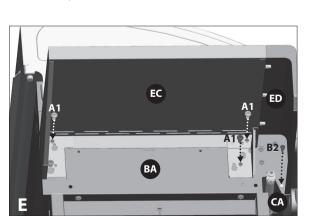

View, under left side shelf

c. Tighten screws.

 d. Assemble the left side shelf assembly (EC and ED) to the control panel (CA) and the burner box assembly (BA), as shown in figure E.



TIP: Only assemble to brass nut.



Place the flame tamers (BE) into the burner box assembly (BA).




Close up, front view



Close up, back view


12

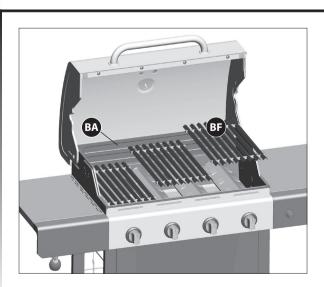


Place the cooking grates (BF) into the burner box assembly (BA).

ASSEMBLY INSTRUCTIONS

13

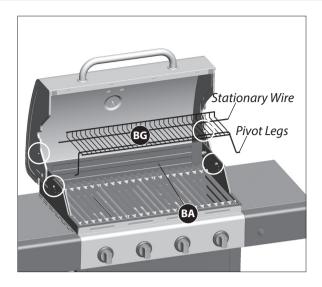

To assemble the warming rack (BG), insert the stationary wire into the holes on the sides of the lid. Insert warming rack pivot legs into the holes on the inside of the burner box assembly (BA), as shown.

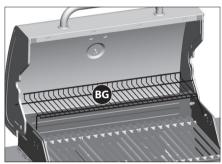


Close up

Hang the grease cup hook (CG) from the bottom of the burner box (BA), and place grease cup (CH) into position.

14



View from underneath burner box

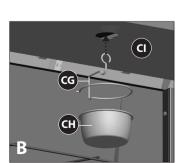

Close up

PROPANE MODEL SHOWN



Failure to assemble grease cup hook and grease cup will cause hot grease to drip from the bottom of the BBQ burner box, with the risk of fire, property damage, or personal injury.



PROPANE MODEL SHOWN

FOR NATURAL GAS MODEL, **FOLLOW STEP 16.**

Position the 20lb propane tank into the notches located on the bottom of the left cart side panel (DB). Position the gas tank support (DJ) onto the tank collar. Attach the regulator coupling nut (CC) to the propane tank valve.



A ATTENTION **A**



LP Cylinder is sold separately. Use only LP tanks that are equipped with an OPD (Overfill protection device). Fill and leak check before attaching to the BBQ hose and regulator. See Safe Use and Care Manual, leak test procedure for more information



WARNING **A**



When assembling regulator onto LP cylinder, ensure that the regulator is assembled below the support bar, as shown.



CAUTION



Cylinder valve must face to the front of cart once the tank is attached.


Failure to install cylinder correctly may allow gas hose to be damaged in operation, resulting in fire.



WARNING



Always keep LP cylinder in upright position during use, transport and storage.

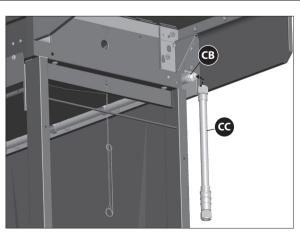

View, under left side shelf

NATURAL GAS MODELS ONLY

Attach the natural gas hose (CC) to the manifold (CB), as shown.



ATTENTION A



In order to complete installation of your natural gas BBQ a 1/2" or 3/8" adapter may be required to connect your BBQ's natural gas hose to your home gas supply. Contact your natural gas supplier to purchase the necessary part.



Visit www.masterchefbbqs.com to complete product registration

Master Chef® Customer Service 1-855-453-2150