

E480 Barbecue Assembly Manual

85-3098-8 (G45313) Propane 85-3099-6 (G45314) Natural Gas 1 YEAR LIMITED WARRANTY

READ AND SAVE MANUAL FOR FUTURE REFERENCE.

Assemble your grill immediately.

Missing or damaged parts claims must be submitted within 30 days of purchase date.

For product inquiries, parts, warranty and troubleshooting support, please call 1-855-453-2150.







HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories, or to register your warranty, please visit us on the web at

www.masterchefbbqs.com

A CAUTION

Sharp edges. Wear gloves when assembling your grill.

A CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.



A INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the BBQ at all times.



A WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires. explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light A WARNING this barbecue without reading the Lighting Instructions section of this manual.



▲ DANGER

- 1. If you smell Gas:
 - a. Shut off gas to the appliance
 - b. Extinguish any open flame
 - c. Open lid
 - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
- 2. Requires two people to complete the assembly process.
- 3. Beware of sharp edges.



▲ WARNING

- 1. Do not store or use gasoline or other flammable liquids or vapours in the vicinity of this or any other appliance.
- 2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



IN DIRECT SUN, AND IN OPERATION, YOUR BBO'S STAINLESS STEEL AND PAINTED STEEL PARTS CAN BECOME VERY HOT.

THIS BARBECUE IS FOR OUTDOOR USE ONLY

CONTACT CALL CENTRE IF ANY PARTS ARE MISSING

HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- ¼" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers
- Rubber Mallot

For correct hardware assembly, always position the lock washer between the screw and the flat washer.




Control knob

X 1

| DESCRIPTION | PART NUMBER | QUANTITY |
|---------------------------|--|---|
| 1/4"-20UNCX38 Screw | 20120-13038-250 | 8 |
| 1/4"-20UNCX18 Screw | 20120-13018-250 | 8 |
| 1/4"-20UNCX13 Screw | 20120-13013-250 | 6 |
| 1⁄4" Nut | 30220-13000-250 | 4 |
| φ7 Lock Washer | 41400-07000-250 | 18 |
| φ7 Washer | 40300-07000-250 | 22 |
| NO.10-24UNCX10 Screw | 20124-10010-250 | 4 |
| φ5 Lock Washer | 41400-05000-250 | 4 |
| φ5 Washer | 40300-05000-250 | 7 |
| M4 Wing Nut | 33301-04000-032 | 1 |
| ST4.2X10 Tapping Screw | 22500-42010-137 | 7 |
| Rubberized Washer | G501-0054-9100 | 4 |
| Control knob | G453-0049-9000 | 1 |
| Castor Pin | G350-0026-9000 | 1 |
| Venturi Clip, Side Burner | G405-0019-9200 | 1 |
| | 1/4"-20UNCX38 Screw 1/4"-20UNCX18 Screw 1/4"-20UNCX13 Screw 1/4" Nut φ7 Lock Washer φ7 Washer NO.10-24UNCX10 Screw φ5 Lock Washer φ5 Washer M4 Wing Nut ST4.2X10 Tapping Screw Rubberized Washer Control knob Castor Pin | ¼"-20UNCX38 Screw20120-13038-250¼"-20UNCX18 Screw20120-13018-250¼"-20UNCX13 Screw20120-13013-250¼"Nut30220-13000-250φ7 Lock Washer41400-07000-250φ7 Washer40300-07000-250NO.10-24UNCX10 Screw20124-10010-250φ5 Lock Washer41400-05000-250φ5 Washer40300-05000-250M4 Wing Nut33301-04000-032ST4.2X10 Tapping Screw22500-42010-137Rubberized WasherG501-0054-9100Control knobG453-0049-9000Castor PinG350-0026-9000 |

Venturi Clip, Side Burner X 1



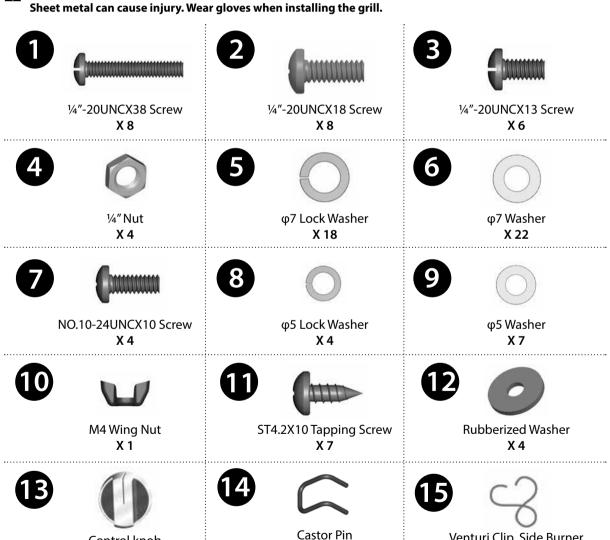


BEFORE ASSEMBLING THIS BARBECUE, READ THE INSTRUCTIONS CAREFULLY.

Assemble the barbecue on a flat, clean surface. Grill is heavy. Two people are recommended to complete assembly.

PARTS LIST (PROPANE) FOR 85-3098-8 (G45313)

| KEY# | QUANTITY | DESCRIPTION | PART NO. |
|------|----------|--------------------------------|--------------|
| AA | 1 | Top lid | G453-A100-01 |
| AB | 1 | Lid handle | G432-000J-01 |
| AC | 1 | Thermometer | G432-000K-01 |
| AD | 2 | Screw for top lid | G466-0007-02 |
| AE | 2 | Lid bumper, front | G508-0063-01 |
| AF | 2 | Lid bumper, rear | G303-0038-01 |
| | | 1 / | |
| BA | 1 | Burner box assembly | G453-A300-01 |
| BC | 4 | Main burner | G517-7300-01 |
| BD | 3 | Carryover assembly | G614-0095-01 |
| BE | 4 | Flame tamer | G453-0072-01 |
| BF | 2 | Cooking grate | G453-0019-01 |
| BG | 1 | Warming rack | G453-0018-01 |
| BH | 1 | Upper back panel | G453-0010-01 |
| BI | 1 | Match holder | G501-0068-01 |
| | | | |
| CA | 1 | Manifold assembly, LP | G453-A600-01 |
| СВ | 1 | Regulator | G606-0008-01 |
| CC | 5 | Control knob | G453-0049-01 |
| CD | 5 | Bezel, control knob | G501-0031-01 |
| CE1 | 1 | Electronic igniter assembly | G409-0021-02 |
| CE2 | 1 | Electronic ignition button | G409-0030-01 |
| CF | 1 | Electrode set, main burner | G515-0067-01 |
| CG | 1 | Control panel | G453-0071-01 |
| CH | 1 | Heat shield | G453-0011-01 |
| CI | 1 | Grease tray | G350-4400-01 |
| CJ | 1 | Right track | G453-0013-01 |
| CK | 1 | Left track | G453-0012-01 |
| | | | |
| DA | 1 | Side burner shelf table, Left | G453-0600-01 |
| DB | 1 | Side burner shelf fascia, Left | G453-0073-01 |
| DC | 1 | Side burner lid | G501-0070-01 |
| DD | 1 | Side burner drip pan | G515-0083-01 |
| DE1 | 1 | Side burner valve-LP | G453-0070-01 |
| DE2 | 1 | Side burner metal hose | G608-0039-01 |
| DF | 1 | Side burner | G453-3400-01 |
| DG | 1 | Side burner electrode wire | G515-0039-01 |
| DH | 1 | Side burner cooking grate | G501-0077-01 |
| DI | 1 | Side shelf table, Right | G453-0700-01 |
| DJ | 1 | Side shelf fascia, Right | G453-0074-01 |
| | | | |
| EA | 1 | Door support rail | G453-5000-01 |
| EB | 1 | Cart side panel, Left | G453-0300-01 |
| EC | 1 | Cart side panel, Right | G453-0400-01 |
| ED | 1 | Bottom shelf, LP | G453-0500-01 |
| EE | 2 | Locking castor | G350-0023-01 |
| EF | 2 | Castor | G350-0024-01 |
| EG | 1 | Left door assembly | G453-6300-01 |
| EH | 1 | Right door assembly | G453-6400-01 |
| El | 2 | Door handle | G453-0053-01 |
| EJ | 2 | Magnet assembly | G501-0016-01 |
| | | · | |
| F1 | 1 | Hardware pack | G453-B006-01 |
| F2 | 1 | Assembly instructions | G453-M013-01 |
| F3 | 1 | Safe use and care manual | G453-M015-02 |
| | | | |


EXPLODED DIAGRAM (PROPANE) FOR 85-3098-8 (G45313)

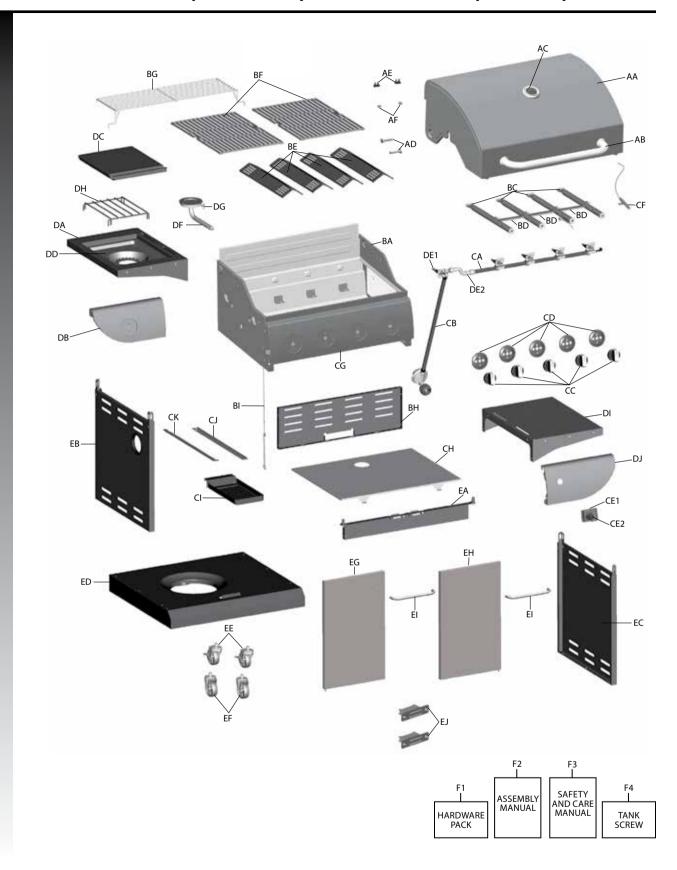


PARTS LIST (NATURAL GAS) FOR 85-3099-6 (G45314)

| KEY# | QUANTITY | DESCRIPTION | PART NO. |
|----------|---------------|---|------------------------------|
| AA | 1 | Top lid | G453-A100-01 |
| AB | 1 | Lid handle | G432-000J-01 |
| AC | 1 | Thermometer | G432-000K-01 |
| AD | 2 | Screw for top lid | G466-0007-02 |
| AE | 2 | Lid bumper, front | G508-0063-01 |
| AF | 2 | Lid bumper, rear | G303-0038-01 |
| | | · | |
| BA | 1 | Burner box assembly | G453-A300-01 |
| BC | 4 | Main burner | G517-7300-01 |
| BD | 3 | Carryover assembly | G614-0095-01 |
| BE | 4 | Flame tamer | G453-0072-01 |
| BF | 2 | Cooking grate | G453-0019-01 |
| BG | 1 | Warming rack | G453-0018-01 |
| BH | 1 | Upper back panel | G453-0010-01 |
| BI | 1 | Match holder | G501-0068-01 |
| | | | |
| CA | 1 | Manifold assembly, NG | G453-B200-01 |
| CB | <u>'</u> 1 | Natural gas hose | G501-0099-01 |
| CC | 5 | Control knob | G453-0049-01 |
| CD | 5 | Bezel, control knob | G501-0031-01 |
| CE1 | <u></u> | Electronic igniter assembly | G409-0021-02 |
| CE2 | <u>'</u> 1 | Electronic ignition button | G409-0030-01 |
| CF | <u>'</u> | Electronic ignition button | G515-0067-01 |
| CG | <u>'</u> 1 | Control panel | G453-0007-01 |
| CH CH | <u></u> | Heat shield | G453-0071-01 G453-0011-01 |
| CI CI | <u></u> | | G350-4400-01 |
| CJ | <u></u> | Grease tray Right track | G453-0013-01 |
| CK | <u> </u> | Left track | G453-0013-01 |
| CN | <u> </u> | Left track | G433-0012-01 |
| DA | 1 | Side burner shelf table, Left | G453-0600-01 |
| DB | 1 | Side burner shelf fascia, Left | G453-0073-01 |
| DC | 1 | Side burner lid | G501-0070-01 |
| DD | <u>·</u> 1 | Side burner drip pan | G515-0083-01 |
| DE1 | <u>.</u> 1 | Side burner valve, NG | G453-0076-01 |
| DE2 | <u>'</u> 1 | Side burner metal hose | G608-0039-01 |
| DF | 1 | Side burner | G453-3400-01 |
| DG | <u>'</u> 1 | Side burner electrode wire | G515-0039-01 |
| DH | <u>'</u> 1 | Side burner cooking grate | G501-0077-01 |
| DI | 1 | Side shelf table, Right | G453-0700-01 |
| DJ | <u></u> | Side shelf fascia, Right | G453-0700-01 G453-0074-01 |
| נט | 1 | side sileli iascia, nigrit | U433-00/4-01 |
| EA | 1 | Door support rail | G453-5000-01 |
| EB | <u>'</u> 1 | Cart side panel, Left | G453-0300-01 |
| EC | 1 | Cart side panel, Left Cart side panel, Right | G453-0400-01 |
| ED ED | <u></u> | Bottom shelf, NG | G453-1000-01 |
| EE | 2 | Locking castor | G350-0023-01 |
| EF | | - | |
| | 2 | Castor | G350-0024-01 |
| EG | 1 | Left door assembly | G453-6300-01 |
| EH | 1 | Right door assembly | G453-6400-01 |
| El | 2 | Door handle | G453-0053-01 |
| EJ | 2 | Magnet assembly | G501-0016-01 |
| F1 | 1 | Haudiniana na st | C453 B004 04 |
| F1 | 1 | Hardware pack | G453-B006-01 |
| F2 | 1 | Assembly instructions | G453-M013-01 |
| F3 | 1 | Safe use and care manual | G453-M015-02 |
| | | | |

EXPLODED DIAGRAM (NATURAL GAS) FOR 85-3099-6 (G45314)

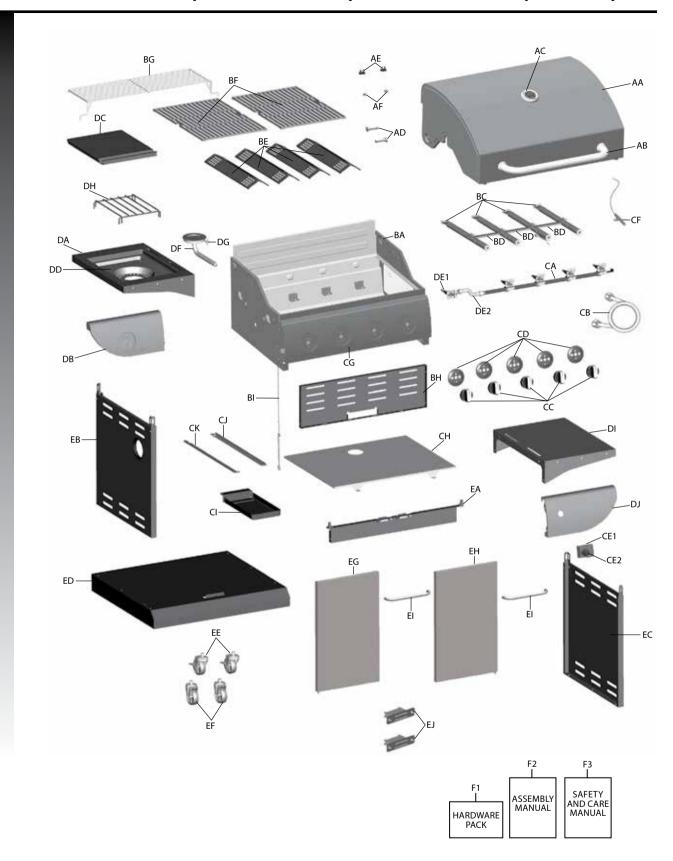

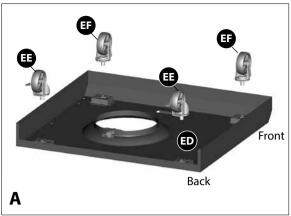


Upside down view

Separate the 2 different types of castors: 2 Locking Castors (EE) and 2 Regular Castors (EF).

Note: Regular Castors (EF) need to be assembled to the front of the Bottom Shelf (ED), and Locking Castors (EE) need to be assembled to the back of the Bottom Shelf (ED), as shown in image A.

Attach the Regular Castor (EF) to the front of the Bottom Shelf (ED), and use the Pin Tool (#14) to secure and tighten.

Repeat for remaining 3 castors (EE & EF).

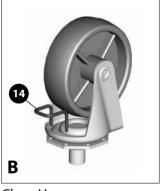


Close Up









Front view

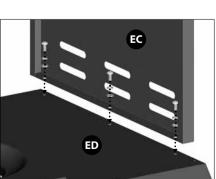

Close Up

 Ensure that the Locking Castors (EE) are firmly locked in the "ON" position before continuing. Assemble the Left Side Panel (EB) and the Right Side Panel (EC), to the Bottom Shelf (ED).



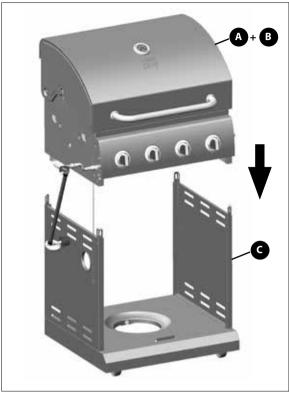


Front View


THIS STEP REQUIRES 3 PEOPLE. DO NOT ATTEMPT ALONE. EXTREMELY HEAVY!

Position the Top Lid Assembly and Burner Box Assembly (A & B) onto the Cart Assembly (C), as shown.

4

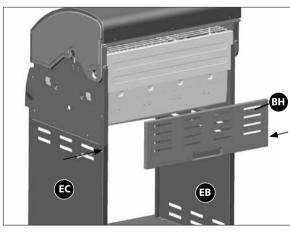


Back View

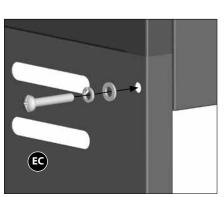


Close Up

Attach the Upper Back Panel (BH) to both the Left And Right Side Panels (EB & EC).

 Attention: Assembly of the Upper Back Panel (BH) will be completed in Step 7 and 10.




5

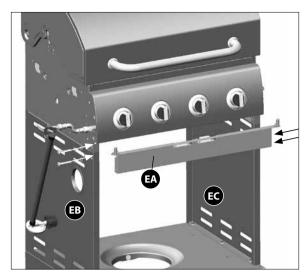

Front View


Assemble the Door Support Rail (EA) to the Left and Right Upper Side Panels (EB and EC), as shown.

WARNING: This part may have sharp edges. Wear protective gloves when assembling.

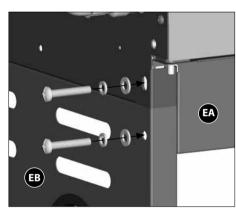


Close Up

 YOU WILL NEED:





G

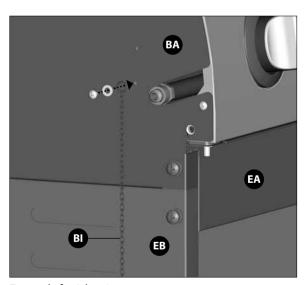


Front, left side view

 Attach the Match Holder (BI) to the left side panel of the Burner Box Assembly.




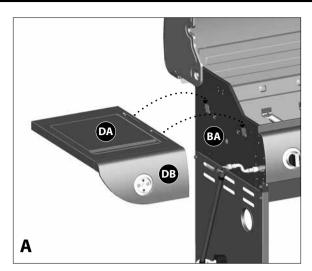


Front, left side view

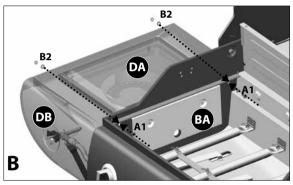

View inside burner box

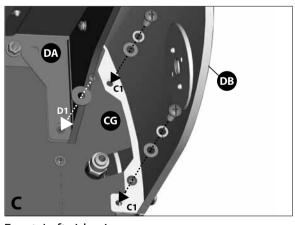

Front, Left side view

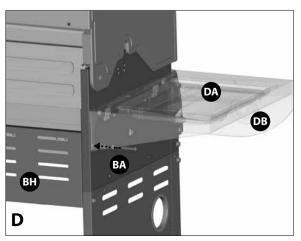


Back, Left side view

LEFT SIDE SHELF ASSEMBLY

TIP: Do not tighten until all hardware is in place.

- a. Mount the left side burner side shelf (DA and DB) onto the two support brackets, located on the left, upper side panel of the burner box (BA).
- b. Assemble the left side burner side shelf (DA and DB) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box (BA), as shown in figure B.

 
YOU WILL NEED:




TIP: Ensure that the rubber side of the rubberized washer makes contact with the burner box.

c. Assemble the front of the left side burner side shelf assembly (DA and DB) to the control panel (CG), as shown in figure C.

 
YOU WILL NEED:



 d. Complete the left side burner side shelf assembly (DA and DB) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.




8

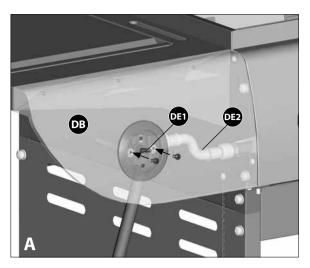

 a. Remove the hardware that is pre-assembled to the Side Burner Valve (DE1), as shown in figure A

Assemble the Side Burner Valve (DE1) to the Left Side Shelf Fascia (DB), using the hardware removed.

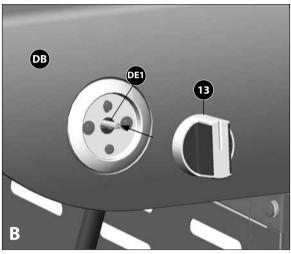


b. Assemble the Side Burner Control Knob (#13) to the Side Burner Valve (DE1).

YOU WILL NEED:




9

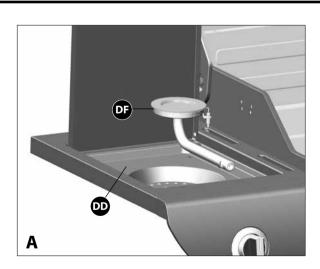


a. Position the Side Burner (DF) through the opening in the Left Side Burner Drip Pan (DD).


9

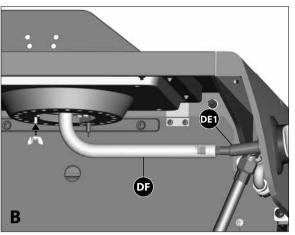

Left side view

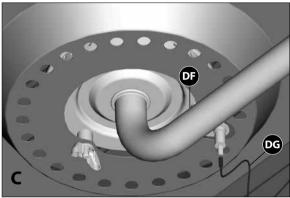

View from underneath left side shelf

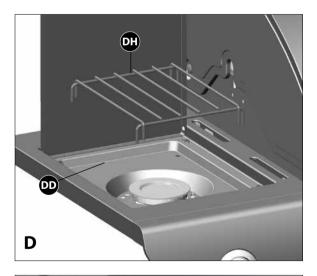

() ts

View from underneath left side shelf

b. Make sure that the Side Burner (DF) engages the Side Burner Valve (DE1). Attach the Wing Nut (#10) to the side burner (DF), as shown in figure B.

YOU WILL NEED:




c. Attach the end of the Side Burner Electrode Wire (DG) to the underside of the Side Burner Electrode (DF), as shown. Ensure that the wire is pushed in firmly.


d. Position the side burner cooking grate (DH) onto the side burner drip pan (DD).

e. Use the side burner Venturi clip (#15) to connect the side burner (DF) to the side burner valve (DE1).




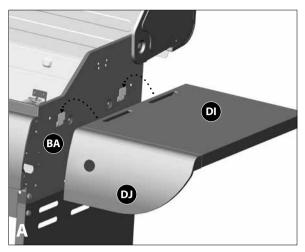


Front, right side view

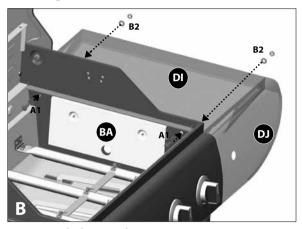

View inside burner box

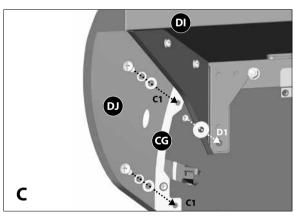

View, under right side shelf

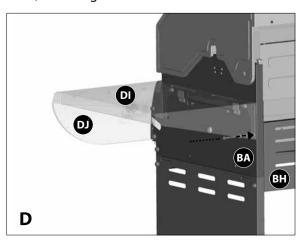

Back, right side view


RIGHT SIDE SHELF ASSEMBLY

TIP: Do not tighten until all hardware is in place.

a. Mount the right side shelf (DI and DJ) onto the two support brackets, located on the right, upper side panel of the burner box (BA)

b. Assemble the right side shelf (DI and DJ) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box, as shown in figure B.


YOU WILL NEED:

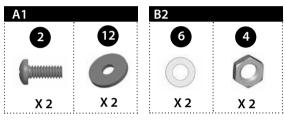


TIP: Ensure that the rubber side of the rubberized washer makes contact with the burner box.


c. Assemble the front of the right side shelf (DI and DJ) to the control panel (CG), as shown in figure C.

YOU WILL NEED:

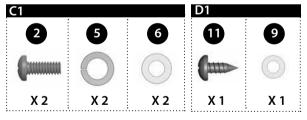


 d. Complete the right side burner side shelf assembly (DI and DJ) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.




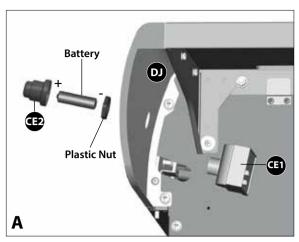

Underneath right side shelf

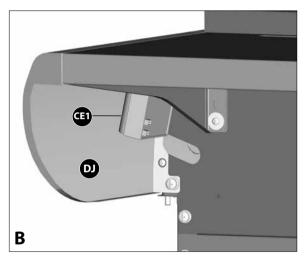

Underneath right side shelf

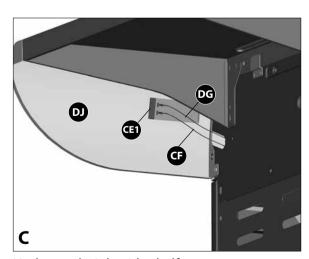

Underneath right side shelf


ELECTRONIC IGNITION ASSEMBLY

- a. Remove the Ignition Battery Cover (CE2) and the plastic nut from the Electronic Ignition Box (CE1).
- b. Position the Electronic Ignition Box (CE1) through the opening in the Right Side Shelf Fascia (DJ) and secure using the plastic nut.
- c. Insert one "AA" battery into the battery compartment (CE1) with the positive end facing outward, as shown. Secure using the ignition button cover (CE2).
 - * Battery not included.

d. Insert the Electrode Set, Main Burner Wire (CF) and the Side Burner Electronic Wire (DG) into the Electronic Ignition Assembly (CE1) as shown. Ensure that the wires are pushed in firmly.


Note: Both wire connectors are the same.

12

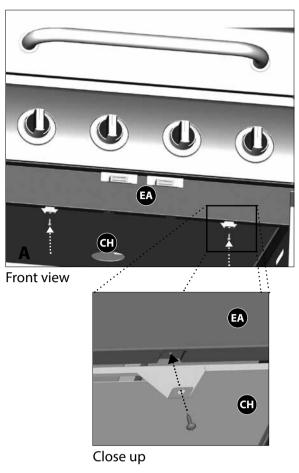


Assemble the Heat Shield (CH) to the bottom of the Door Support Rail (EA) and the Upper back panel (BH), as shown in figure A and B.



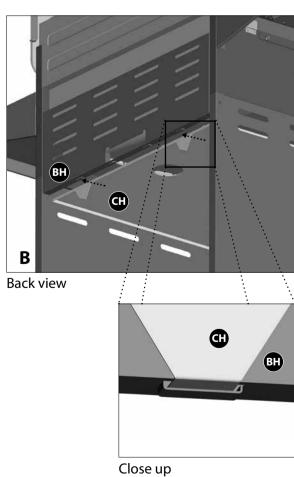



13

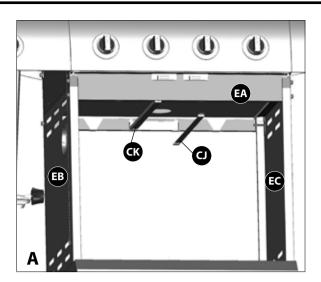


a. Assemble the Right and Left Tracks (CJ and CK) for the Grease Tray (CI), as shown in figure A-C.

 YOU WILL NEED:




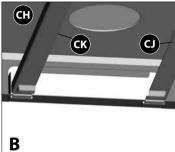

Close up, back

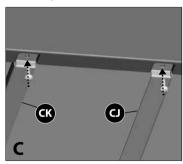


Close up, front

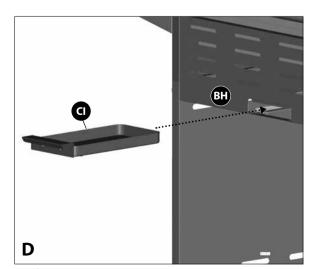

Back view

b. Insert the Grease Tray (CI) into the opening of the Upper Back Panel (BH).


14

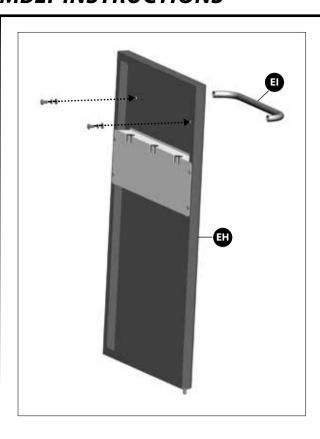


Assemble the Door Handle (EI) to the Left and Right Door Assembly (EG and EH).

Left door handle

 
YOU WILL NEED:




Right door handle

 


15

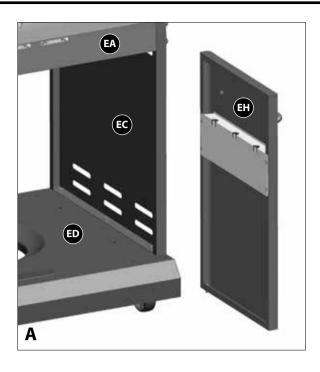

a. Assemble the right door assembly (EH), to the bottom shelf (ED) by inserting the fixed pin (bottom of door) into the hole provided (figure B).

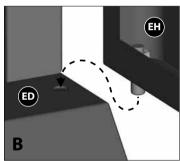

Close up, bottom of door

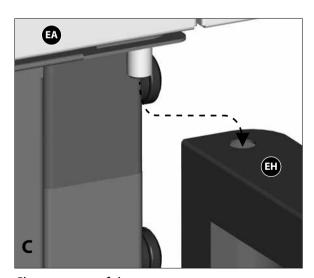


Close up, top of door


b. Assemble the top of the door assembly (EH) to the door support rail (EA), by pressing in the door support pin and aligning with the hole located on the top right corner of the door (figure C).

TIP: Use a paint scraper to press-in the support pin, while the second person aligns the door. The support pin will lock into position when the door is assembled correctly.


c. Repeat steps a, and b for the left door assembly (EG).

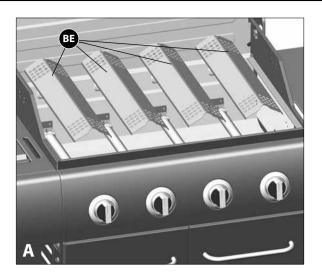

a. Position the Flame Tamers (BE) into the Burner Box (BA).

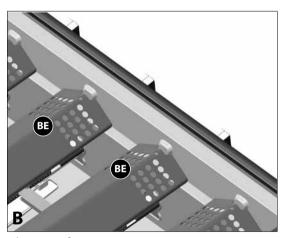


Close up, front view

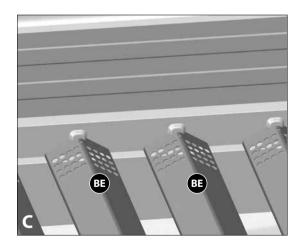


Close up, back view

17

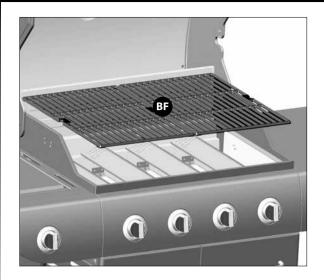


Place the cooking grates (BF) into the burner box (BA).

18

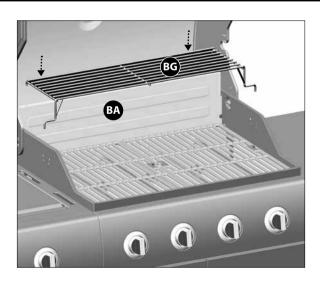

Insert the two small positioning rods of the warming rack (BG) into the rear panel of the burner box (BA).

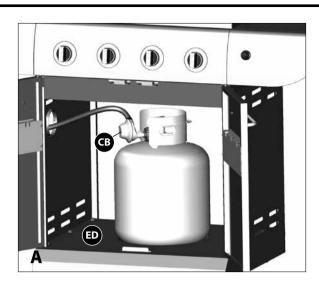



ED

View, underneath bottom panel

FOR PROPANE MODEL ONLY FOR NATURAL GAS MODEL, **FOLLOW STEP 20.**

- a. Attach the Regulator coupling nut (CB) to the LP cylinder valve.
- b. Position the 20 lb propane tank onto the Bottom Shelf (ED), and secure using the bolt (already attached) located on the underside of the Bottom Shelf (ED), as shown in figure C.

ATTENTION A


FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBO.


A ATTENTION A DO NOT STORE EXTRA PROPANE TANKS WITHIN

BBQ CART.

20

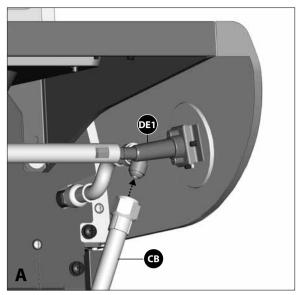

View from underneath left side shelf

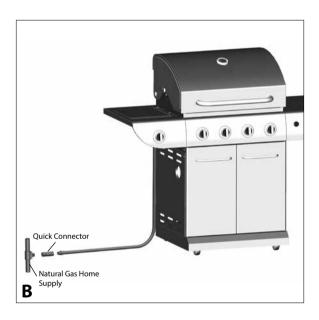

FOR NATURAL GAS MODEL ONLY

Attach the Natural Gas Hose (CB) to the Side Burner Valve (DE1) as shown.



In order to complete installation of your Natural Gas BBQ a 1/2" or 3/8" adapter may be required to connect your BBQ's Natural Gas hose to your home gas supply. Contact your Natural Gas supplier to purchase the necessary part.



FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBQ.

WARNING: For all new, at home, natural gas connections please contact a certified gas technician to install your natural gas barbecue.



Visit **www.masterchefbbqs.com** to complete product registration

Master Chef® Customer Service 1-855-453-2150