

MASTER
ChefTM_{MC}




E500 Barbecue Assembly Manual

**85-3044-6 (G45308) Propane
85-3045-4 (G45309) Natural Gas
1 YEAR LIMITED WARRANTY**

**READ AND SAVE MANUAL FOR FUTURE REFERENCE.
If pre-assembled, leave this manual with unit for
consumer's future reference.**

**For product inquiries, parts, warranty and
troubleshooting support, please call 1-877-707-5463.**

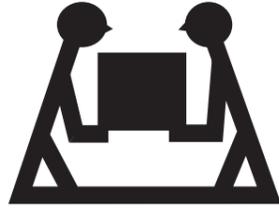

HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories, or to register your warranty, please visit us on the web at www.masterchefbbqs.com

CAUTION

Sharp edges. Wear gloves when assembling your grill.

CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.

INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the BBQ at all times.

WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires, explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light this barbecue without reading the Lighting Instructions section of this manual.

DANGER

1. If you smell Gas:
 - a. Shut off gas to the appliance
 - b. Extinguish any open flame
 - c. Open lid
 - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
2. Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.
3. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
4. Requires two people to complete the assembly process.
5. Beware of sharp edges.

THIS BARBECUE IS FOR OUTDOOR USE ONLY

CONTACT CALL CENTRE IF ANY PARTS ARE MISSING

1-877-707-5463

HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- ¼" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers

Before assembling the barbecue, read these instructions carefully.

Assemble the barbecue on a flat, clean surface. Grill is heavy. You should have at least two people assemble the barbecue together.

Notes: Do not fully tighten all the nuts during this initial stage.

| KEY # | DESCRIPTION | PART NUMBER | QUANTITY |
|-------|------------------------|-----------------|----------|
| 1 | ¼"-20UNCX38 Screw | 20120-13038-250 | 8 |
| 2 | ¼"-20UNCX18 Screw | 20120-13018-250 | 8 |
| 3 | ¼"-20UNCX13 Screw | 20120-13013-250 | 6 |
| 4 | ¼" Nut | 30220-13000-250 | 4 |
| 5 | φ7 Lock Washer | 41400-07000-250 | 18 |
| 6 | φ7 Washer | 40300-07000-250 | 22 |
| 7 | NO.10-24UNCX10 Screw | 20124-10010-250 | 6 |
| 8 | φ5 Lock Washer | 41400-05000-250 | 6 |
| 9 | φ5 Washer | 40300-05000-250 | 9 |
| 10 | NO.10-24UNC Nut | 30224-10000-250 | 2 |
| 11 | NO.8-32UNCX10 Screw | 20132-08010-250 | 4 |
| 12 | φ4 Lock Washer | 41400-04000-250 | 4 |
| 13 | φ4 Washer | 40300-04000-250 | 4 |
| 14 | NO.8-32UNC Nut | 30232-08000-250 | 4 |
| 15 | ST4.2X20 Tapping Screw | 22500-42020-137 | 1 |
| 16 | ST4.2X10 Tapping Screw | 22500-42010-137 | 9 |
| 17 | Fiber Washer | G501-0054-9100 | 4 |
| 18 | Control knob | G519-2500-9000 | 2 |
| 19 | Castor Pin Tool | G350-0026-9000 | 1 |


Caution: Sheet metal can cause injury. Wear gloves when installing the grill.

| | | | | | |
|----|--|----|--|----|--|
| 1 |  | 2 |  | 3 |  |
| | ¼"-20UNCX38 Screw X 8 | | ¼"-20UNCX18 Screw X 8 | | ¼"-20UNCX13 Screw X 6 |
| 4 |  | 5 |  | 6 |  |
| | ¼" Nut X 4 | | φ7 Lock Washer X 18 | | φ7 Washer X 22 |
| 7 |  | 8 |  | 9 |  |
| | NO.10-24UNCX10 Screw X 6 | | φ5 Lock Washer X 6 | | φ5 Washer X 9 |
| 10 |  | 11 |  | 12 |  |
| | NO.10-24UNC Nut X 2 | | NO.8-32UNCX10 Screw X 4 | | φ4 Lock Washer X 4 |
| 13 |  | 14 |  | 15 |  |
| | φ4 Washer X 4 | | NO.8-32UNC Nut X 4 | | ST4.2X20 Tapping Screw X 1 |
| 16 |  | 17 |  | 18 |  |
| | ST4.2X10 Tapping Screw X 9 | | Fiber Washer X 4 | | Control knob X 2 |
| 19 |  | | | | |
| | Castor Pin X 1 | | | | |

PARTS LIST (PROPANE) FOR 85-3044-6 (G45308)

| KEY # | QUANTITY | DESCRIPTION | PART NO. |
|-------|----------|----------------------------------|--------------|
| AA | 1 | Top lid | G453-5100-01 |
| AB | 1 | Lid handle | G513-0004-01 |
| AC | 1 | Thermometer | G432-R200-01 |
| AD | 2 | Screw for top lid | G453-0025-01 |
| AE | 2 | Lid bumper, front | G508-0063-01 |
| AF | 2 | Lid bumper, rear | G508-0033-01 |
| BA | 1 | Burner box weldment | G453-2200-01 |
| BB | 2 | Flame tamer brace | G453-0004-01 |
| BC | 4 | Main burner | G517-7300-01 |
| BD | 3 | Carryover assembly | G614-0095-01 |
| BE | 4 | Flame tamer | G453-0020-01 |
| BF | 2 | Cooking grate | G453-0019-01 |
| BG | 1 | Warming rack | G453-0018-01 |
| BH | 1 | Upper back panel | G453-0010-01 |
| BI | 1 | Match holder | G501-0068-01 |
| BJ | 1 | Rotisserie burner | G453-2500-01 |
| BK | 1 | Wind shield, rotisserie | G501-00B1-01 |
| BL | 1 | Rotisserie burner collector box | G453-0034-01 |
| BM | 1 | Rotisserie burner, electrode set | G453-0033-01 |
| BN | 1 | Rotisserie burner valve-LP | G453-0032-01 |
| CA | 1 | Manifold assembly-LP | G453-2400-01 |
| CB | 1 | Regulator | G606-0008-01 |
| CC | 1 | IR Side burner valve-LP | G453-0031-01 |
| CD | 2 | Side burner metal hose | G608-0039-01 |
| CE1 | 1 | Rotisserie flexible hose | G601-0055-A1 |
| CE2 | 1 | Rotisserie LP orifice | G601-0055-03 |
| CF | 4 | Control knob | G519-2500-01 |
| CG | 4 | Bezel, control knob | G501-0031-01 |
| CH1 | 1 | Electronic igniter assembly | G651-1300-01 |
| CH2 | 1 | Electronic ignition button | G409-0030-01 |
| CI | 1 | Electrode set, main burner | G515-0067-01 |
| CJ | 1 | Control panel | G453-0050-01 |
| CK | 1 | Heat shield | G453-0011-01 |
| CL | 1 | Grease tray | G350-4400-01 |
| CM | 1 | Right track | G453-0013-01 |
| CN | 1 | Left track | G453-0012-01 |
| DA | 1 | Side burner shelf table - Left | G453-7400-01 |
| DB | 1 | Side burner shelf fascia - Left | G453-0026-01 |
| DC | 1 | Infrared support frame | G512-9200-01 |
| DD | 1 | Infrared side burner | G512-C400-01 |
| DE | 1 | Electrode set, infrared | G614-0092-01 |
| DF1 | 1 | Infrared burner lid | G453-0057-01 |
| DF2 | 1 | Infrared burner lid handle | G401-0031-01 |
| DG | 1 | Infrared burner cooking grate | G512-0060-01 |
| DH | 1 | Side shelf table, right | G453-0700-01 |
| DI | 1 | Side shelf fascia, right | G453-0039-01 |
| DJ | 1 | Infrared wind shield | G512-0077-01 |
| DK | 1 | Infrared grease tray | G614-0075-01 |
| DL | 1 | Venturi wind shield | G614-0073-01 |
| EA | 1 | Door support rail | G453-5000-01 |
| EB | 1 | Cart side panel-Left | G453-0300-01 |
| EC | 1 | Cart side panel-Right | G453-0400-01 |
| ED | 1 | Bottom shelf-LP | G453-0500-02 |
| EE | 2 | Locking castor | G350-0023-01 |
| EF | 2 | Castor | G350-0024-01 |
| EG | 1 | Left door assembly | G453-6900-01 |
| EH | 1 | Right door assembly | G453-7200-01 |
| EI | 2 | Door handle | G453-0053-01 |
| EJ | 2 | Magnet assembly | G501-0016-01 |
| F1 | 1 | Hardware pack | G453-B003-02 |
| F2 | 1 | Assembly instructions | G453-M008-01 |
| F3 | 1 | Safe use and care manual | G453-M006-02 |
| F4 | 1 | Tank screw | G505-0047-01 |
| F5 | 1 | Bottom shelf weight | G412-0030-01 |


EXPLODED DIAGRAM (PROPANE) FOR 85-3044-6 (G45308)

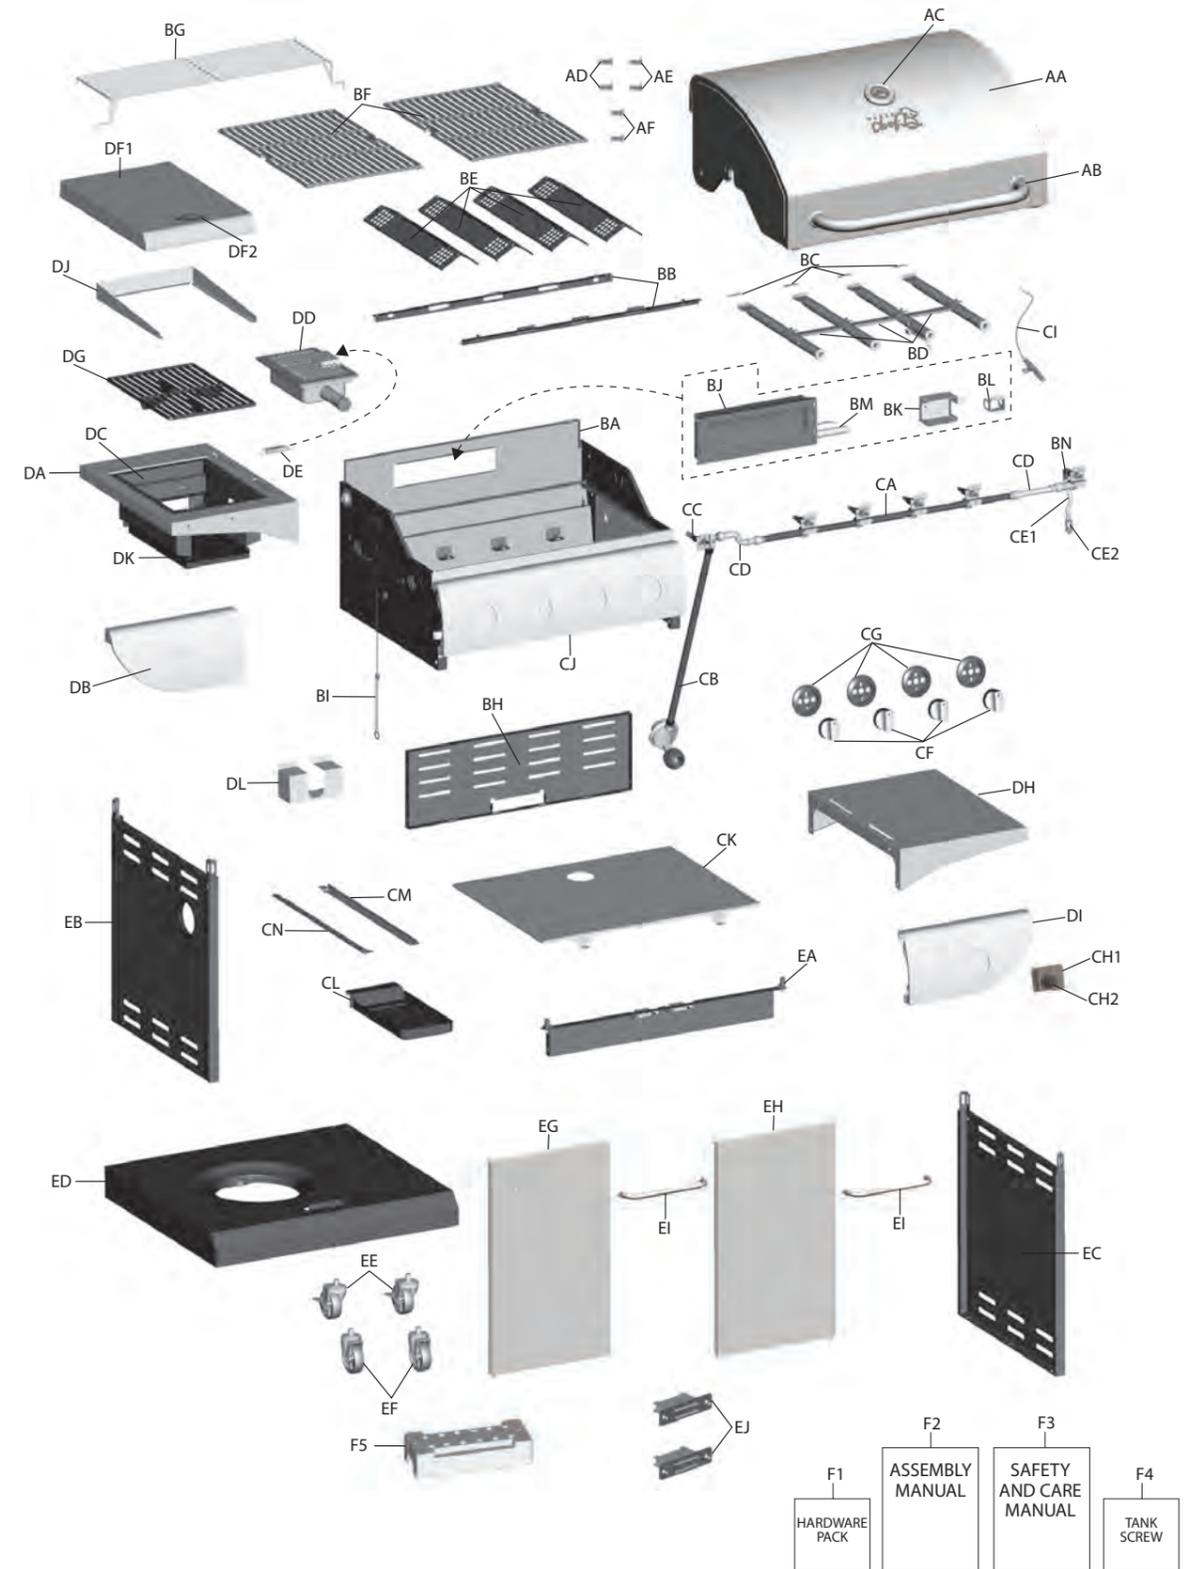

PARTS LIST (NATURAL GAS) FOR 85-3045-4 (G45309)


| KEY # | QUANTITY | DESCRIPTION | PART NO. |
|-------|----------|----------------------------------|--------------|
| AA | 1 | Top lid | G453-5100-01 |
| AB | 1 | Lid handle | G513-0004-01 |
| AC | 1 | Thermometer | G432-R200-01 |
| AD | 2 | Screw for top lid | G453-0025-01 |
| AE | 2 | Lid bumper, front | G508-0063-01 |
| AF | 2 | Lid bumper, rear | G508-0033-01 |
| | | | |
| BA | 1 | Burner box weldment | G453-2200-01 |
| BB | 2 | Flame tamer brace | G453-0004-01 |
| BC | 4 | Main burner | G517-7300-01 |
| BD | 3 | Carryover assembly | G614-0095-01 |
| BE | 4 | Flame tamer | G453-0020-01 |
| BF | 2 | Cooking grate | G453-0019-01 |
| BG | 1 | Warming rack | G453-0018-01 |
| BH | 1 | Upper back panel | G453-0010-01 |
| BI | 1 | Match holder | G501-0068-01 |
| BJ | 1 | Rotisserie burner | G453-2500-01 |
| BK | 1 | Wind shield, rotisserie | G501-00B1-01 |
| BL | 1 | Rotisserie burner collector box | G453-0034-01 |
| BM | 1 | Rotisserie burner, electrode set | G453-0033-01 |
| BN | 1 | Rotisserie burner valve-NG | G453-0041-01 |
| | | | |
| CA | 1 | Manifold assembly-NG | G453-2700-01 |
| CB | 1 | Natural gas hose | G501-0099-01 |
| CC | 1 | IR Side burner valve-NG | G453-0040-01 |
| CD | 2 | Side burner metal hose | G608-0039-01 |
| CE1 | 1 | Rotisserie flexible hose | G601-0055-A1 |
| CE2 | 1 | Rotisserie NG orifice | G601-0055-04 |
| CF | 4 | Control knob | G519-2500-01 |
| CG | 4 | Bezel, control knob | G501-0031-01 |
| CH1 | 1 | Electronic igniter assembly | G651-1300-01 |
| CH2 | 1 | Electronic ignition button | G409-0030-01 |
| CI | 1 | Electrode set, main burner | G515-0067-01 |
| CJ | 1 | Control panel | G453-0050-01 |
| CK | 1 | Heat shield | G453-0011-01 |
| CL | 1 | Grease tray | G350-4400-01 |
| CM | 1 | Right track | G453-0013-01 |
| CN | 1 | Left track | G453-0012-01 |
| | | | |
| DA | 1 | Side burner shelf table - Left | G453-7400-01 |
| DB | 1 | Side burner shelf fascia - Left | G453-0026-01 |
| DC | 1 | Infrared support frame | G512-9200-01 |
| DD | 1 | Infrared side burner | G512-C400-01 |
| DE | 1 | Electrode set, infrared zone | G614-0092-01 |
| DF1 | 1 | Infrared burner lid | G453-0057-01 |
| DF2 | 1 | Infrared burner lid handle | G401-0031-01 |
| DG | 1 | Infrared burner cooking grate | G512-0060-01 |
| DH | 1 | Side shelf table, right | G453-0700-01 |
| DI | 1 | Side shelf fascia, right | G453-0039-01 |
| DJ | 1 | Infrared wind shield | G512-0077-01 |
| DK | 1 | Infrared grease tray | G614-0075-01 |
| DL | 1 | Venturi windshield | G614-0073-01 |
| | | | |
| EA | 1 | Door support rail | G453-5000-01 |
| EB | 1 | Cart side panel-Left | G453-0300-01 |
| EC | 1 | Cart side panel-Right | G453-0400-01 |
| ED | 1 | Bottom shelf-NG | G453-1000-02 |
| EE | 2 | Locking castor | G350-0023-01 |
| EF | 2 | Castor | G350-0024-01 |
| EG | 1 | Left door assembly | G453-6900-01 |
| EH | 1 | Right door assembly | G453-7200-01 |
| EI | 2 | Door handle | G453-0053-01 |
| EJ | 2 | Magnet assembly | G501-0016-01 |
| | | | |
| F1 | 1 | Hardware pack | G453-B003-02 |
| F2 | 1 | Assembly instructions | G453-M008-01 |
| F3 | 1 | Safe use and care manual | G453-M006-02 |
| F4 | 1 | Bottom shelf weight | G412-0030-01 |

EXPLODED DIAGRAM (NATURAL GAS) FOR 85-3045-4 (G45309)

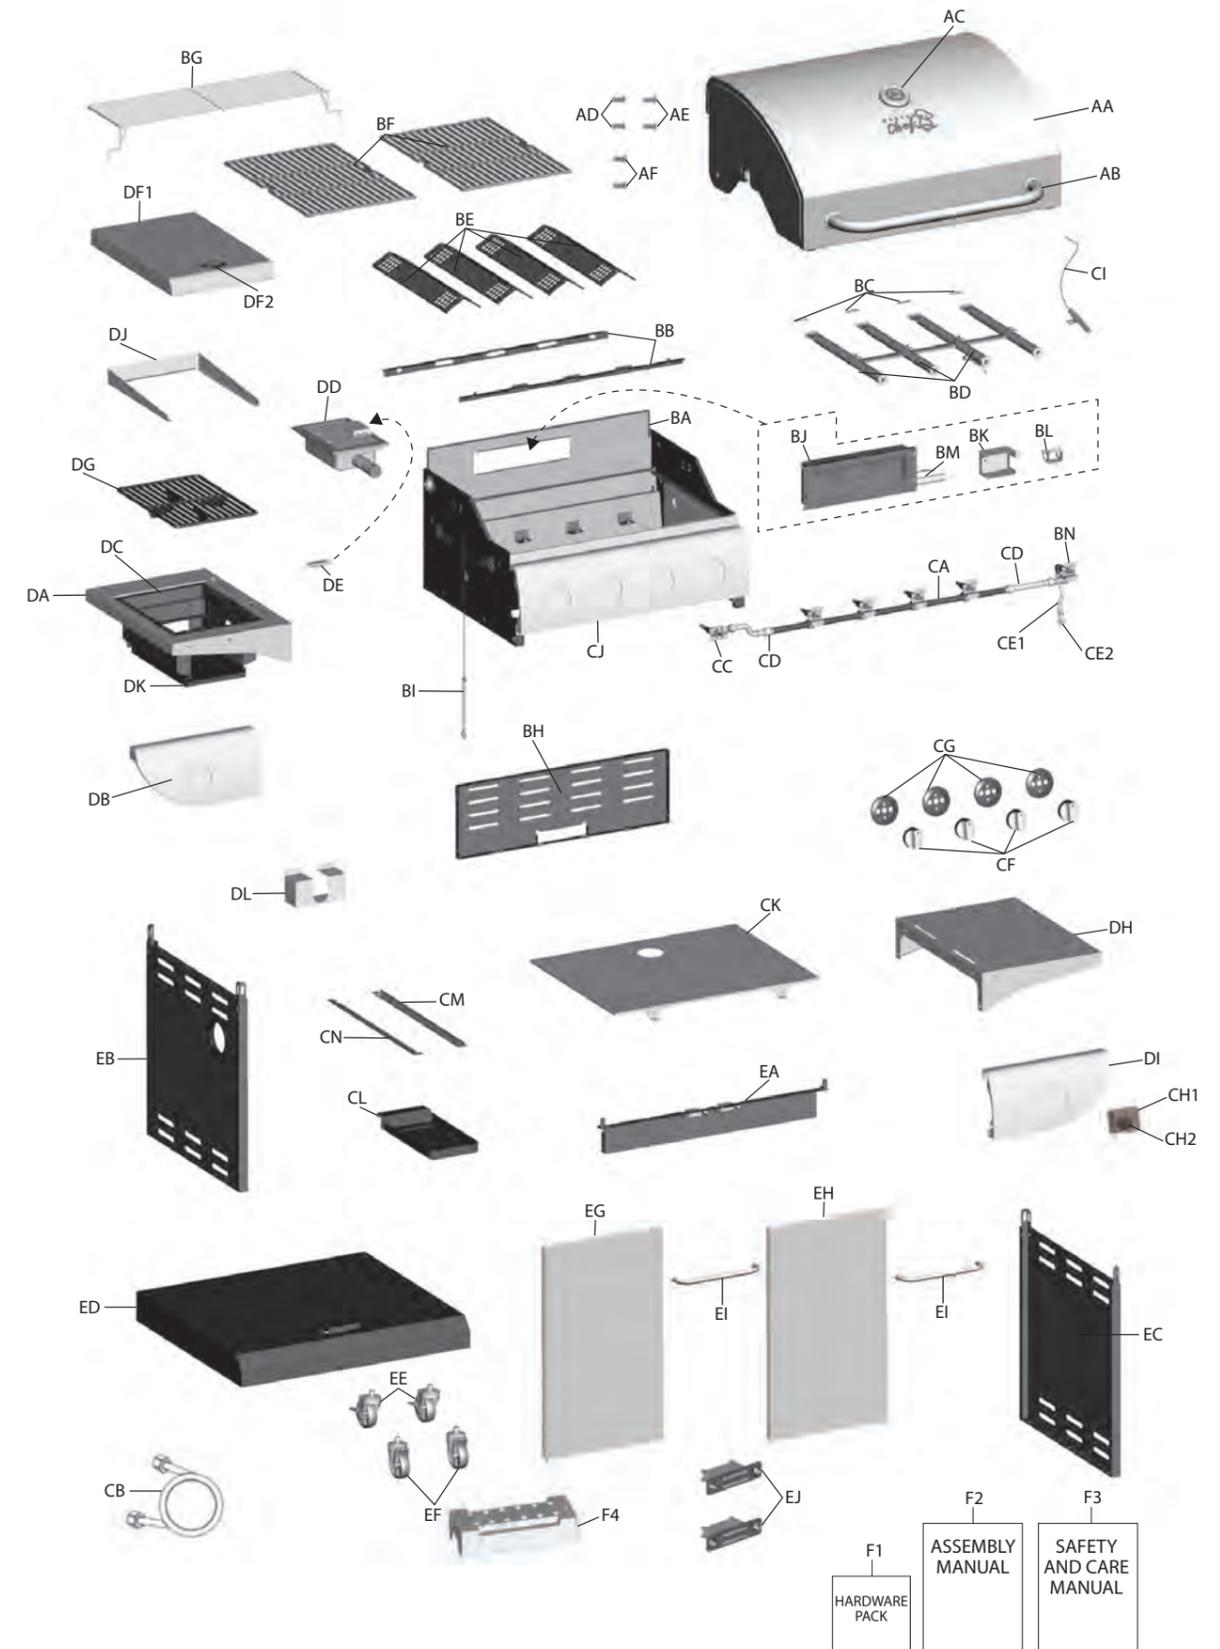

ASSEMBLY INSTRUCTIONS

1

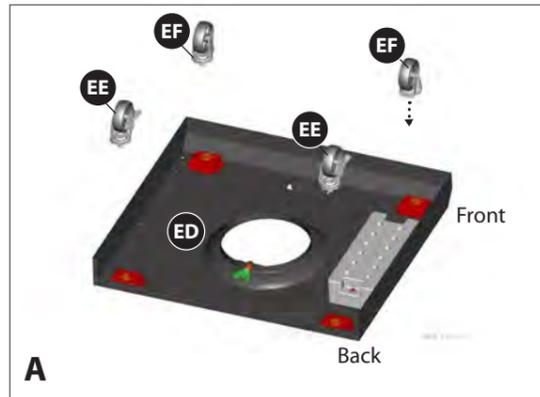

Upside down view



Close Up


Separate the 2 different types of castors: 2 Locking Castors (EE) and 2 Regular Castors (EF).

Note: Regular Castors (EF) need to be assembled to the front of the Bottom Shelf (ED), and Locking Castors (EE) need to be assembled to the back of the Bottom Shelf (ED), as shown in image A.

Attach the Regular Castor (EF) to the front of the Bottom Shelf (ED), and use the Pin Tool (#19) to secure and tighten.

Repeat for remaining 3 castors (EE & EF).


YOU WILL NEED:

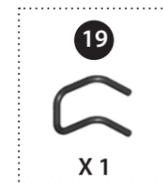

2




Front view

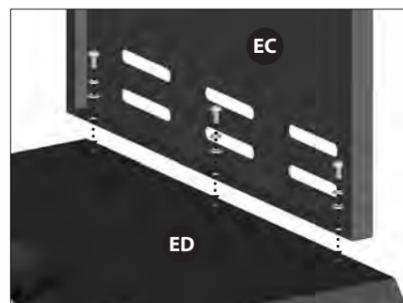

Close Up

Ensure that the Locking Castors (EE) are firmly locked in the "ON" position before continuing. Assemble the Left Side Panel (EB) and the Right Side Panel (EC), to the Bottom Shelf (ED).

YOU WILL NEED:

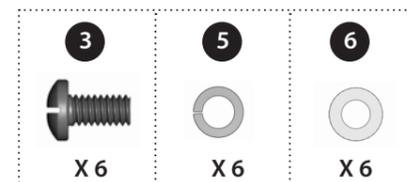

ASSEMBLY INSTRUCTIONS

3




Front View

THIS STEP REQUIRES 3 PEOPLE. DO NOT ATTEMPT ALONE. EXTREMELY HEAVY!

Position the Top Lid Assembly and Burner Box Assembly (A & B) onto the Cart Assembly (C), as shown.

4

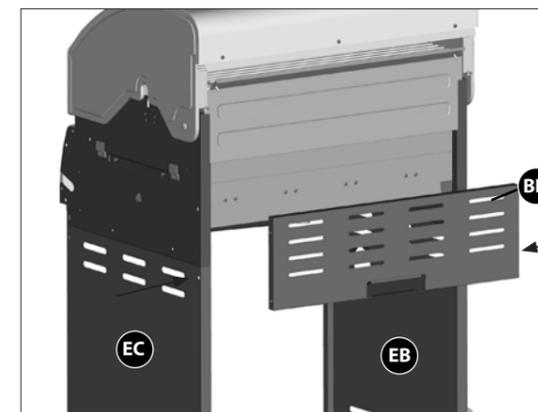


Back View

Attach the Upper Back Panel (BH) to both the Left And Right Side Panels (EB & EC).

Attention: Assembly of the Upper Back Panel (BH) will be completed in Step 8 and 11.


YOU WILL NEED:

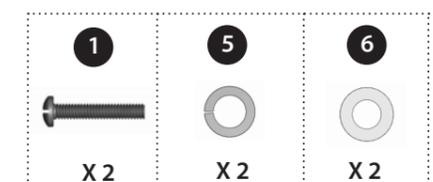


Close Up

ASSEMBLY INSTRUCTIONS

5

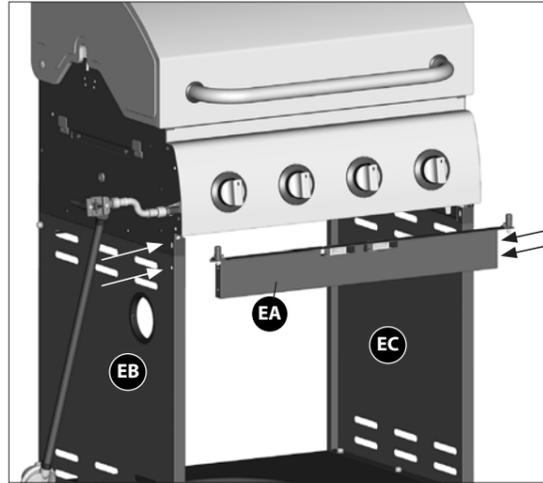

Front View

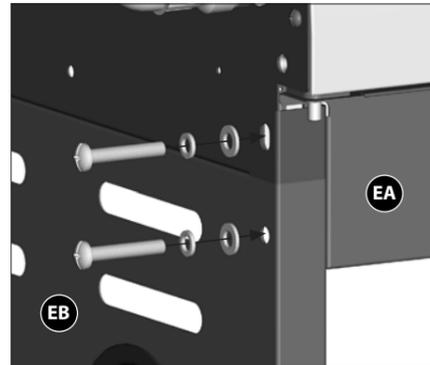


Close Up

Assemble the Door Support Rail (EA) to the Left and Right Upper Side Panels (EB and EC), as shown.


WARNING: This part may have sharp edges. Wear protective gloves when assembling.

YOU WILL NEED:

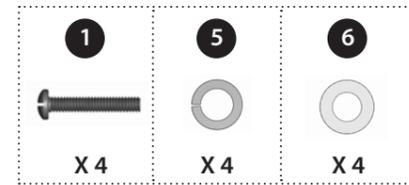

ASSEMBLY INSTRUCTIONS


6

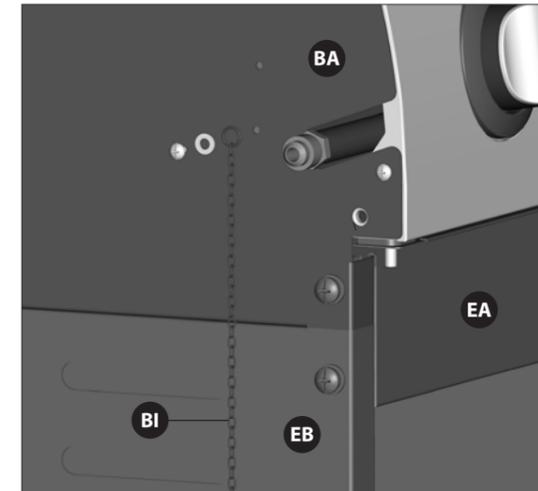


Left side view

Attach the Match Holder (BI) to the left side panel of the Burner Box Assembly.


YOU WILL NEED:

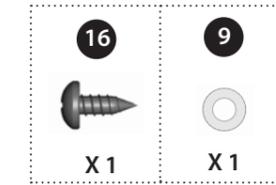

7

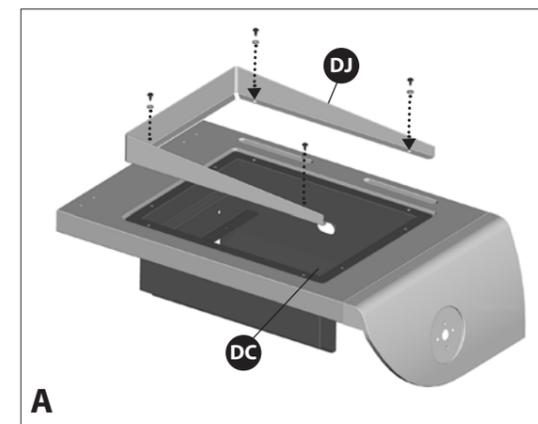

A

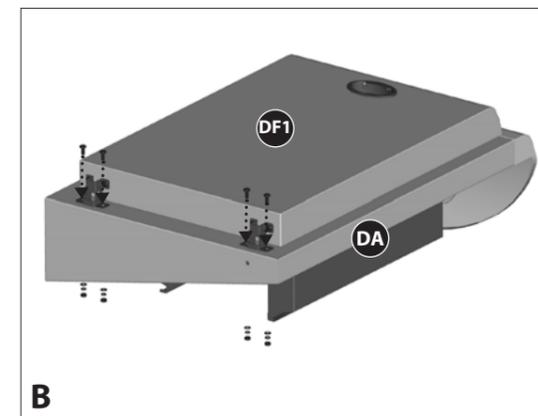


B


a. Remove the hardware from the infrared support frame (DC). Use the hardware to assemble the infrared wind shield (DJ) onto the infrared support frame (DC.)

b. Attach the infrared burner lid (DF1) to the left side burner shelf table (DA).


YOU WILL NEED:

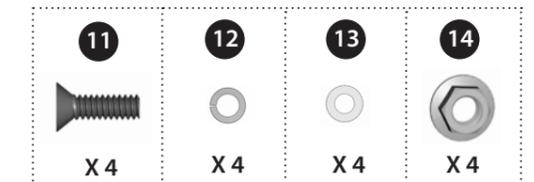


8

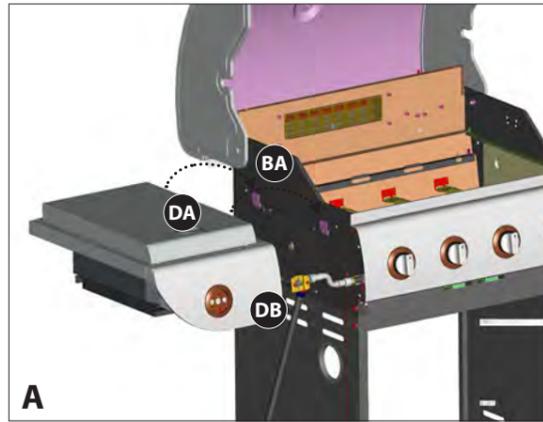


Front, left side view

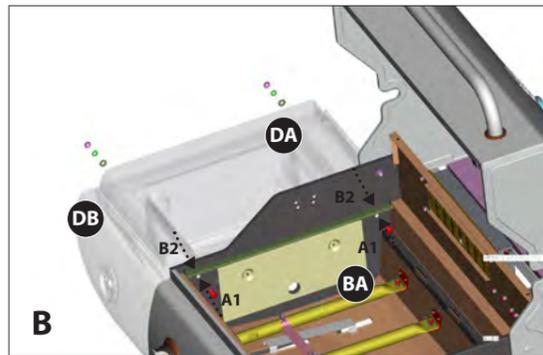

View inside burner box

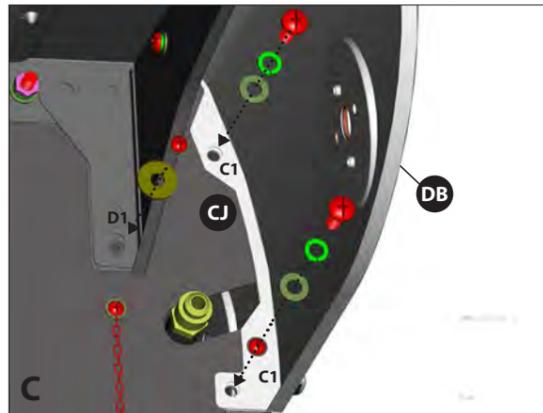

Left side view

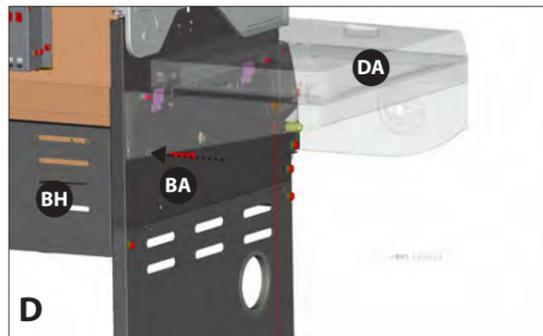

Back, left side view

LEFT SIDE SHELF ASSEMBLY

a. Mount the left side burner side shelf (DA and DB) onto the two support brackets, located on the left, upper side panel of the burner box (BA).

b. Assemble the left side burner side shelf (DA and DB) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box (BA), as shown in figure B.

YOU WILL NEED:

| A1 | | B2 | |
|-----|-----|-----|-----|
| 2 | 17 | 6 | 4 |
| | | | |
| X 2 | X 2 | X 2 | X 2 |

c. Assemble the front of the left side burner side shelf assembly (DA and DB) to the control panel (CJ), as shown in figure C.

YOU WILL NEED:


| C1 | | | D1 | |
|-----|-----|-----|-----|-----|
| 2 | 5 | 6 | 16 | 9 |
| | | | | |
| X 2 | X 2 | X 2 | X 1 | X 1 |

d. Complete the left side burner side shelf assembly (DA and DB) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.


YOU WILL NEED:

| | | |
|-----|-----|-----|
| 1 | 5 | 6 |
| | | |
| X 1 | X 1 | X 1 |

9

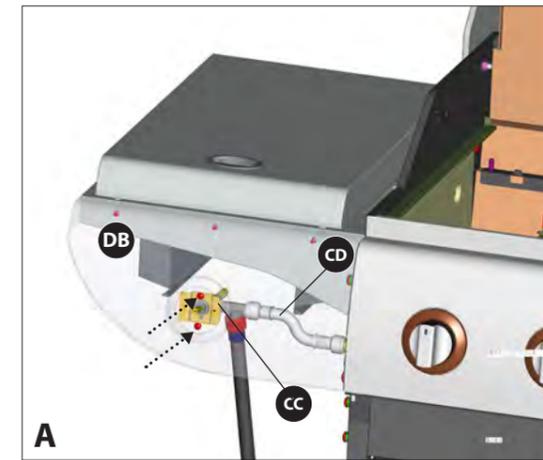

A

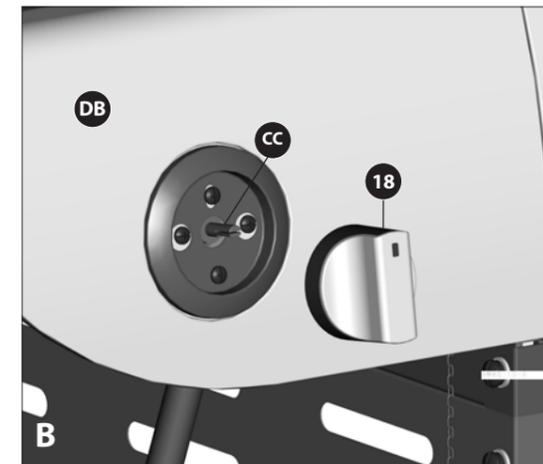

B

a. Remove the hardware that is pre-assembled to the IR side burner valve (CC), as shown in figure A.

Insert the side burner valve stem (CC) through the rear of the left side shelf fascia (DB) and assemble using the hardware removed.


b. Assemble the Side burner control knob (#18) to the Side burner valve (CC).

YOU WILL NEED:





ASSEMBLY INSTRUCTIONS

10

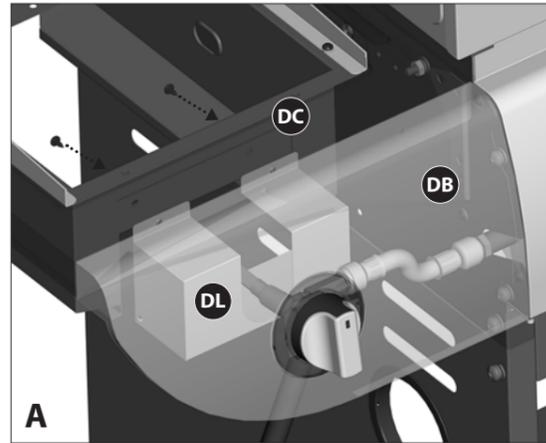


a. Assemble the venturi wind shield (DL) to the infrared support frame (DC).

YOU WILL NEED:

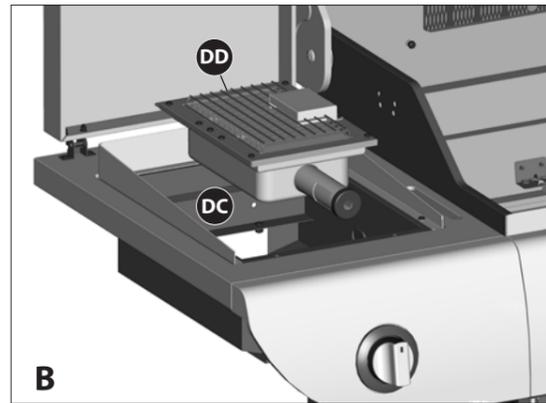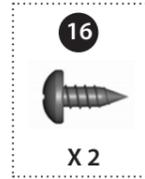


b. Position the infrared burner (DD) through the opening in the infrared support frame (DC).

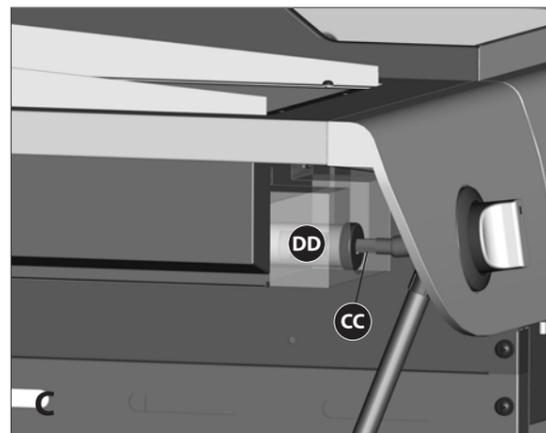


c. Make sure that the infrared burner (DD) engages the side burner valve (CC), as shown in figure C.

View under left side shelf

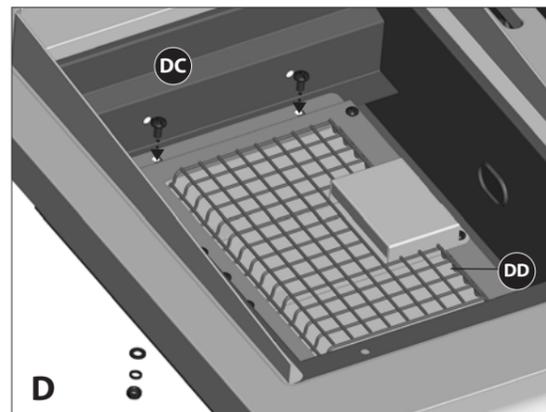


d. Assemble the infrared side burner (DD) to the infrared support frame (DC), at the two points indicated in figure D.

YOU WILL NEED:

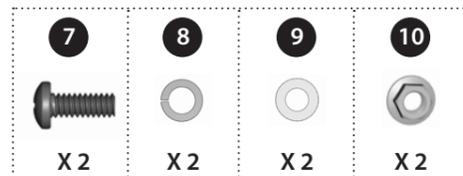


ASSEMBLY INSTRUCTIONS

10

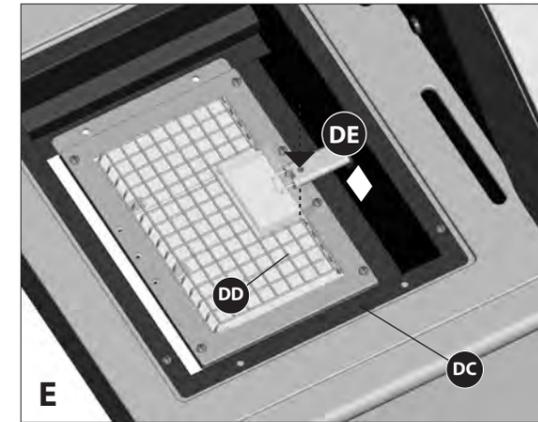


e. Feed the infrared electrode (DE) from underneath the infrared side burner (DD), through the small opening on the right side of the infrared support frame (DC). Align and assemble the electrode using the self tapping screw provided, as shown in figure E.

YOU WILL NEED:

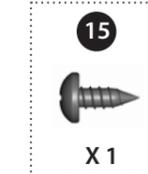


f. Position the cooking grate (DG) on the infrared support frame (DC).

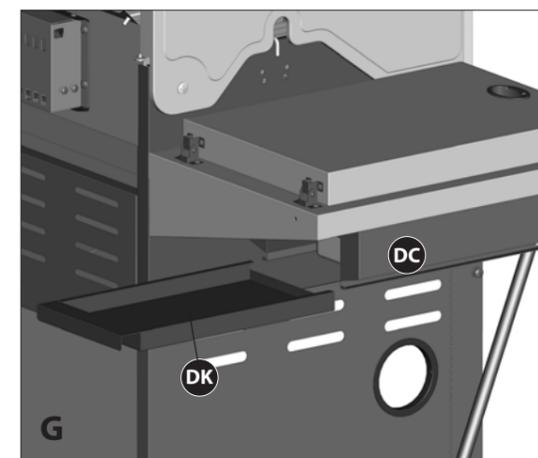


g. Insert the infrared grease tray (DK) into the bottom of the infrared support frame (DC).


11

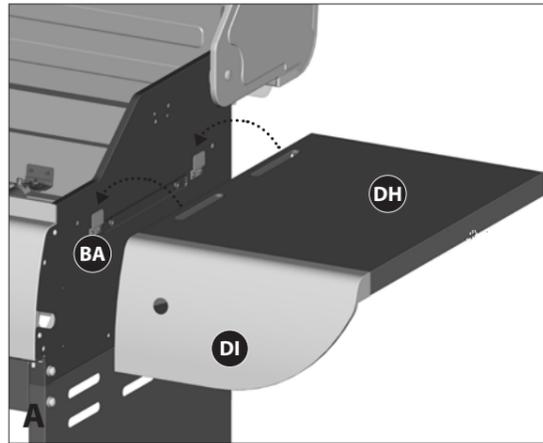


Front, right side view

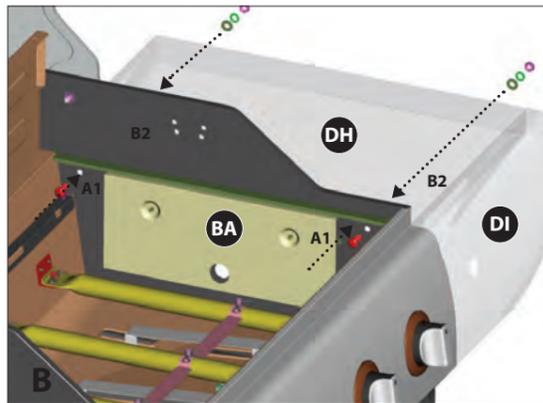

View inside burner box

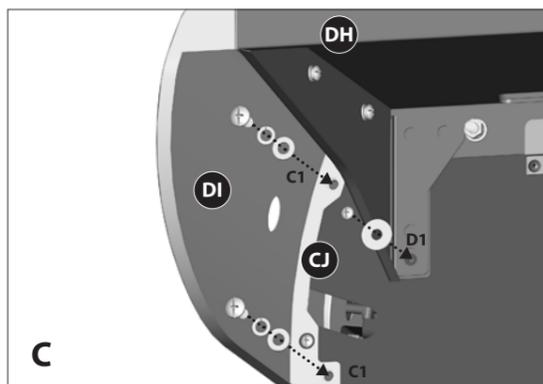

View, under right side shelf

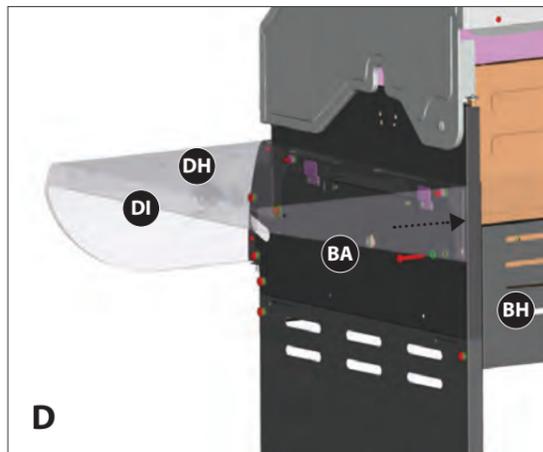

Back, right side view

RIGHT SIDE SHELF ASSEMBLY

TIP: Do not tighten until all hardware is in place.

a. Mount the right side shelf (DH and DI) onto the two support brackets, located on the right, upper side panel of the burner box (BA).

b. Assemble the right side shelf (DH and DI) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box, as shown in figure B.

YOU WILL NEED:

| A1 | | B2 | |
|-----|-----|-----|-----|
| 2 | 17 | 6 | 4 |
| | | | |
| X 2 | X 2 | X 2 | X 2 |

c. Assemble the front of the right side shelf (DH and DI) to the control panel (CJ), as shown in figure C.

YOU WILL NEED:


| C1 | | | D1 | |
|-----|-----|-----|-----|-----|
| 2 | 5 | 6 | 16 | 9 |
| | | | | |
| X 2 | X 2 | X 2 | X 1 | X 1 |

d. Complete the right side burner side shelf assembly (DI and DH) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.

YOU WILL NEED:

| | | |
|-----|-----|-----|
| 1 | 5 | 6 |
| | | |
| X 1 | X 1 | X 1 |

12

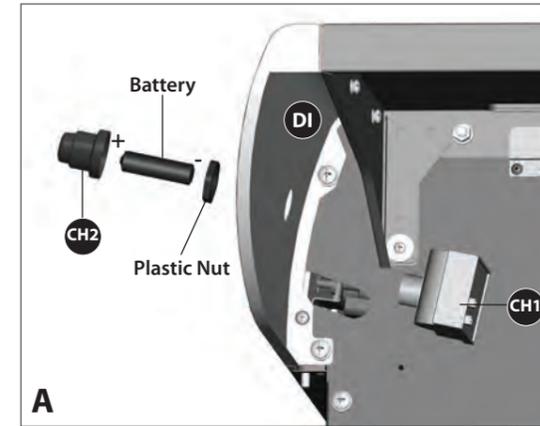

View, under right side shelf

ELECTRONIC IGNITION ASSEMBLY


- Remove the electronic ignition button (CH2) and the plastic nut from the Electronic Igniter Assembly (CH1)
- Position the Electronic Igniter Assembly (CH1) through the opening in the Right Side Shelf Fascia (DI) and secure using the plastic nut.
- Insert one "AA" battery into the battery compartment (CH1) with the positive end facing outward, as shown. Secure using the electronic ignition button (CH2).

*** Battery not included.**


Note: All wire connectors are the same.

- Insert the Electrode Sets, for the Main Burner (CI), the infrared side burner (DE), and the rotisserie burner (BM), into the Electronic Igniter Assembly (CH1). (Figure B, C and D)


Ensure that the wire is pushed in firmly.

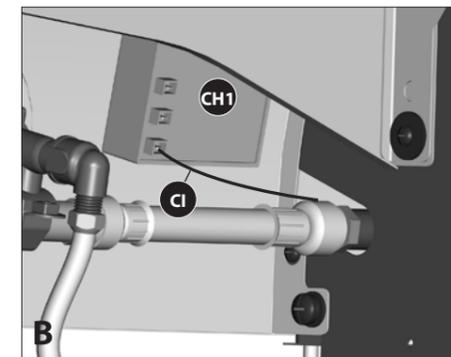

View, under right side shelf

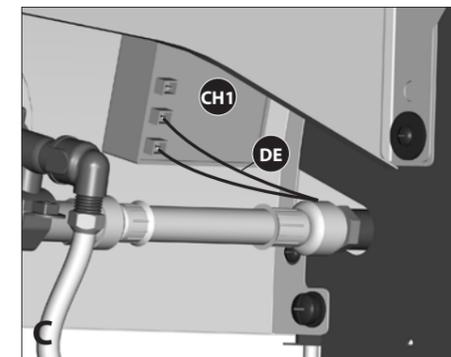



View, under right side shelf

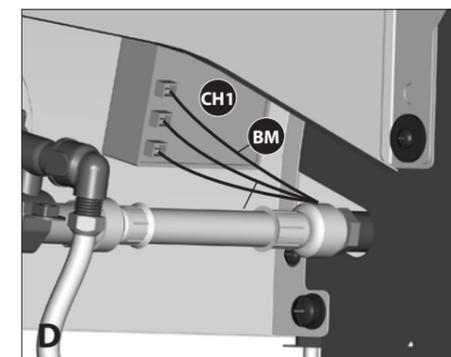

View, under right side shelf

ASSEMBLY INSTRUCTIONS

13

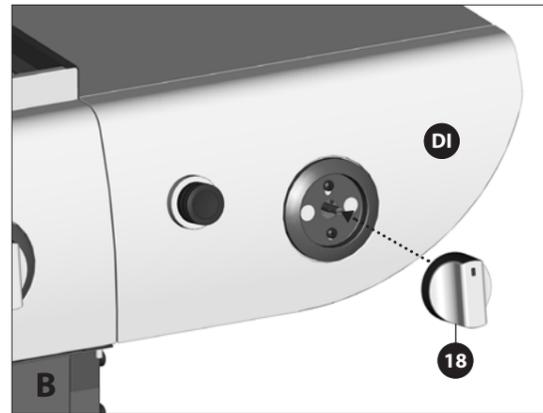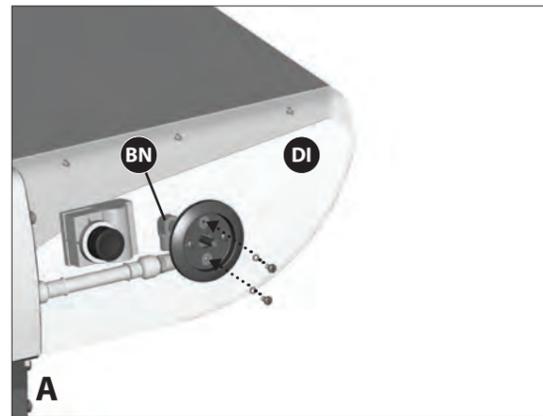

- a. Remove the hardware that is pre-assembled to the Rotisserie Burner Valve (BN), as shown in figure A


Assemble the Rotisserie Burner Valve (BN) to the Right Side Shelf Fascia (DI), using the hardware removed.

- b. Assemble the Side Burner Control Knob (#18) to the Rotisserie Burner Valve (BN).

YOU WILL NEED:



14

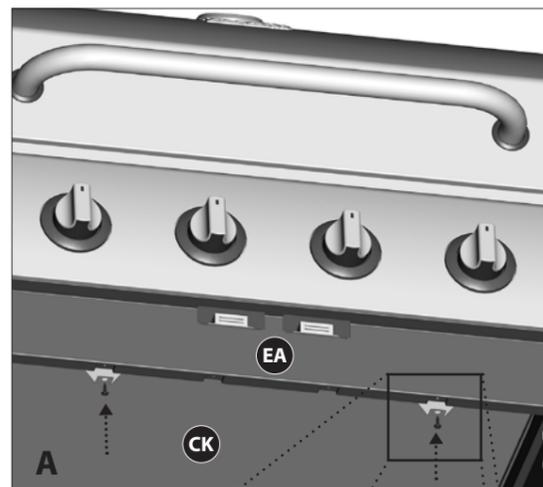


Front view



Close up


Assemble the Heat Shield (CK) to the bottom of the Door Support Rail (EA) and the Upper back panel (BH), as shown in figure A and B.

YOU WILL NEED:

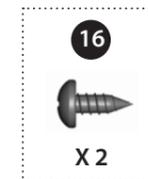


ASSEMBLY INSTRUCTIONS

14

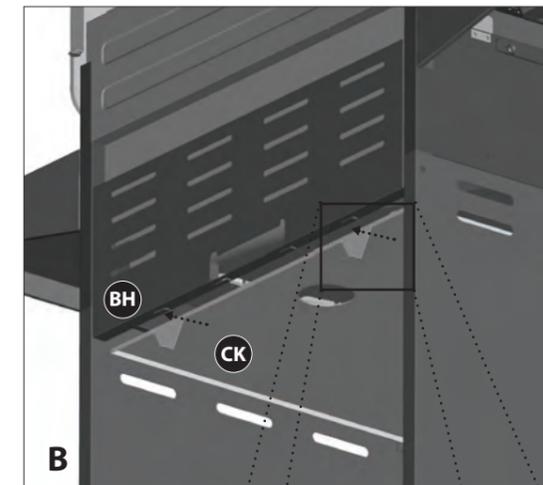


Back view

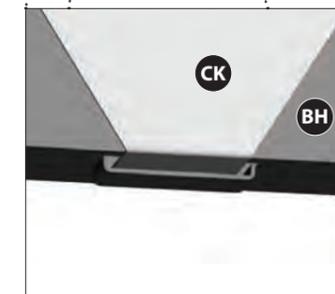


Close up

15

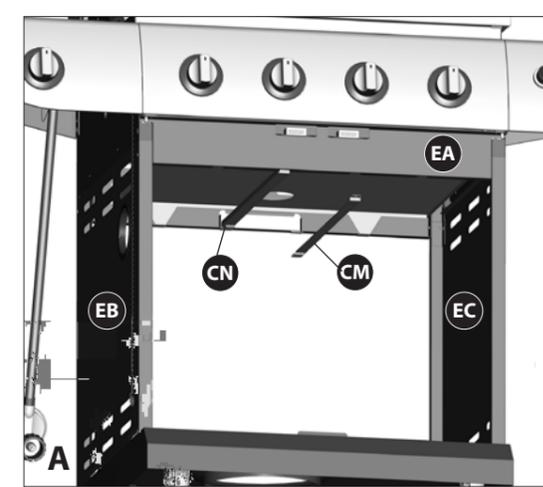


Front view

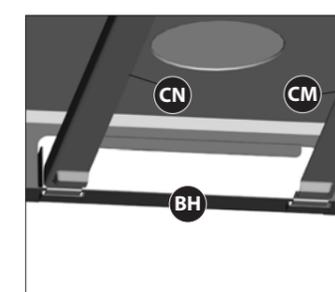

Close up


- a. Assemble the Left and Right Tracks (CN and CM) for the Grease Tray (CL), as shown in figure A.

YOU WILL NEED:

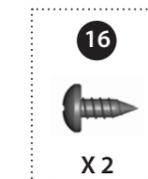


ASSEMBLY INSTRUCTIONS

15

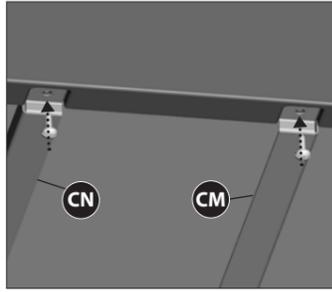


Close up, front

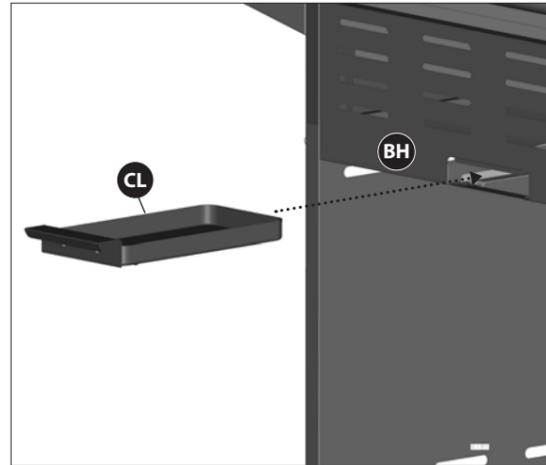

Back view

b. Insert the Grease Tray (CL) into the opening of the Upper Back Panel (BH).


16

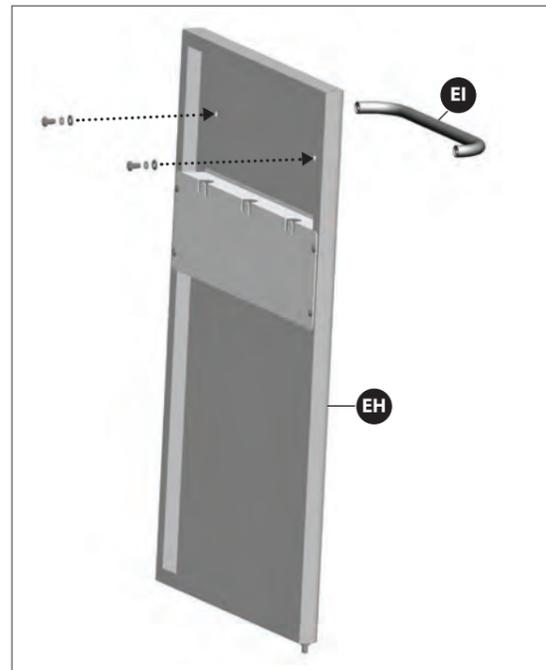

Assemble the Door Handle (EI) to the Left and Right Door Assembly (EG and EH).


Left door handle

YOU WILL NEED:

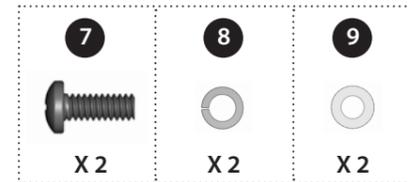


Right door handle

YOU WILL NEED:

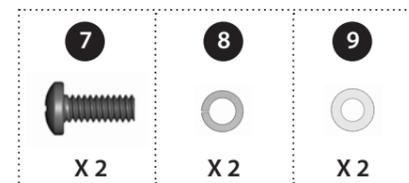


ASSEMBLY INSTRUCTIONS

17

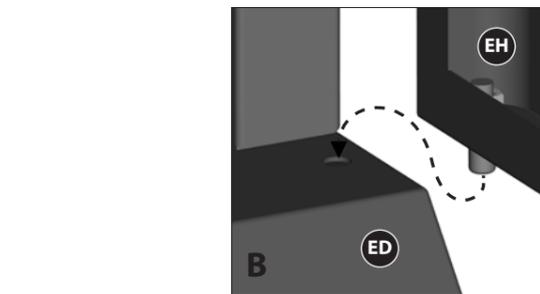

Close up, bottom of door

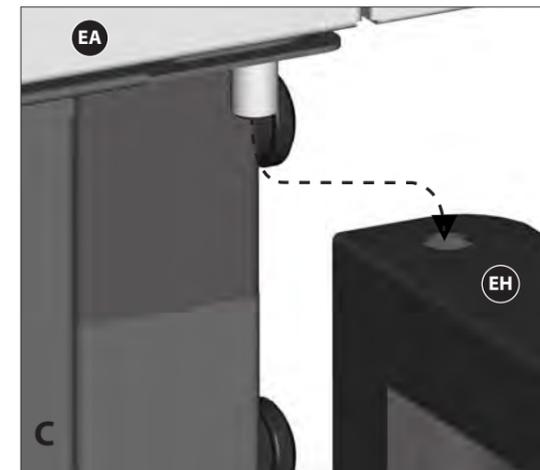

Top of door

a. Assemble the right door assembly (EH), to the bottom shelf (ED) by inserting the fixed pin (bottom of door) into the hole provided (figure B).


b. Assemble the top of the door assembly (EH) to the door support rail (EA), by pressing in the door support pin and aligning with the hole located on the top right corner of the door (figure C).

TIP: Use a paint scraper to press-in the support pin, while the second person aligns the door. The support pin will lock into position when the door is assembled correctly.


c. Repeat steps a, and b for the left door assembly (EG).

ASSEMBLY INSTRUCTIONS


18

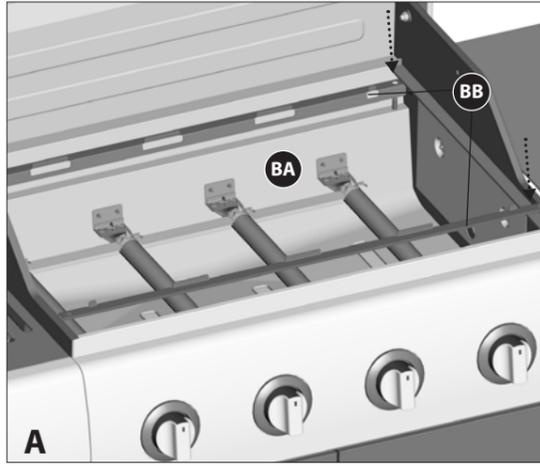

a. Position the Flame Tamer support braces (BB) over the Burner Box support pins (BA) as shown.

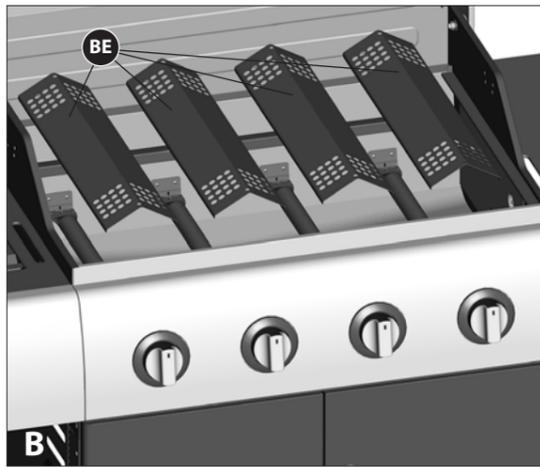


b. Position the Flame Tamers (BE) into the Burner Box (BA).

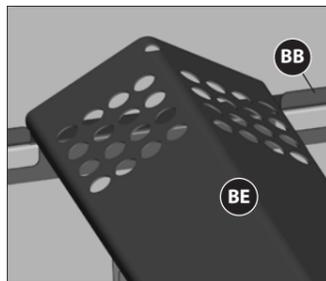

Close up


ASSEMBLY INSTRUCTIONS

19

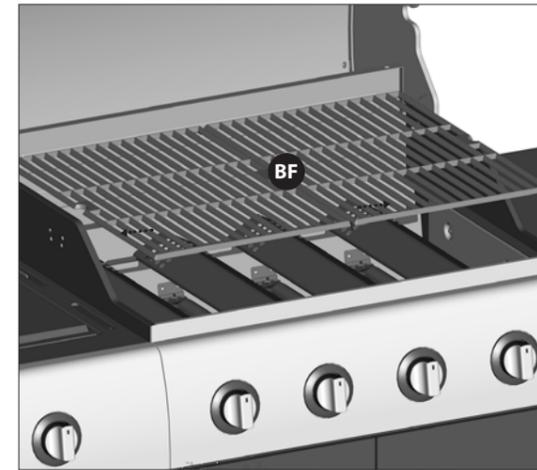

Place the cooking grates (BF) into the burner box (BA).



20

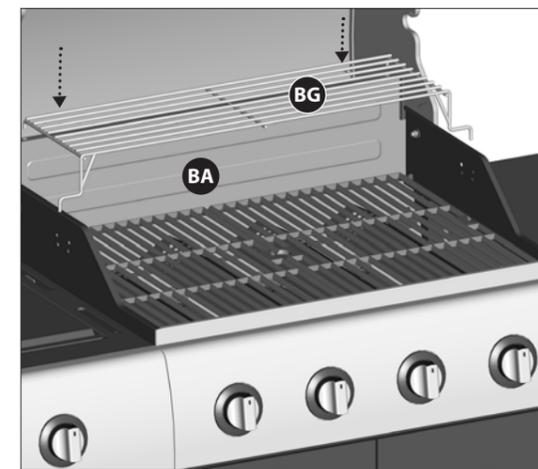

Insert the two small positioning rods of the warming rack (BG) into the rear panel of the burner box (BA).

ASSEMBLY INSTRUCTIONS

21

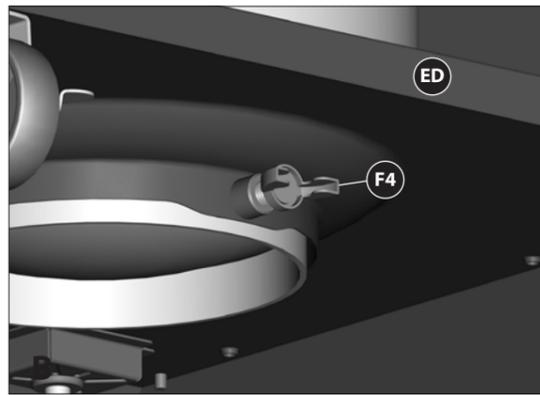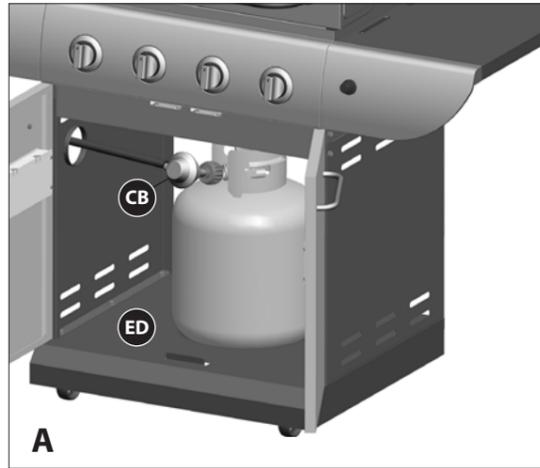

FOR PROPANE MODEL ONLY

FOR NATURAL GAS MODEL, FOLLOW STEP 22.


- Position the 20 lb propane tank onto the Bottom Shelf (ED), and secure using the bolt (already attached) located on the underside of the Bottom Shelf (ED), as shown in figure B.
- Attach the Regulator coupling nut (CB) to the LP cylinder valve.

⚠ ATTENTION ⚠
FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBQ.

⚠ ATTENTION ⚠
DO NOT STORE EXTRA PROPANE TANKS WITHIN BBQ CART.

22

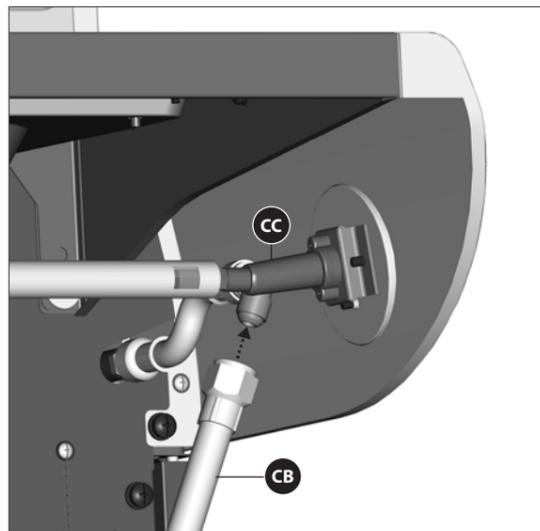

FOR NATURAL GAS MODEL ONLY

Attach the Natural Gas Hose (CB) to the IR Side Burner Valve (CC) as shown.

⚠ ATTENTION ⚠
In order to complete installation of your Natural Gas BBQ a 1/2" or 3/8" adapter may be required to connect your BBQ's Natural Gas hose to your home gas supply. Contact your Natural Gas supplier to purchase the necessary part.

⚠ ATTENTION ⚠
FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBQ.

MASTER
ChefTM

Visit www.masterchefbbqs.com
to complete product registration
Master Chef® Customer Service
1-877-707-5463