


MASTER
Chef[™]

COOKING GRID

Part Number: 085-2338-4

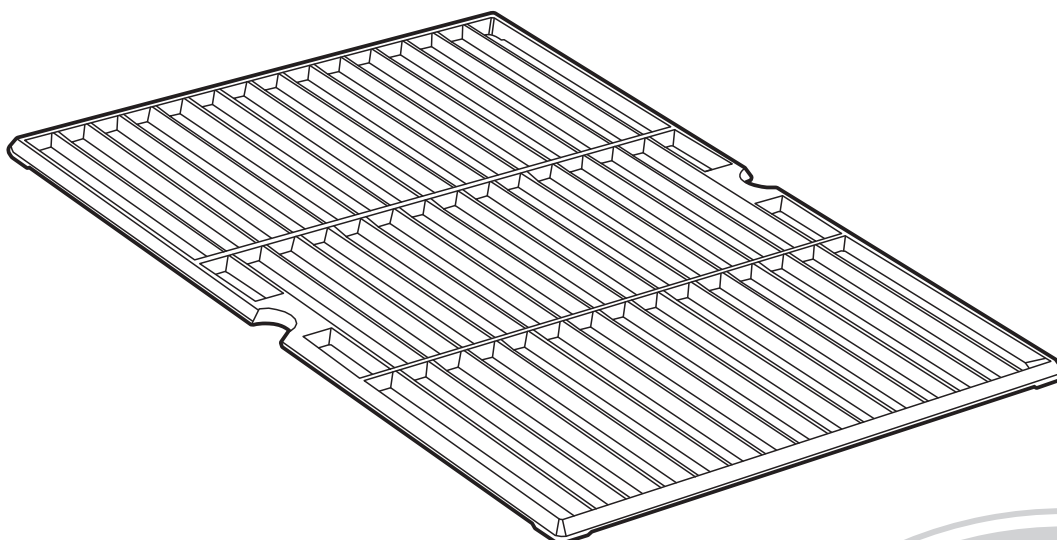

CARE AND SAFETY INSTRUCTIONS

EXACT FIT FOR THE FOLLOWING MODELS:

085-3040-4 (G45301/G45306), 085-3041-2 (G45302/G45307),
085-3044-6 (G45303/G45308/G45311), 085-3045-4 (G45304/G45309/G45312),
085-3098-8 (G45313), 085-3099-6 (G45314), 085-3102-8 (G45321),
085-3103-6 (G45322), 085-3106-0 (G45315/G45319),
085-3107-8 (G45316/G45320), 085-3137-6 (G45323/G45324),
085-3138-4 (G45325), 098-1085-0 (G45326),
399-3656-4 (G45327), 085-3138-4 (G45329)

The Master Chef[®] Cooking Grid is an OEM part for use with
Master Chef[®] Elite, Grill Turismo[™], and E-Series 4 Burner Barbecues ONLY.

GRILL TURISMO[™]

elite

Read and save manual for future reference.

CARE AND MAINTENANCE

TIPS:

Always protect cooking grids against rust/corrosion, water, humidity, and moisture damage by following the seasoning steps outlined below.

SEASONING INSTRUCTIONS:

1. Brush away build-up with a barbecue grill brush.
2. Wash cooking grids with soap and water.
3. Rinse and **dry thoroughly** with a towel.

IMPORTANT: Never allow cooking grids to soak or stay wet.

4. Coat entire cooking grid, top, bottom, sides and each rod with vegetable shortening. DO NOT use salted fats such as margarine, butter, or any non-stick cooking spray. Do not use olive oil as it burns off at high temperatures.
5. Place your cooking grids in your barbecue. Following proper lighting procedure and preheat your barbecue for up to 20 minutes, with your controls set to medium/high heat.
6. Following 20 minute preheat, shut the barbecue down and allow the cooking grids to completely cool to complete the seasoning process.

REPEAT seasoning steps whenever, your barbecue cooking grids, appear dry, show signs of corrosion or when foods are sticking to the surface.

BEFORE EACH USE:

- Prior to preheating the barbecue, remove all build up from cooking grids using a barbecue grill brush.
- Always prep cooking grids with a light coating of vegetable shortening or vegetable oil.

LIMITED 1-YEAR WARRANTY

Read and save manual for future reference. Assemble your cooking grid immediately. Missing or damaged parts should be claimed within 30 days of purchase. For product inquires, parts, warranty and troubleshooting support, please call 1-855-453-2150.