



280S Barbeque Assembly Manual

85-3002-6 (G20716) Propane

1 YEAR LIMITED WARRANTY

READ AND SAVE MANUAL FOR FUTURE REFERENCE. If pre-assembled, leave this manual with unit for consumer's future reference.

For product inquiries, parts, warranty and troubleshooting support, please call 1-877-707-5463.

HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories, or to register your warranty, please visit us on the web at

www.masterchefbbgs.com.

A CAUTION

Sharp edges. Wear gloves when assembling your grill.

A CAUTION

Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.

INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the BBQ at all times.

WARNING A

Failure to follow all of the Manufacturer's instructions could result in hazardous fires, explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light this barbecue without reading the Lighting Instructions section of this manual.

DANGER

- 1. If you smell Gas:
- a. Shut off gas to the appliance
- b. Extinguish any open flame
- c. Open lid
- d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
- 2. Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.
- 3. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
- 4. Requires two people to complete the assembly process.
- 5. Beware of sharp edges.

HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- 1/4" Slotted screwdriver (long and short)
- Adjustable wrench
 - Pliers


Before assembling the barbecue, read these instructions carefully.

Assemble the barbecue on a flat, clean surface. Grill is heavy. You should have at least two people assemble the barbecue together.

Notes: Do not fully tighten all the nuts during this initial stage.

A Caution:

Sheet metal can cause injury. Wear gloves when installing the grill.

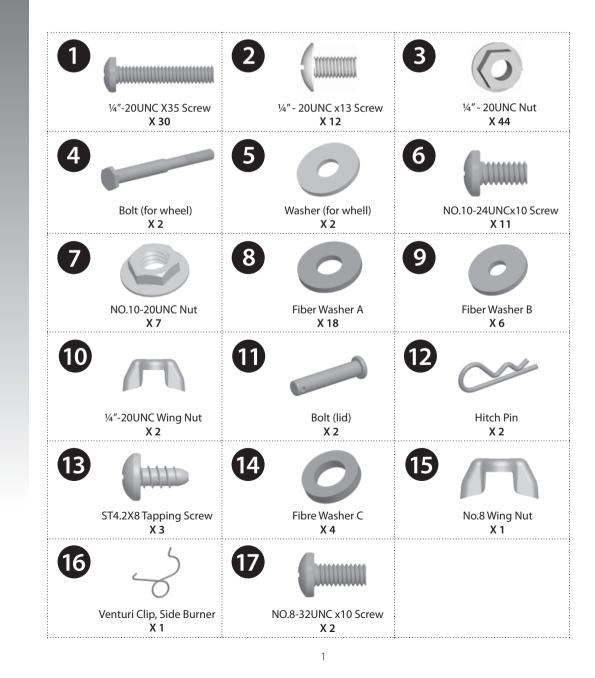


THIS BARBECUE IS FOR OUTDOOR USE ONLY **CONTACT CALL CENTRE IF ANY PARTS ARE MISSING** 1-877-707-5463


KEY #	DESCRIPTION	PART NUMBER	QUANTITY
1	1/4"-20UNC X35 Screw	20120-13035-036	30
2	1/4"-20UNC X13 Screw	20120-13013-036	12
3	1/4"-20UNC Nut	31220-13000-036	44
4	Bolt (for wheel)	C423-0045-9084	2
5	Washer (for wheel)	G301-0028-9084	2
б	NO.10-24UNCx10 Screw	20124-10010-036	11
7	NO.10-20UNC Nut	31224-10000-036	7
8	Fibre Washer A	G431-0018-9000	18
9	Fibre Washer B	G437-0050-9000	6
10	1/4"-20UNC Wing Nut	33300-13000-032	2
11	Bolt (lid)	G306-0004-9188	2
12	Hitch Pin	G306-0005-9088	2
13	ST4.2X8 Tapping Screw	24200-42008-136	3
14	Fibre Washer C	G437-0049-9000	4
15	No.8 Wing Nut	33300-08000-032	1
16	Venturi Clip, Side Burner	G405-0019-9200	1
17	NO.8-32UNCx10 Screw	20132-08010-036	2

PARTS LIST (PROPANE) FOR 85-3002-6 (G20716)

KEY #	QUANTITY	DESCRIPTION	PART NO.
AA	1	Top lid assembly	G208-0001-01
AB	1	Top lid handle	G305-0090-01
AC	2	Upper hinge	G206-0002-A1
DA	1	Dumper have a second have	C205 0010 02
BA	1	Burner box assembly	G205-0010-02
BB	2	Lower hinge	G206-0010-A1
BC	1	Cooking grate	G206-0006-01
BD	1	Flame tamer	G210-0003-01
BE	1	Burner	G207-2400-01
BF1	1	Collector Box	G206-0014-02
BF2	1	Electrode	G208-0045-01
BH	1	Heat shield	G207-0032-01
CA	1	Control panel	
СВ	3	Control knob	G401-0023-01
CC	1	Ignitor	G206-0301-01
CD	1	Valve assembly	G208-3801-01
CE	1	Regulator	G602-0050-01
CF	1	Warming rack	G205-0040-01
DA	4	Cart legs	G207-0023-01
DB	2	Support brace	G207-0024-01
DC	2	Burner box support	G206-0017-02
DD	1	Grease cup hook	G305-0043-01
DE	1	Grease cup	G430-0033-02
DF	1	Gas tank support	G207-0027-01
DG	1	Tank exclusion	G207-0026-01
DH	2	Bottom brace	G207-0025-01
DI	2	Wheel	G206-0025-01
DJ	2	End cap	G206-0022-01
DK	1	Condiment basket	G206-0047-01
DL	1	Front panel	G207-0800-01
EA	1	Side shelf, right	G206-0065-01
EA	1	Side shelf, right Sideburner table (left)	
EB	1		G207-0900-01
EC	1	Sideburner drip pan	G304-0016-02
ED	1	Side burner	G207-1000-01
EE	1	Metal hose	G208-0023-01
EF	1	Side burner valve	G207-0031-01
EG	1	Electrode set, sideburner	G305-0084-01
EH	1	Sideburner grate	G303-0022-01
F1	1	Manual	G207-M016-01
F2	1	Hardware pack	G207-B016-01
F3	1	Safe Use and Care Manual	G207-M015-02
1.5	l	Sale Use and Cale Manual	G207-W015-0

EXPLODED DIAGRAM (PROPANE) FOR 85-3002-6 (G20716)

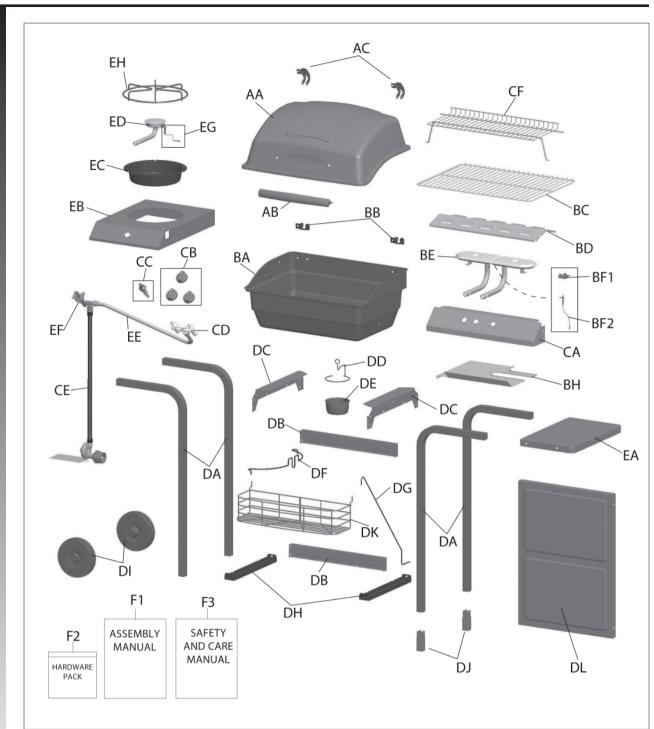


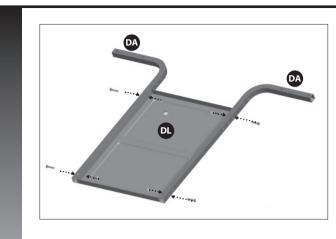


TWO PEOPLE REQUIRED FOR ALL ASSEMBLY STEPS.

a. Front Cart Assembly: assemble the front panel (DL) to two cart legs (DA) as shown.


YOU WILL NEED:



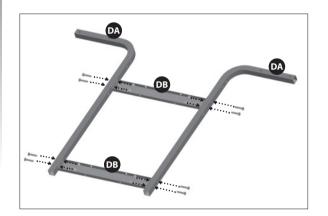


b. Back Cart Assembly: assemble two support braces (DB) to the remaining two cart legs (DA), as shown.


YOU WILL NEED:



2

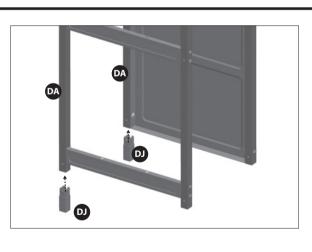


a. Assemble the end caps (DJ), to the bottom of the right side cart legs (DA).

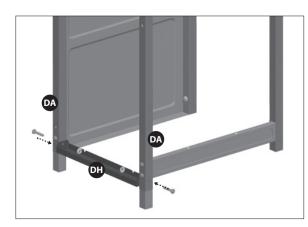


b. Assemble the right bottom brace (DH) to the front and back cart legs (DA), as shown.

Tip: Bottom brace (DH) grooves should be facing upward. Tighten all hardware securely.


YOU WILL NEED:



ASSEMBLY INSTRUCTIONS

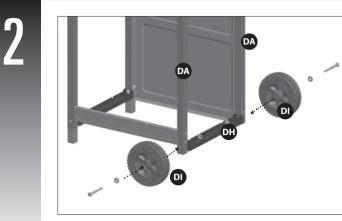

VIEW FROM THE BACK OF THE CART ASSEMBLY

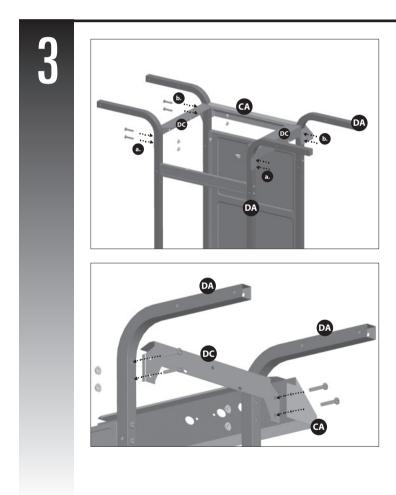

c. Assemble the wheels (DI) to the left cart legs (DA) and bottom brace (DH), as shown.




a. Assemble the rear left burner box support bracket (DC) and rear right burner box support bracket first (DC)


Tip: One person should align the burner box support brace and control panel, while the second person assembles the hardware

b. Assemble the control panel (CA) together with the front left and right burner box support (DC)

Only tighten all hardware once correct

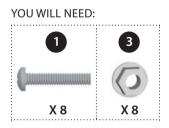



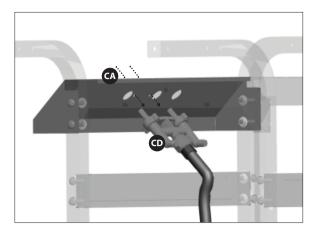


a. Position the valve assembly (CD) through the back of the control panel (CA), and assemble.

YOU WILL NEED:





c. Assemble the igniter (CC) through the front of the control panel (CA), as shown.

b. Position the control knobs (CB) onto valve assembly stems (CD).

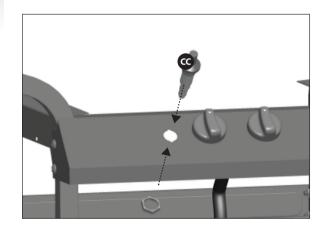

ASSEMBLY INSTRUCTIONS

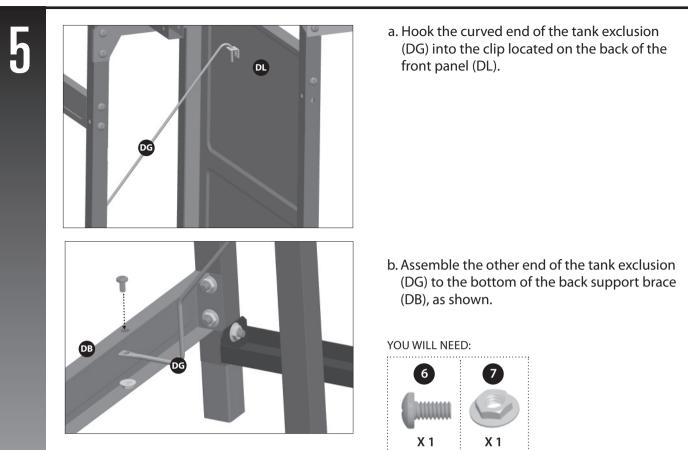


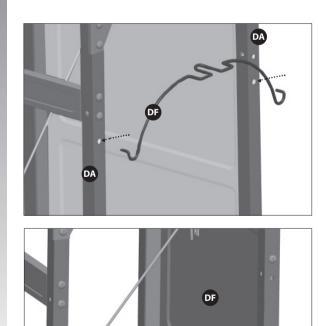


6


c. Attach the gas tank support (DF) to the left side cart legs (DA).




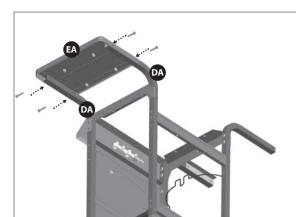


View from the back of cart assembly

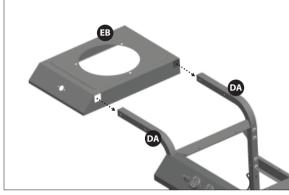

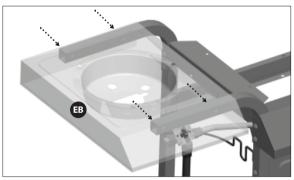

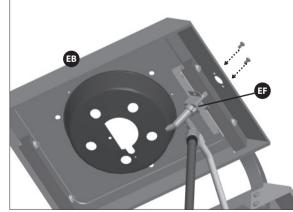


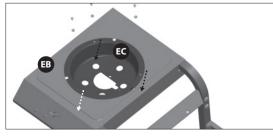

SIDE SHELF ASSEMBLY


a. Assemble the right side shelf (EA) to the right cart legs (DA), as shown.

YOU WILL NEED:



b. Assemble the left side burner table (EB) to the left cart legs (DA) by sliding the side burner table on to the cart legs as shown.

YOU WILL NEED:




c. Assemble the side burner valve assembly (EF) to the side burner control panel (EB).

YOU WILL NEED:




d. Assemble the side burner drip pan (EC) to the side burner table (EB), as shown.

YOU WILL NEED:



ASSEMBLY INSTRUCTIONS

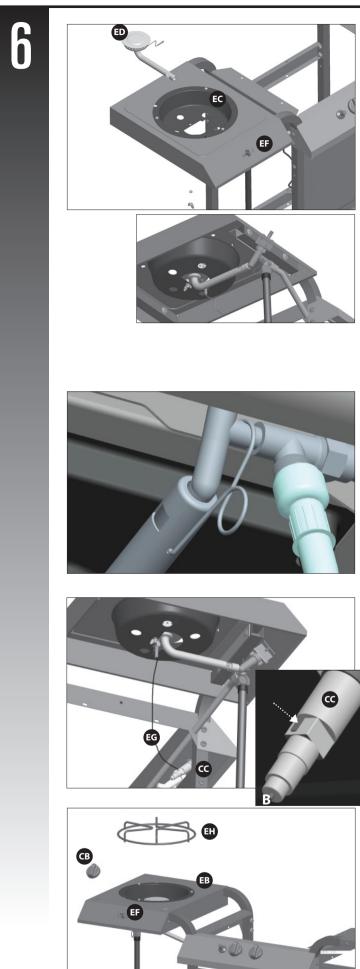

e. Position the side burner (ED) through the opening in the side burner drip pan (EC). Make sure the side burner (ED) engages the side burner valve (EF), and assemble.



f. Connect the side burner (ED) to the side burner valve (EF), using the venturi clip (#16), as shown.


YOU WILL NEED:



g. Attach the end of the side burner electrodewire (EG) to the ignitor (CC) as shown in figureB. Ensure that the wire is pushed in firmly.

- h. Place the side burner cooking grate (EH) into position on the side burner shelf (EB).
- i. Position the side burner control knob (CB) over the side burner valve stem (EF).


7

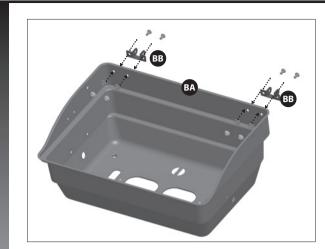




a. Assemble the lower hinge (BB) x 2 on the back of the burner box assembly (BA), as shown.

YOU WILL NEED:




- b. Assemble hardware into burner box assembly (BA), as shown. *Note: This hardware will be used in a later step to support the flame tamer (BD).*


YOU WILL NEED:



ASSEMBLY INSTRUCTIONS




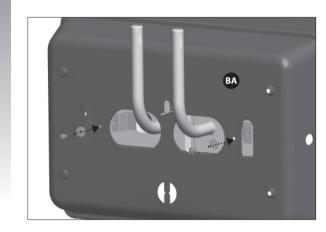

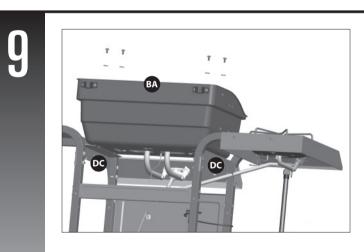


Assemble the burner (BE) into the burner box assembly (BA), with the burner venturi tubes facing forward.

YOU WILL NEED:




Position the burner box assembly (BA) onto the burner box supports (DC).

Before assembling make sure the burner (BE) engages the valve assembly (CD).

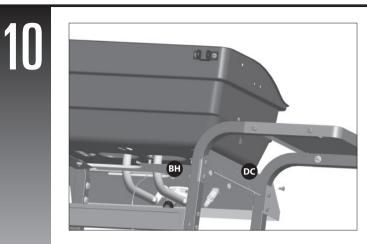



Assemble the heat shield (BH) to the inside of the left burner box support (DC), as shown.

YOU WILL NEED:




CAUTION: SHARP EDGES, WEAR SAFETY GLOVES DURING ASSEMBLY

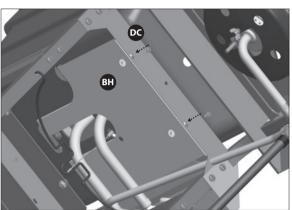


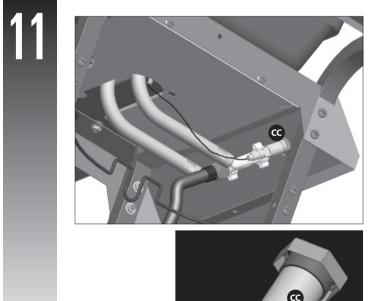



Attach the electrode wire (BF2) to the igniter (CC).

ASSEMBLY INSTRUCTIONS

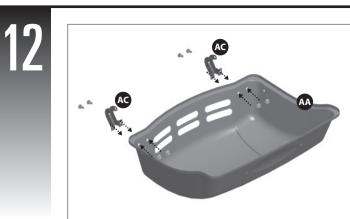


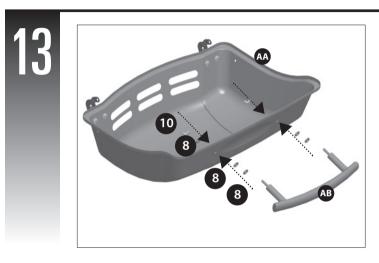

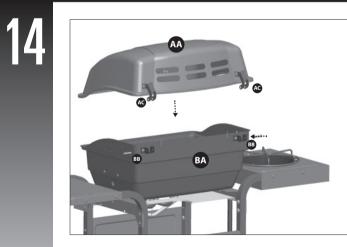


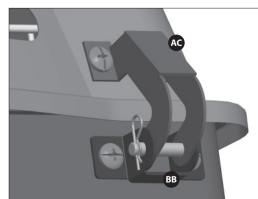

Assemble the upper hinge (AC x2) to the top lid assembly (AA).

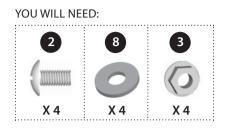


Assemble the top lid handle (AB) to the top lid assembly (AA).

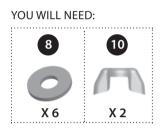


To assemble the top lid assembly (AA) to the burner box assembly (BA), position the upper hinges (AC) in between the lower hinges (BB), position hardware and lock into place using the hitch pins.

YOU WILL NEED:







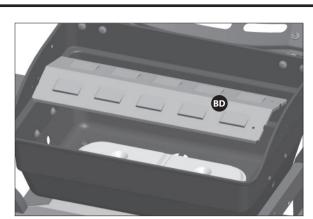



Position the flame tamer (BD) into the burner box assembly (BA). *Note: The flame tamer (BD) should be placed on to the hardware assembled in Step 7b.*

ASSEMBLY INSTRUCTIONS

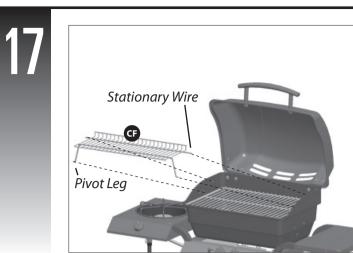

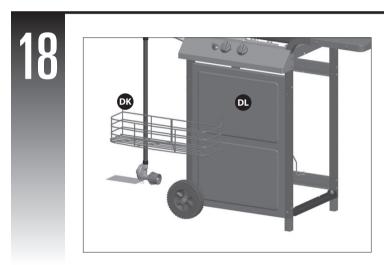

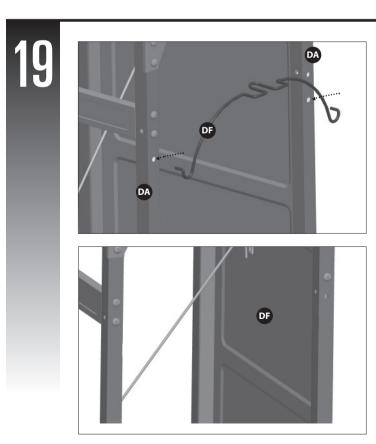

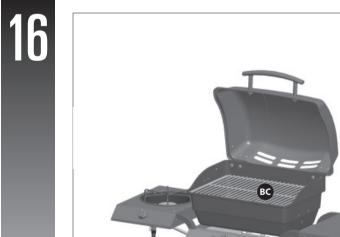

Position the cooking grate (BC) into the burner box assembly (BA).

To assemble the warming racks (CF) insert the stationary wire into the holes on the sides of the lid. Insert warming rack pivot legs into the holes on the inside of the burner box assembly, as shown.

Attach the condiment basket (DK) onto front panel (DL).

Attach the gas tank support (DF) to the left side cart legs (DA).

20



Hook the grease cup hook (DD) to the bottom of the burner box assembly (BA), as shown. Place the grease cup (DE) into the grease cup hook (DD).

