



E480 Barbecue Assembly Manual


85-3040-4 (G45306) Propane
85-3041-2 (G45307) Natural Gas
1 YEAR LIMITED WARRANTY

READ AND SAVE MANUAL FOR FUTURE REFERENCE.

Assemble your grill immediately.

Missing or damaged parts claims must be submitted within 30 days of purchase date.

**For product inquiries, parts, warranty and troubleshooting support,
please call 1-855-453-2150.**

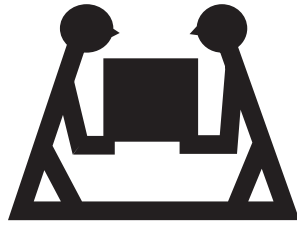

HEAVY ARTICLE NEEDS 2 TO LIFT

THIS MANUAL MUST REMAIN WITH THE PRODUCT AT ALL TIMES

To ORDER non-warranty replacement parts or accessories, or to register your warranty, please visit us on the web at
www.masterchefbbqs.com

⚠ CAUTION

Sharp edges. Wear gloves when assembling your grill.

⚠ CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.

⚠ INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the BBQ at all times.

⚠ WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires, explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of barbecue, even if grill was dealer assembled. Do not try to light this barbecue without reading the Lighting Instructions section of this manual.

⚠ DANGER

1. If you smell Gas:
 - a. Shut off gas to the appliance
 - b. Extinguish any open flame
 - c. Open lid
 - d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department
 2. Requires two people to complete the assembly process.
 3. Beware of sharp edges.
-

⚠ WARNING

1. Do not store or use gasoline or other flammable liquids or vapours in the vicinity of this or any other appliance.
 2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
-

⚠ WARNING

IN DIRECT SUN, AND IN OPERATION, YOUR BBQ'S STAINLESS STEEL AND PAINTED STEEL PARTS CAN BECOME VERY HOT.

THIS BARBECUE IS FOR OUTDOOR USE ONLY

CONTACT CALL CENTRE IF ANY PARTS ARE MISSING

1-855-453-2150

HARDWARE PACK

TOOLS NEEDED FOR ASSEMBLY

- #2 Phillips screwdriver (long and short)
- ¼" Slotted screwdriver (long and short)
- Adjustable wrench
- Pliers
















Before assembling the barbecue, read these instructions carefully.

Assemble the barbecue on a flat, clean surface. Grill is heavy. You should have at least two people assemble the barbecue together.

Notes: Do not fully tighten all the nuts during this initial stage.

KEY #	DESCRIPTION	PART NUMBER	QUANTITY
1	¼"-20UNCX38 Screw	20120-13038-250	8
2	¼"-20UNCX18 Screw	20120-13018-250	8
3	¼"-20UNCX13 Screw	20120-13013-250	6
4	¼" Nut	30220-13000-250	4
5	φ7 Lock Washer	41400-07000-250	18
6	φ7 Washer	40300-07000-250	22
7	NO.10-24UNCX10 Screw	20124-10010-250	4
8	φ5 Lock Washer	41400-05000-250	4
9	φ5 Washer	40300-05000-250	7
10	M4 Wing Nut	33301-04000-032	1
11	ST4.2X10 Tapping Screw	22500-42010-137	7
12	Fiber Washer	G501-0054-9100	4
13	Control knob	G453-0049-01	1
14	Castor Pin	G350-0026-9000	1
15	Venturi Clip, Side Burner	G405-0019-9200	1


⚠ Caution:
Sheet metal can cause injury. Wear gloves when installing the grill.

<p>1</p>  <p>¼"-20UNCX38 Screw X 8</p>	<p>2</p>  <p>¼"-20UNCX18 Screw X 8</p>	<p>3</p>  <p>¼"-20UNCX13 Screw X 6</p>
<p>4</p>  <p>¼" Nut X 4</p>	<p>5</p>  <p>φ7 Lock Washer X 18</p>	<p>6</p>  <p>φ7 Washer X 22</p>
<p>7</p>  <p>NO.10-24UNCX10 Screw X 4</p>	<p>8</p>  <p>φ5 Lock Washer X 4</p>	<p>9</p>  <p>φ5 Washer X 7</p>
<p>10</p>  <p>M4 Wing Nut X 1</p>	<p>11</p>  <p>ST4.2X10 Tapping Screw X 7</p>	<p>12</p>  <p>Fiber Washer X 4</p>
<p>13</p>  <p>Control knob X 1</p>	<p>14</p>  <p>Castor Pin X 1</p>	<p>15</p>  <p>Venturi Clip, Side Burner X 1</p>

PARTS LIST (PROPANE) FOR 85-3040-4 (G45306)

KEY #	QUANTITY	DESCRIPTION	PART NO.
AA	1	Top lid	G453-5100-01
AB	1	Lid handle	G513-0004-01
AC	1	Thermometer	G432-R200-01
AD	2	Screw for top lid	G453-0025-01
AE	2	Lid bumper, front	G508-0063-01
AF	2	Lid bumper, rear	G508-0033-01
BA	1	Burner box assembly	G453-3100-01
BB	2	Brace, flame tamer	G453-0004-01
BC	4	Main burner	G517-7300-01
BD	3	Carryover assembly	G614-0095-01
BE	4	Flame tamer	G453-0020-01
BF	2	Cooking grate	G453-0019-01
BG	1	Warming rack	G453-0018-01
BH	1	Upper back panel	G453-0010-01
BI	1	Match holder	G501-0068-01
CA	1	Manifold assembly-LP	G453-3300-01
CB	1	Regulator	G606-0008-01
CC	4	Control knob	G453-0049-01
CD	4	Bezel, control knob	G501-0031-01
CE1	1	Electronic igniter assembly	G409-0021-02
CE2	1	Electronic ignition button	G409-0030-01
CF	1	Electrode set, main burner	G515-0067-01
CG	1	Control panel	G453-0050-01
CH	1	Heat shield	G453-0011-01
CI	1	Grease tray	G350-4400-01
CJ	1	Right track	G453-0013-01
CK	1	Left track	G453-0012-01
DA	1	Side burner shelf table - Left	G453-0600-01
DB	1	Side burner shelf fascia - Left	G453-0021-01
DC	1	Side burner lid	G501-0070-01
DD	1	Side burner drip pan	G515-0083-01
DE1	1	Side burner valve-LP	G453-0007-01
DE2	1	Side burner metal hose	G608-0039-01
DF	1	Side burner	G453-3400-01
DG	1	Side burner electrode wire	G515-0039-01
DH	1	Side burner cooking grate	G501-0077-01
DI	1	Side shelf table - Right	G453-0700-01
DJ	1	Side shelf fascia - Right	G453-0022-01
EA	1	Door support rail	G453-5000-01
EB	1	Cart side panel-Left	G453-0300-01
EC	1	Cart side panel-Right	G453-0400-01
ED	1	Bottom shelf-LP	G453-0500-01
EE	2	Locking castor	G350-0023-01
EF	2	Castor	G350-0024-01
EG	1	Left door assembly	G453-6300-01
EH	1	Right door assembly	G453-6400-01
EI	2	Door handle	G453-0053-01
EJ	2	Magnet assembly	G501-0016-01
F1	1	Hardware pack	G453-B001-03
F2	1	Assembly instructions	G453-M006-01
F3	1	Safe use and care manual	G453-M006-02
F4	1	Tank screw	G505-0047-01

EXPLODED DIAGRAM (PROPANE) FOR 85-3040-4 (G45306)

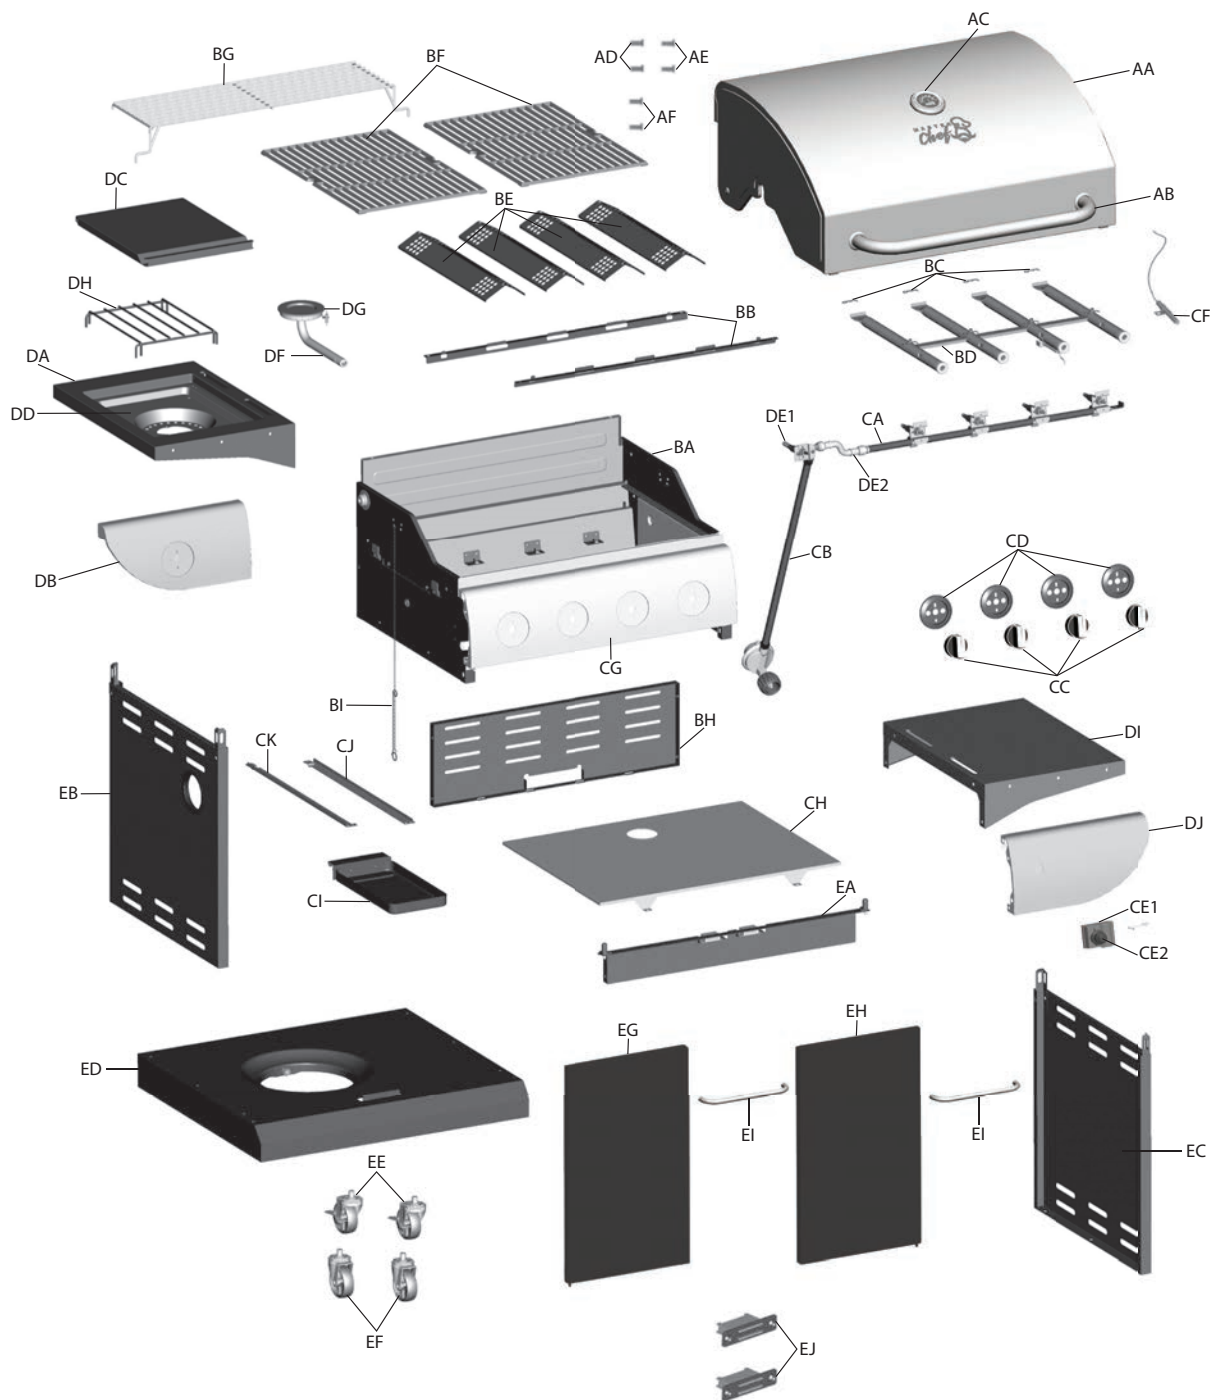

F1	F2	F3	F4
HARDWARE PACK	ASSEMBLY MANUAL	SAFETY AND CARE MANUAL	TANK SCREW

PARTS LIST (NATURAL GAS) FOR 85-3041-2 (G45307)


KEY #	QUANTITY	DESCRIPTION	PART NO.
AA	1	Top lid	G453-5100-01
AB	1	Lid handle	G513-0004-01
AC	1	Thermometer	G432-R200-01
AD	2	Screw for top lid	G453-0025-01
AE	2	Lid bumper, front	G508-0063-01
AF	2	Lid bumper, rear	G508-0033-01
BA	1	Burner box assembly	G453-3100-01
BB	2	Brace, flame tamer	G453-0004-01
BC	4	Main burner	G517-7300-01
BD	3	Carryover assembly	G614-0095-01
BE	4	Flame tamer	G453-0020-01
BF	2	Cooking grate	G453-0019-01
BG	1	Warming rack	G453-0018-01
BH	1	Upper back panel	G453-0010-01
BI	1	Match holder	G501-0068-01
CA	1	Manifold assembly-NG	G453-3700-01
CB	1	Natural gas hose	G501-0099-01
CC	4	Control knob	G453-0049-01
CD	4	Bezel, control knob	G501-0031-01
CE1	1	Electronic igniter assembly	G409-0021-02
CE2	1	Electronic ignition button	G409-0030-01
CF	1	Electrode set, main burner	G515-0067-01
CG	1	Control panel	G453-0050-01
CH	1	Heat shield	G453-0011-01
CI	1	Grease tray	G350-4400-01
CJ	1	Right track	G453-0013-01
CK	1	Left track	G453-0012-01
DA	1	Side burner shelf table - Left	G453-0600-01
DB	1	Side burner shelf fascia - Left	G453-0021-01
DC	1	Side burner lid	G501-0070-01
DD	1	Side burner drip pan	G515-0083-01
DE1	1	Side burner valve-NG	G453-0024-01
DE2	1	Side burner metal hose	G608-0039-01
DF	1	Side burner	G453-3400-01
DG	1	Side burner electrode wire	G515-0039-01
DH	1	Side burner cooking grate	G501-0077-01
DI	1	Side shelf table - Right	G453-0700-01
DJ	1	Side shelf fascia - Right	G453-0022-01
EA	1	Door support rail	G453-5000-01
EB	1	Cart side panel-Left	G453-0300-01
EC	1	Cart side panel-Right	G453-0400-01
ED	1	Bottom shelf-NG	G453-1000-01
EE	2	Locking castor	G350-0023-01
EF	2	Castor	G350-0024-01
EG	1	Left door assembly	G453-6300-01
EH	1	Right door assembly	G453-6400-01
EI	2	Door handle	G453-0053-01
EJ	2	Magnet assembly	G501-0016-01
F1	1	Hardware pack	G453-B001-03
F2	1	Assembly instructions	G453-M006-01
F3	1	Safe use and care manual	G453-M006-02

This exploded view diagram illustrates the components of a built-in gas grill. The parts are labeled as follows:


- AA**: Main grill body
- AB**: Front handle
- AC**: Control knob
- AD**: Control panel (left)
- AE**: Control panel (right)
- AF**: Control panel (center)
- BG**: Top vent cover
- BF**: Top vent cover (left)
- BE**: Top vent cover (right)
- BC**: Burner tube (left)
- BD**: Burner tube (right)
- CB**: Gas line with shut-off valve
- CE1**: Gas valve (left)
- CE2**: Gas valve (right)
- CD**: Burner assembly (left)
- CC**: Burner assembly (right)
- DE1**: Burner assembly (left)
- DE2**: Burner assembly (right)
- CA**: Burner assembly (center)
- BA**: Main grill body (front view)
- CG**: Control panel (front)
- BH**: Control panel (back)
- CH**: Main grill body (bottom)
- EA**: Main grill body (side)
- EG**: Main grill body (left side)
- EH**: Main grill body (right side)
- EI**: Main grill body (top)
- EJ**: Main grill body (bottom)
- EB**: Main grill body (left side)
- ED**: Main grill body (right side)
- DI**: Main grill body (top)
- DJ**: Main grill body (bottom)
- DA**: Main grill body (left side)
- DD**: Main grill body (right side)
- DB**: Main grill body (top)
- DF**: Main grill body (bottom)
- DG**: Main grill body (left side)
- DH**: Main grill body (right side)
- BI**: Main grill body (top)
- CK**: Main grill body (bottom)
- CJ**: Main grill body (left side)
- CI**: Main grill body (right side)
- EE**: Main grill body (left side)
- EF**: Main grill body (right side)

ASSEMBLY INSTRUCTIONS

1

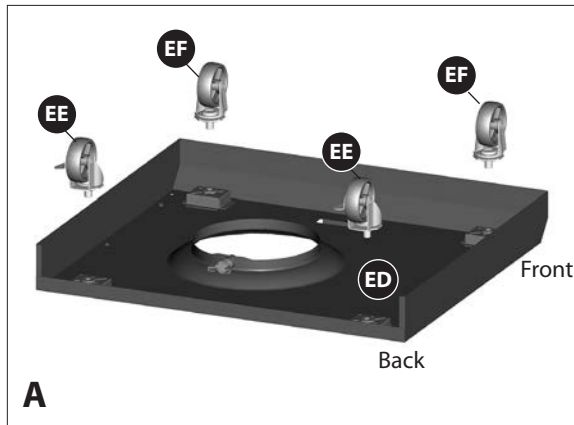

Upside down view

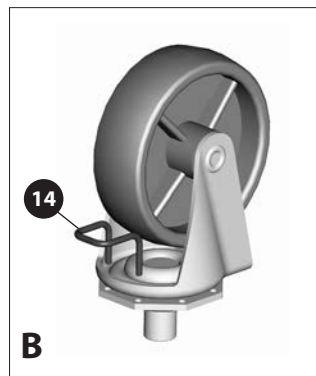

Close Up

Separate the 2 different types of castors: 2 Locking Castors (EE) and 2 Regular Castors (EF).

Note: Regular Castors (EF) need to be assembled to the front of the Bottom Shelf (ED), and Locking Castors (EE) need to be assembled to the back of the Bottom Shelf (ED), as shown in image A.

Attach the Regular Castor (EF) to the front of the Bottom Shelf (ED), and use the Pin Tool (#14) to secure and tighten.

Repeat for remaining 3 castors (EE & EF).


YOU WILL NEED:



2




Front view

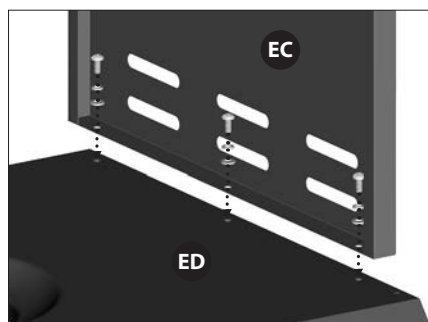

Close Up


Ensure that the Locking Castors (EE) are firmly locked in the "ON" position before continuing. Assemble the Left Side Panel (EB) and the Right Side Panel (EC), to the Bottom Shelf (ED).

YOU WILL NEED:

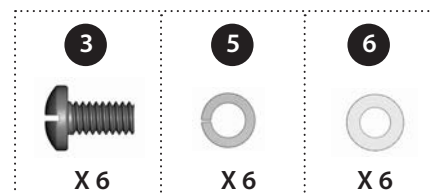

ASSEMBLY INSTRUCTIONS

3

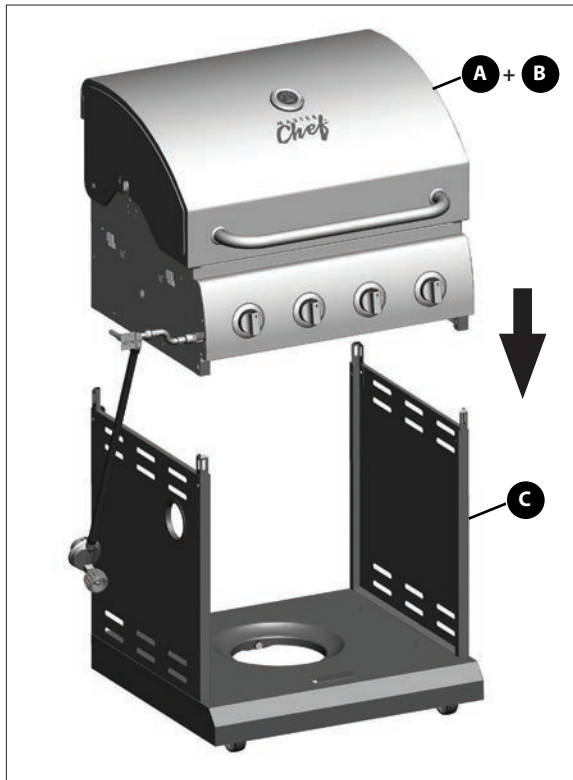


Front View

THIS STEP REQUIRES 3 PEOPLE. DO NOT ATTEMPT ALONE. EXTREMELY HEAVY!

Position the Top Lid Assembly and Burner Box Assembly (A & B) onto the Cart Assembly (C), as shown.

4

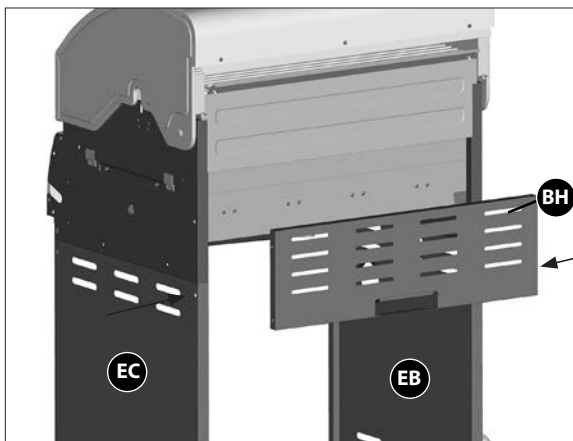




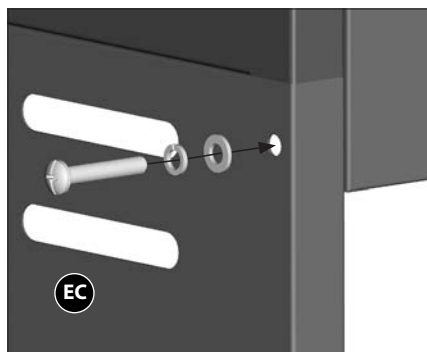
Back View

Attach the Upper Back Panel (BH) to both the Left And Right Side Panels (EB & EC).

Attention: Assembly of the Upper Back Panel (BH) will be completed in Step 7 and 10.

YOU WILL NEED:


1	5	6
		
X 2	X 2	X 2




Close Up

ASSEMBLY INSTRUCTIONS

5

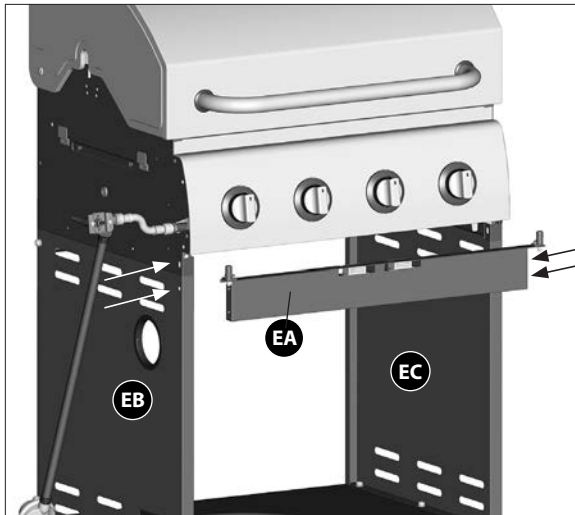

Front View

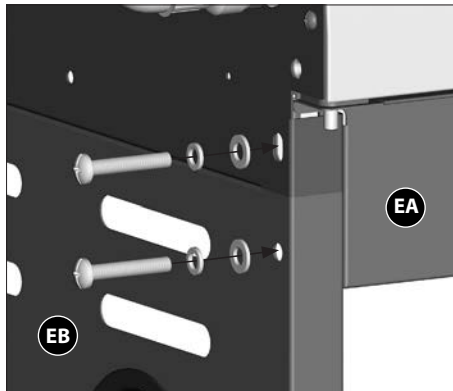


Close Up


Assemble the Door Support Rail (EA) to the Left and Right Upper Side Panels (EB and EC), as shown.

WARNING: This part may have sharp edges. Wear protective gloves when assembling.

YOU WILL NEED:

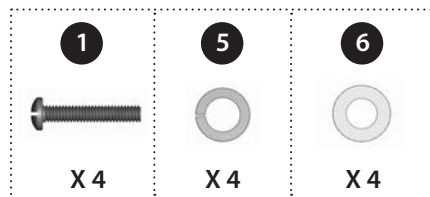


6

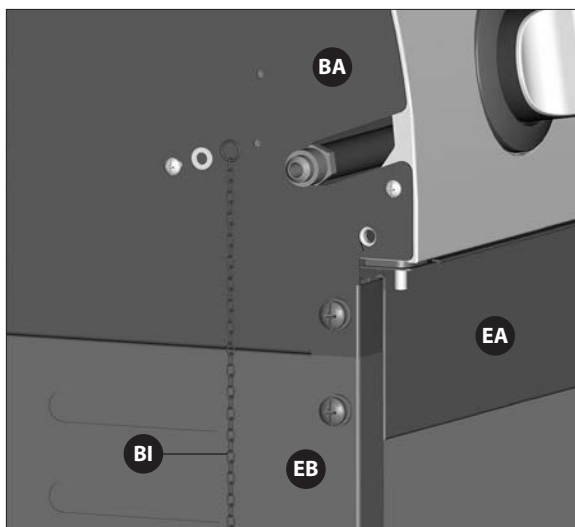


Attach the Match Holder (BI) to the left side panel of the Burner Box Assembly.

YOU WILL NEED:

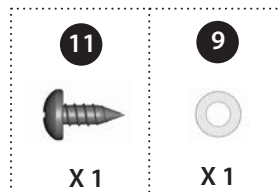


ASSEMBLY INSTRUCTIONS


7

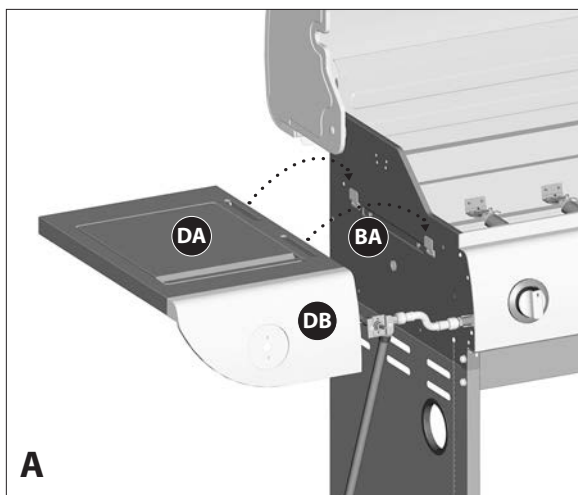


Front, left side view

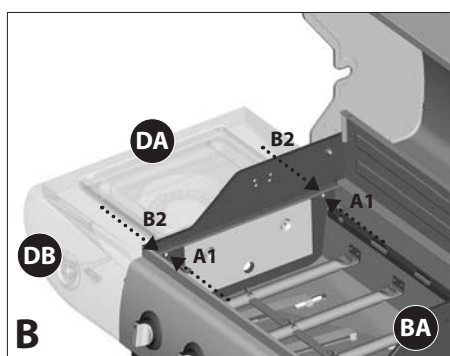

View inside burner box

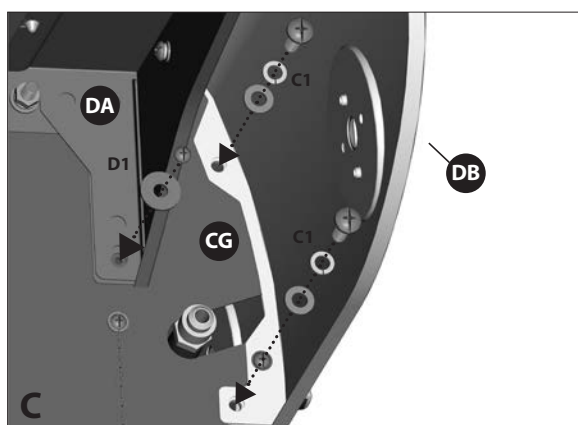

Front, Left side view

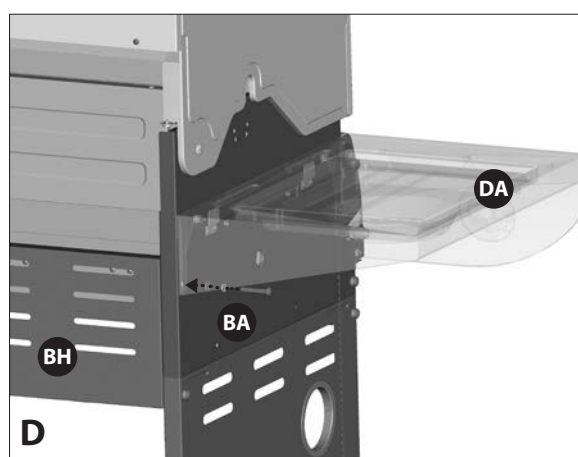

Back, Left side view

LEFT SIDE SHELF ASSEMBLY

TIP: Do not tighten until all hardware is in place.

- Mount the left side burner side shelf (DA and DB) onto the two support brackets, located on the left, upper side panel of the burner box (BA).

- Assemble the left side burner side shelf (DA and DB) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box (BA), as shown in figure B.

YOU WILL NEED:

A1		B2	
2	12	6	4
X 2	X 2	X 2	X 2

- Assemble the front of the left side burner side shelf assembly (DA and DB) to the control panel (CG), as shown in figure C.

YOU WILL NEED:

C1			D1	
2	5	6	11	9
X 2	X 2	X 2	X 1	X 1


- Complete the left side burner side shelf assembly (DA and DB) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.

YOU WILL NEED:

1	5	6
X 1	X 1	X 1


ASSEMBLY INSTRUCTIONS

8

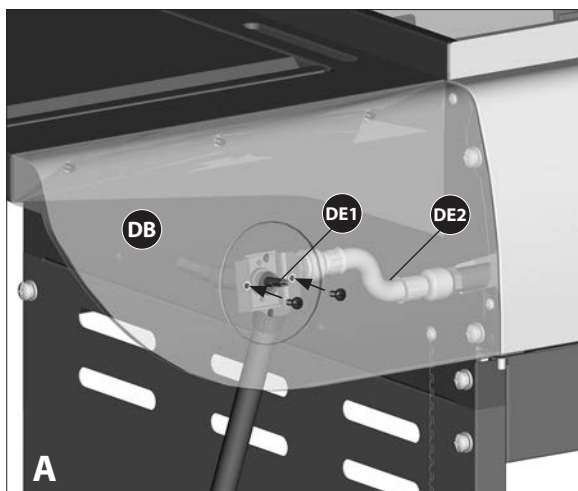

- a. Remove the hardware that is pre-assembled to the Side Burner Valve (DE1), as shown in figure A

Assemble the Side Burner Valve (DE1) to the Left Side Shelf Fascia (DB), using the hardware removed.

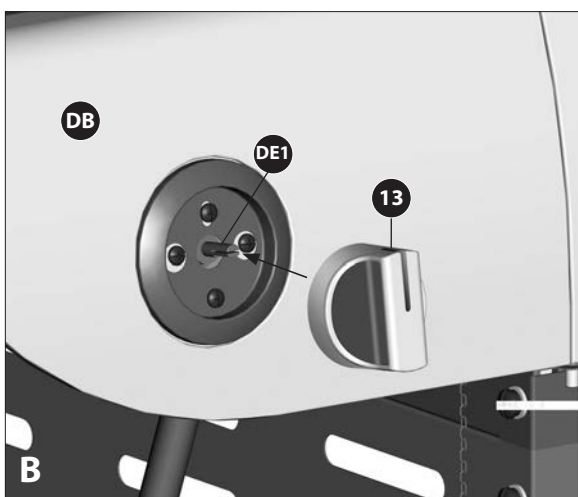


- b. Assemble the Side Burner Control Knob (#13) to the Side Burner Valve (DE1).

YOU WILL NEED:




9

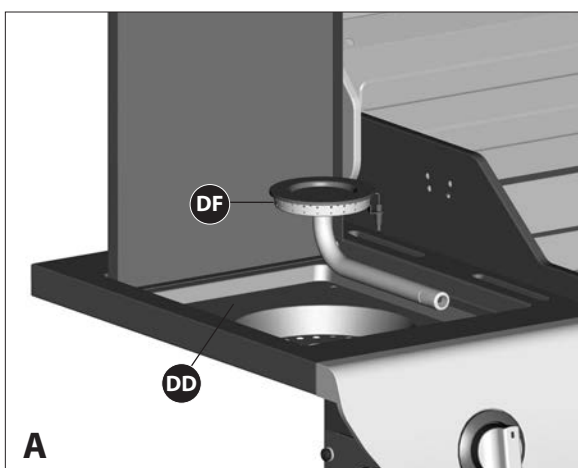




- a. Position the Side Burner (DF) through the opening in the Left Side Burner Drip Pan (DD).

ASSEMBLY INSTRUCTIONS

9

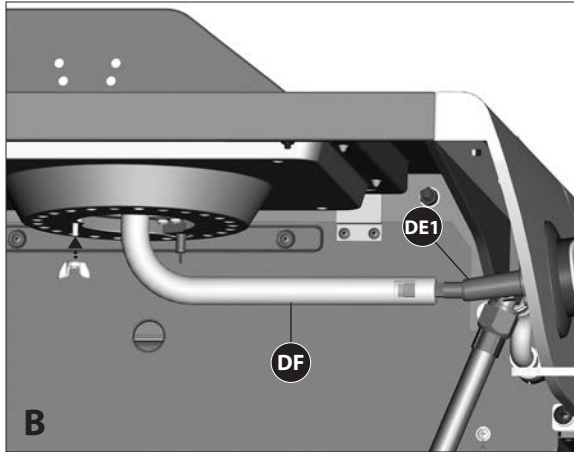

Left side view

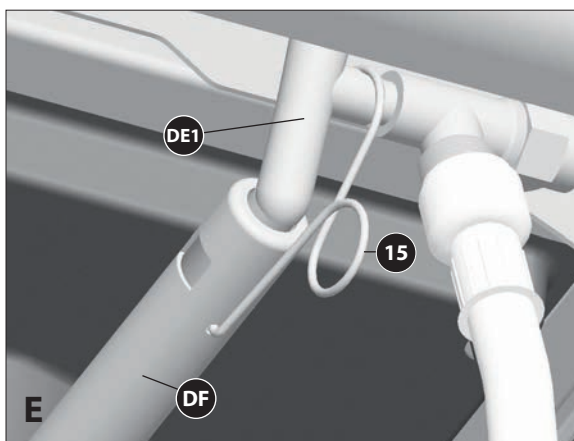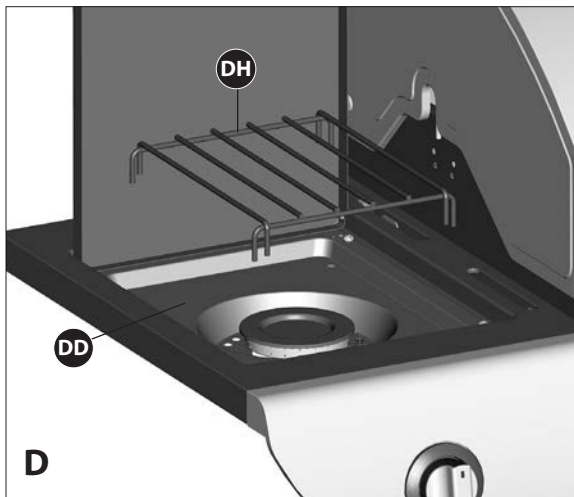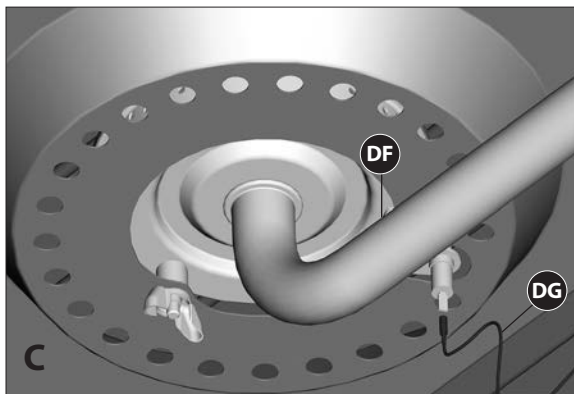

- b. Make sure that the Side Burner (DF) engages the Side Burner Valve (DE1). Attach the Wing Nut (#10) to the side burner (DF), as shown in figure B.

YOU WILL NEED:



- c. Attach the end of the Side Burner Electrode Wire (DG) to the underside of the Side Burner Electrode (DF), as shown. Ensure that the wire is pushed in firmly.

- d. Position the side burner cooking grate (DH) onto the side burner drip pan (DD).


- e. Use the side burner Venturi clip (#15) to connect the side burner (DF) to the side burner valve (DE1).

YOU WILL NEED:




ASSEMBLY INSTRUCTIONS


10

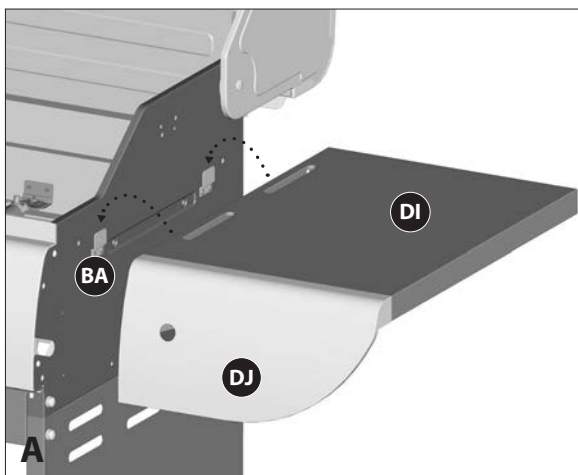


Front, right side view

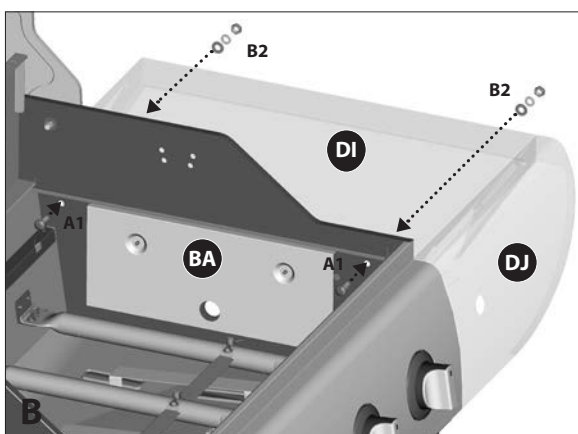

View inside burner box

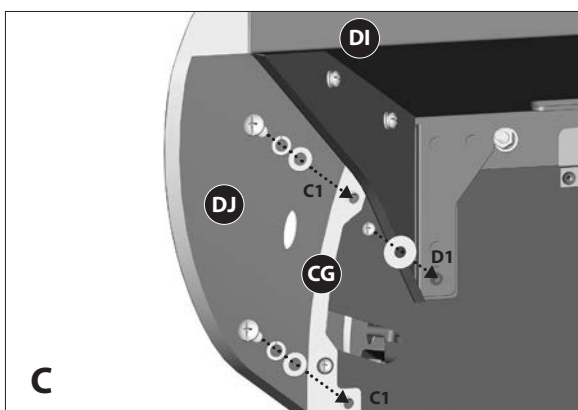

View, under right side shelf

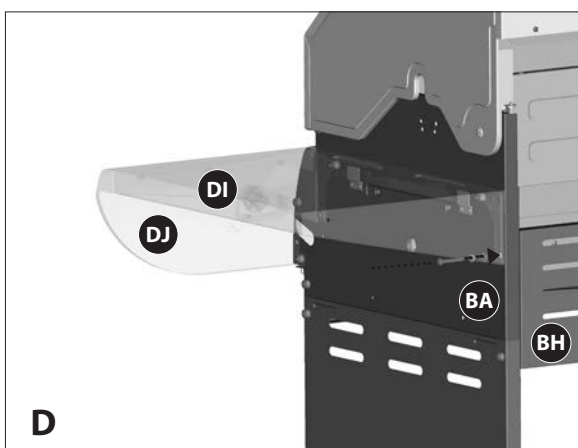

Back, right side view





RIGHT SIDE SHELF ASSEMBLY

TIP: Do not tighten until all hardware is in place.

a. Mount the right side shelf (DI and DJ) onto the two support brackets, located on the right, upper side panel of the burner box (BA)






b. Assemble the right side shelf (DI and DJ) to the upper side panel of the burner box (BA), by positioning hardware through the interior of the burner box, as shown in figure B.

YOU WILL NEED:

A1		B2	
2	12	6	4
			
X 2	X 2	X 2	X 2




c. Assemble the front of the right side shelf (DI and DJ) to the control panel (CG), as shown in figure C.

YOU WILL NEED:


C1			D1	
2	5	6	11	9
				
X 2	X 2	X 2	X 1	X 1

d. Complete the right side burner side shelf assembly (DI and DJ) by connecting the side shelf, the rear of the Burner Box side panel (BA), and the Upper Back Panel (BH), as shown in figure D.


YOU WILL NEED:

1	5	6
		
X 1	X 1	X 1


11

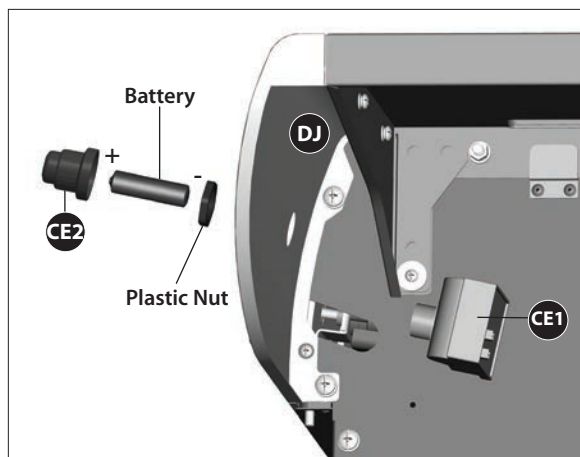

Underneath right side shelf

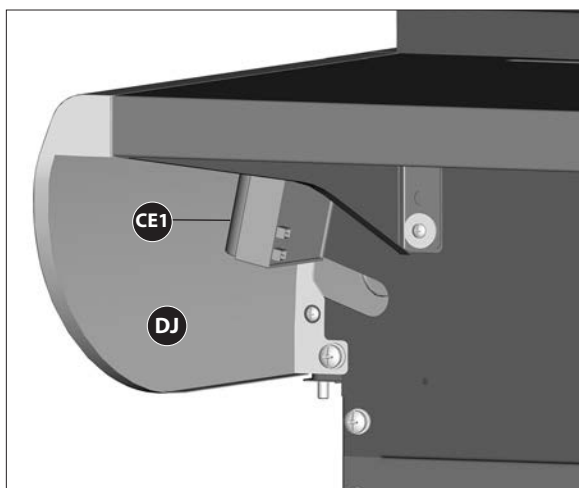

Underneath right side shelf

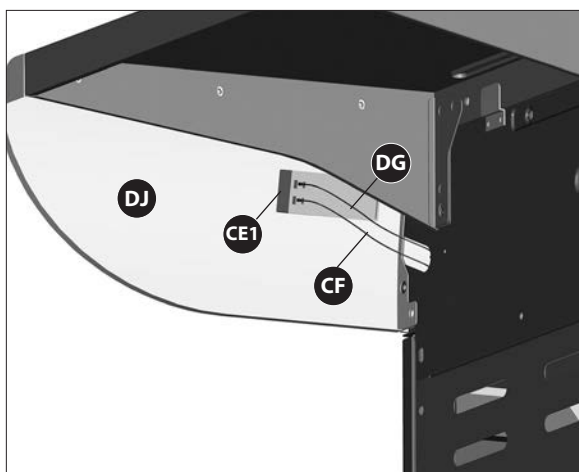

Underneath right side shelf

ELECTRONIC IGNITION ASSEMBLY

- Remove the Ignition Battery Cover (CE2) and the plastic nut from the Electronic Ignition Box (CE1).
- Position the Electronic Ignition Box (CE1) through the opening in the Right Side Shelf Fascia (DJ) and secure using the plastic nut.
- Insert one "AA" battery into the battery compartment (CE1) with the positive end facing outward, as shown. Secure using the ignition button cover (CE2).


*** Battery not included.**

- Insert the Electrode Set, Main Burner Wire (CF) and the Side Burner Electronic Wire (DG) into the Electronic Ignition Assembly (CE1) as shown. Ensure that the wires are pushed in firmly.


Note: Both wire connectors are the same.

ASSEMBLY INSTRUCTIONS


12

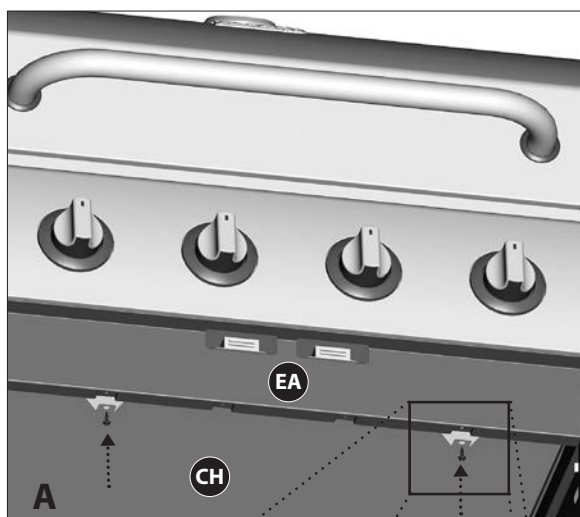


Front view

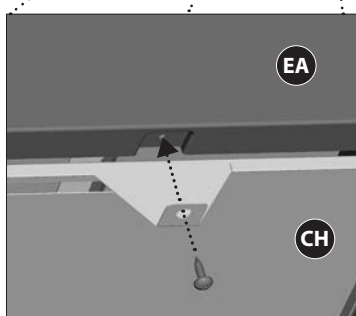

Close up

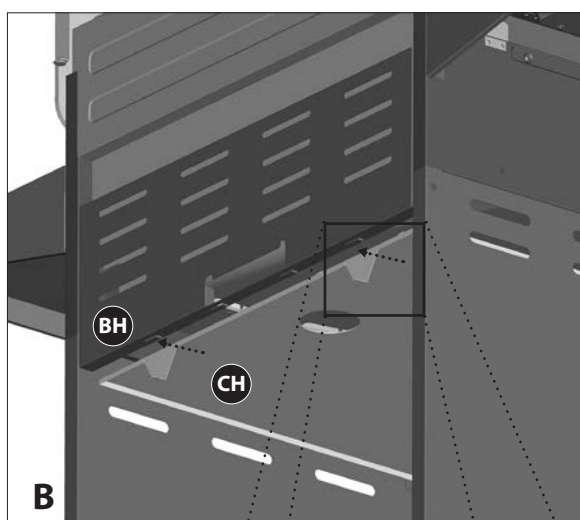


Back view

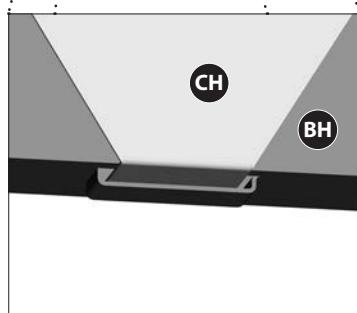

Close up


Assemble the Heat Shield (CH) to the bottom of the Door Support Rail (EA) and the Upper back panel (BH), as shown in figure A and B.

YOU WILL NEED:

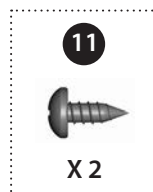


ASSEMBLY INSTRUCTIONS

13

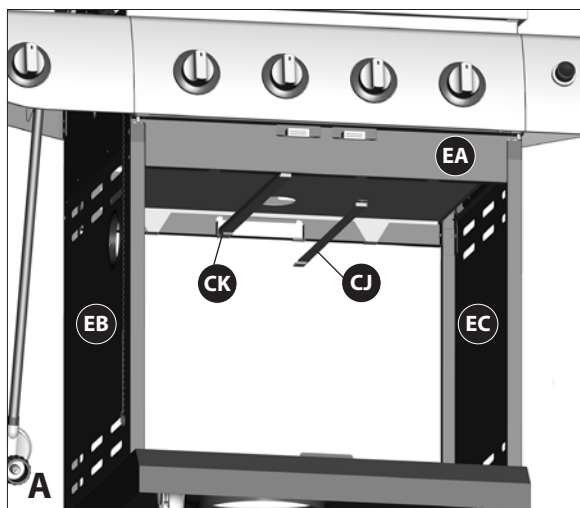


- a. Assemble the Right and Left Tracks (CJ and CK) for the Grease Tray (CI), as shown in figure A-C.


YOU WILL NEED:

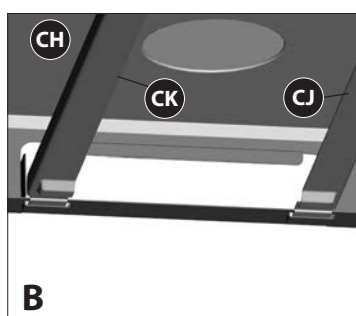

Close up, back

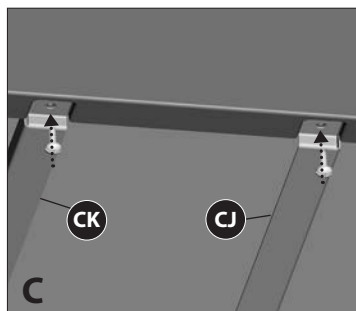

Close up, front

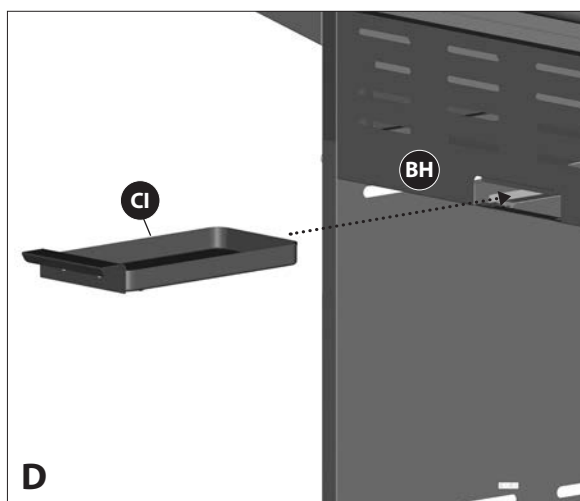


Back view

- b. Insert the Grease Tray (CI) into the opening of the Upper Back Panel (BH).

ASSEMBLY INSTRUCTIONS

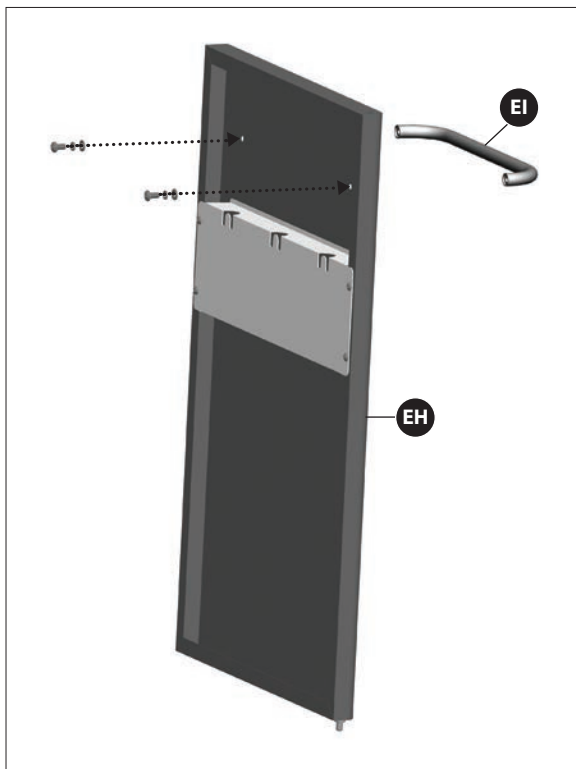


14



Assemble the Door Handle (EI) to the Left and Right Door Assembly (EG and EH).




Left door handle

YOU WILL NEED:

7	8	9
		
X 2	X 2	X 2


Right door handle

YOU WILL NEED:


7	8	9
		
X 2	X 2	X 2

ASSEMBLY INSTRUCTIONS


15

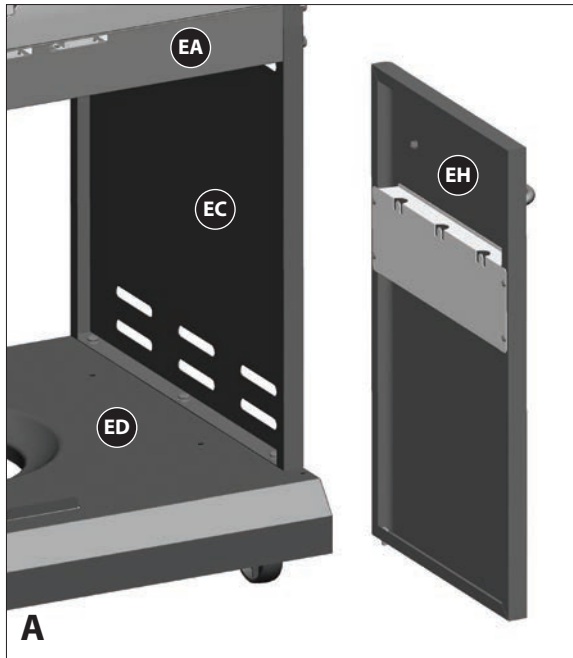

- a. Assemble the right door assembly (EH), to the bottom shelf (ED) by inserting the fixed pin (bottom of door) into the hole provided (figure B).

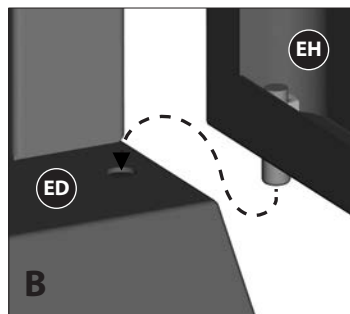

Close up, bottom of door

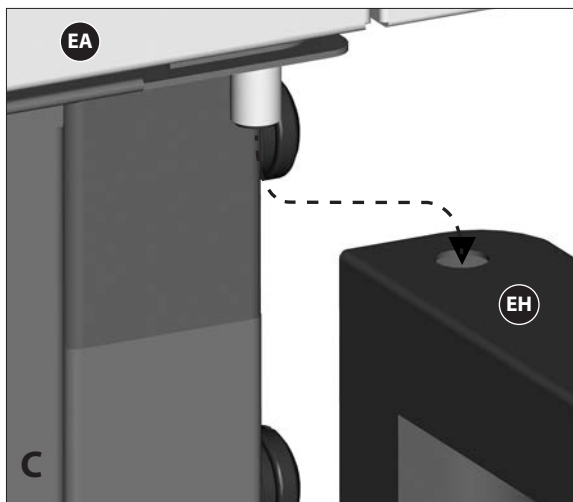

Close up, top of door


- b. Assemble the top of the door assembly (EH) to the door support rail (EA), by pressing in the door support pin and aligning with the hole located on the top right corner of the door (figure C).

TIP: Use a paint scraper to press-in the support pin, while the second person aligns the door. The support pin will lock into position when the door is assembled correctly.


- c. Repeat steps a, and b for the left door assembly (EG).

ASSEMBLY INSTRUCTIONS


16

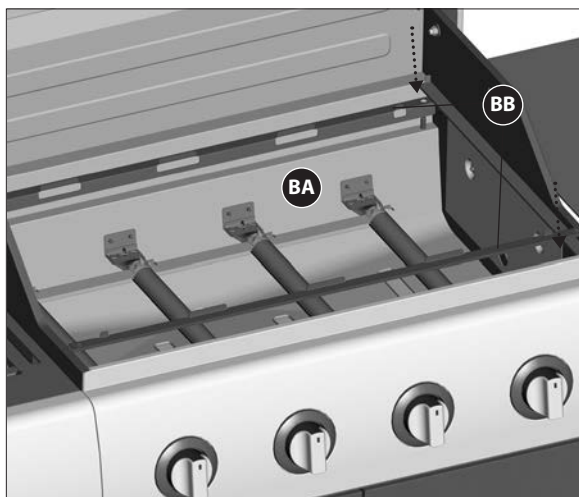

- a. Position the Flame Tamer support braces (BB) over the Burner Box support pins (BA) as shown.

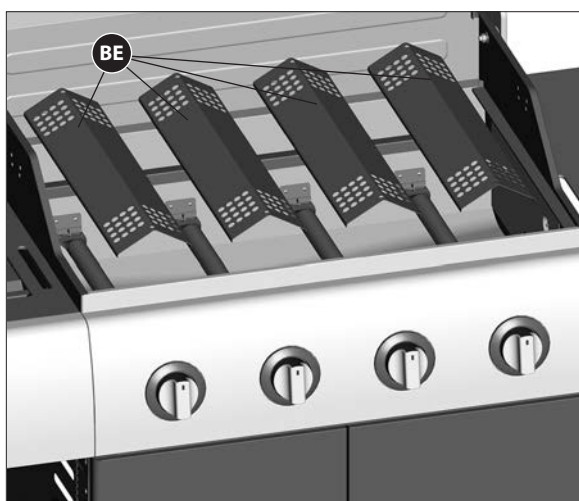


- b. Position the Flame Tamers (BE) into the Burner Box (BA).

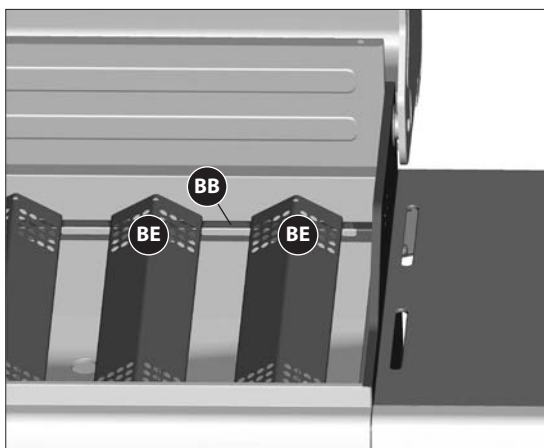

Close up


ASSEMBLY INSTRUCTIONS

17

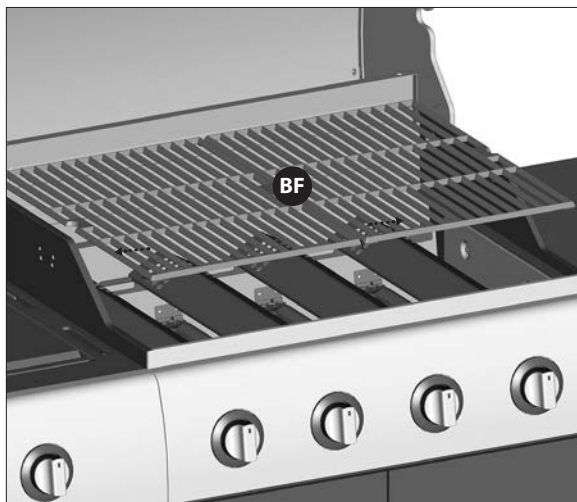

Place the cooking grates (BF) into the burner box (BA).



18

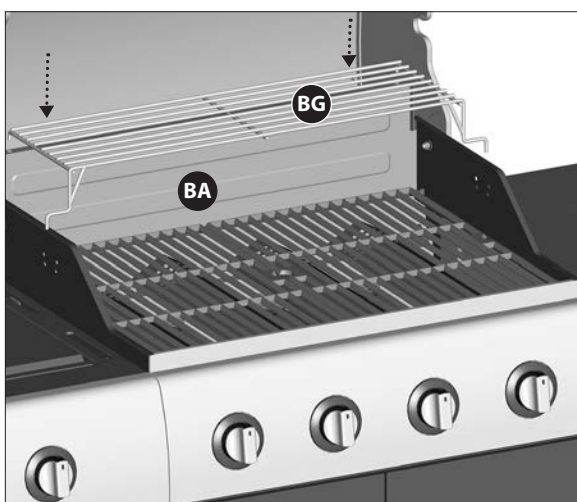

Insert the two small positioning rods of the warming rack (BG) into the rear panel of the burner box (BA).

ASSEMBLY INSTRUCTIONS

19

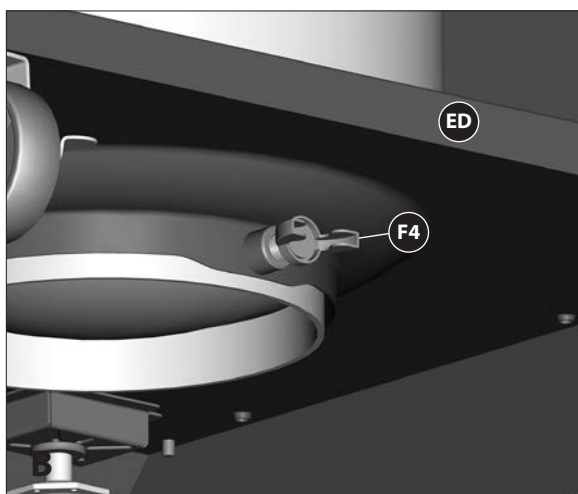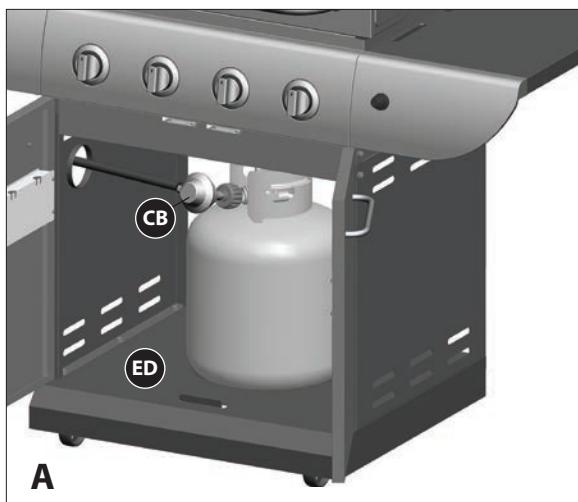

FOR PROPANE MODEL ONLY

FOR NATURAL GAS MODEL, FOLLOW STEP 19.

- Position the 20 lb propane tank onto the Bottom Shelf (ED), and secure using the bolt (already attached).
- Attach the Regulator coupling nut (CB) to the LP cylinder valve.

⚠ ATTENTION ⚠


FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBQ.

⚠ ATTENTION ⚠

DO NOT STORE EXTRA PROPANE TANKS WITHIN BBQ CART.

20

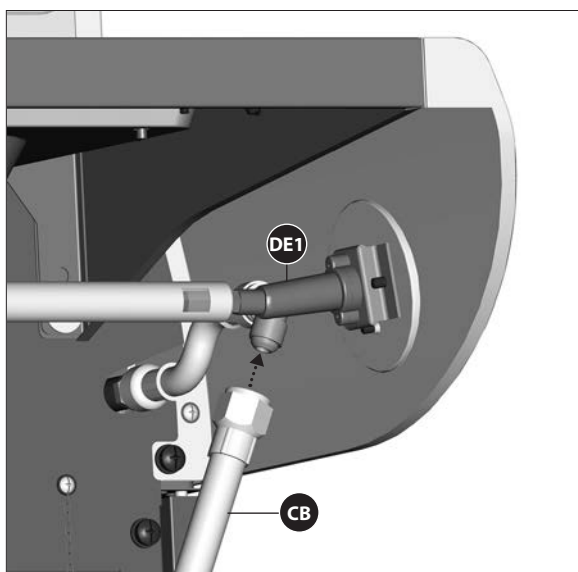

FOR NATURAL GAS MODEL ONLY

Attach the Natural Gas Hose (CB) to the Side Burner Valve (DE1) as shown.

⚠ ATTENTION ⚠

In order to complete installation of your Natural Gas BBQ a 1/2" or 3/8" adapter may be required to connect your BBQ's Natural Gas hose to your home gas supply. Contact your Natural Gas supplier to purchase the necessary part.

⚠ ATTENTION ⚠

FOR YOUR SAFETY, DO NOT ATTEMPT TO LIGHT THIS BBQ UNTIL YOU HAVE REVIEWED PAGES 4-8 OF THE MASTER CHEF® SAFETY & CARE MANUAL.

ALL SAFETY AND LEAK TESTS MUST BE PERFORMED BY THE END USER, PRIOR TO LIGHTING THIS BBQ.



Visit **www.masterchefbbqs.com**
to complete product registration

Master Chef® Customer Service
1-855-453-2150

Trileaf Distributions Trifeuil
Toronto, Ontario M4S 2B8